


Whirlpool WED7600XW0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WED7600XW0
(White)

27" ELECTRIC DRYER

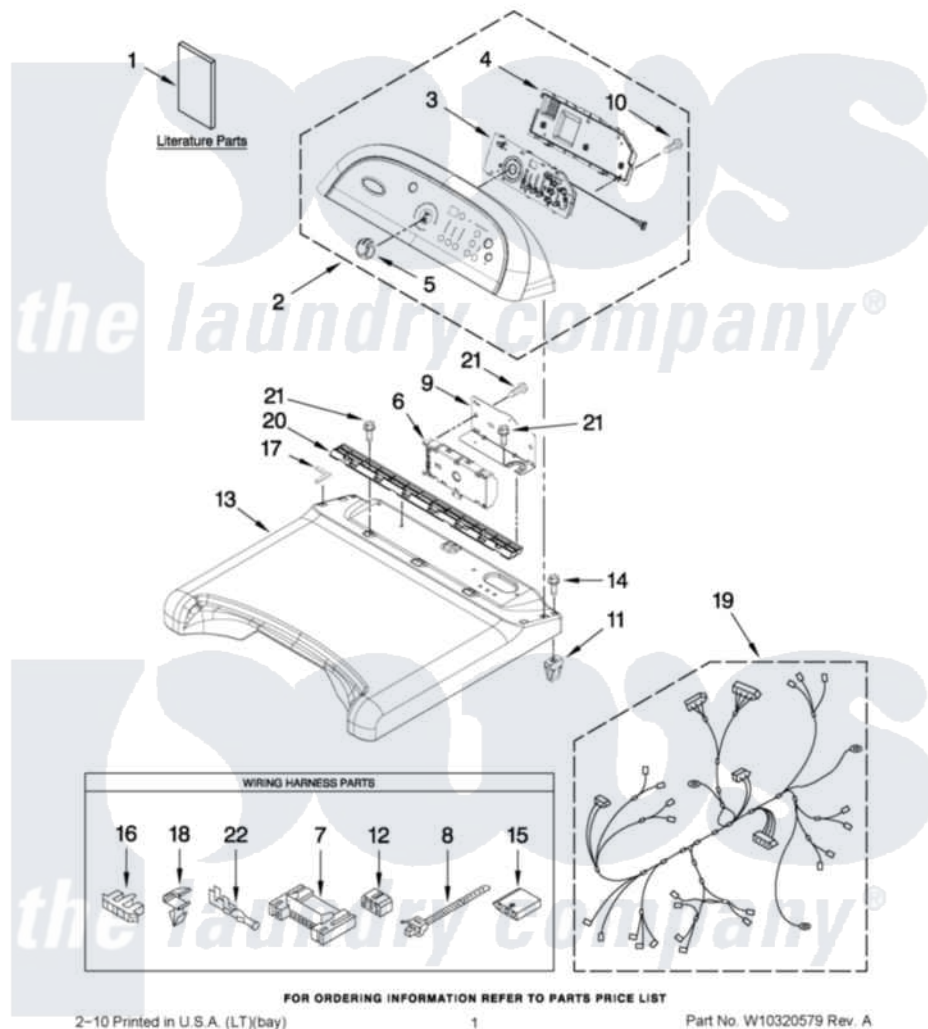

Whirlpool [Residential Whirlpool WED7600XW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10267633		Not Available	INSTALLATION, INSTRUCTION
"	W10301482		Not Available	TECH SHEET
2	W10298646			Console Assembly
3	W10298626			Assembly, User Interface
4	8564265			Cover, Rear- User Interface
5	W10211335			Knob, Assembly
6	W10294316			Control Electronic
7	3395683			Receptacle, Multi-Terminal
8	3391018			Tie Cable
9	W10211337			Bracket, Machine Controller
10	W10003770			Screw, 6-19 X 1/2
11	W10112673			Screw, Grommet
12	3347243			Block, Disconnect
13	W10211339			Top

14	W10131402		Screw, 8-18 X 1.370
15	3936144		Do-It-Yourself Repair Manuals
16	3397269		Connector, Timer
17	W10185554		Seal, Foam Top
18	3394427		Clip-Harness
19	W10319798		Harness, Electric
20	8558863		Bracket, Console
21	337686	Not Available	SCREW, 8-18 X .500
22	94614		Terminal

