


Whirlpool WED7800XB0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WED7800XW0, WED7800XB0, WED7800XL0
(White) (Black) (Lunar Silver)

27" ELECTRIC DRYER

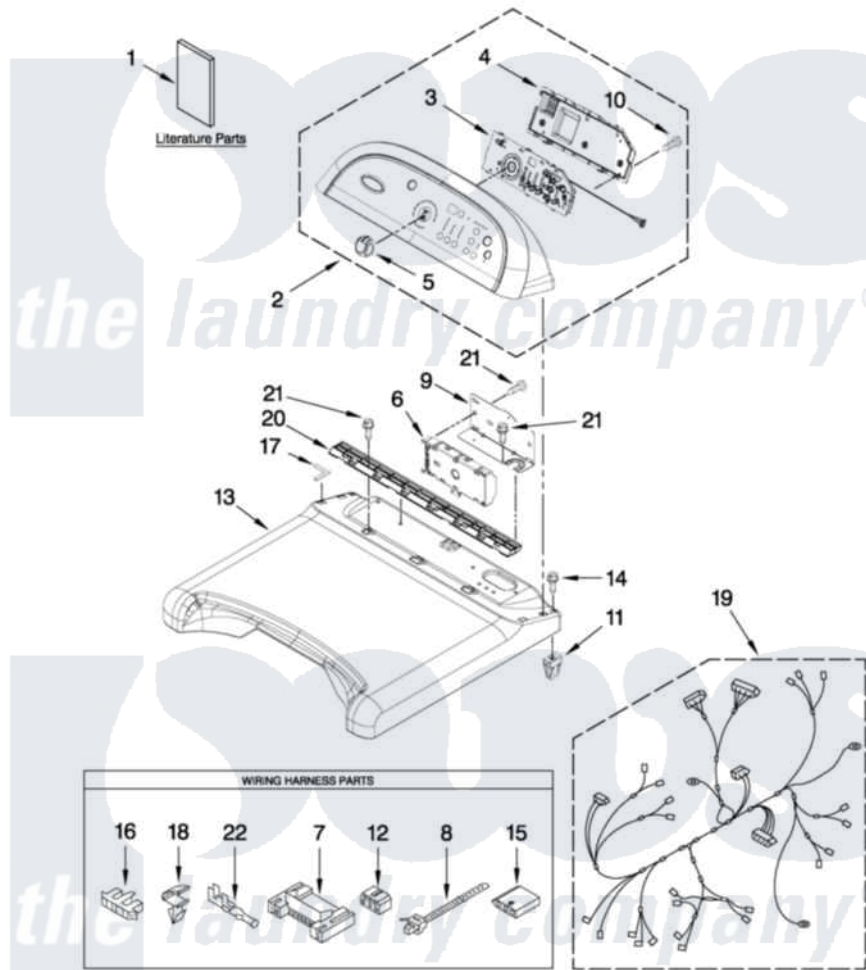

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3-10 Printed in U.S.A. (LT)(bay)

1

Part No. W10322108 Rev. A

Whirlpool [Residential Whirlpool WED7800XB0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10267633		Not Available	INSTALLATION, INSTRUCTION
"	W10301482		Not Available	TECH SHEET
2	W10298643			Console Assembly
"	W10298644			Console Assembly
"	W10298645			Console Assembly
3	W10298625			Assembly, User Interface
4	8564265			Cover, Rear- User Interface
5	W10211335			Knob, Assembly
6	W10294317			Control Electronic
7	3395683			Receptacle, Multi-Terminal
8	3391018			Tie Cable
9	W10211337			Bracket, Machine Controller
10	W10003770			Screw, 6-19 X 1/2
11	W10112673			Screw, Grommet

12	3347243		Block, Disconnect
13	W10211339		Top
"	W10211340		Top
"	W10211341		Top
14	W10131402		Screw, 8-18 X 1.370
15	3936144		Do-It-Yourself Repair Manuals
16	3397269		Connector, Timer
17	W10185554		Seal, Foam Top
18	3394427		Clip-Harness
19	W10319804		Harness, Electric
20	8558863		Bracket, Console
21	337686	Not Available	SCREW, 8-18 X .500
22	94614		Terminal

the laundry company[®]

the laundry company[®]

the laundry company[®]