


Whirlpool WED8200YW1 02 - CABINET PARTS

CABINET PARTS

For Model: WED8200YW1
(White)

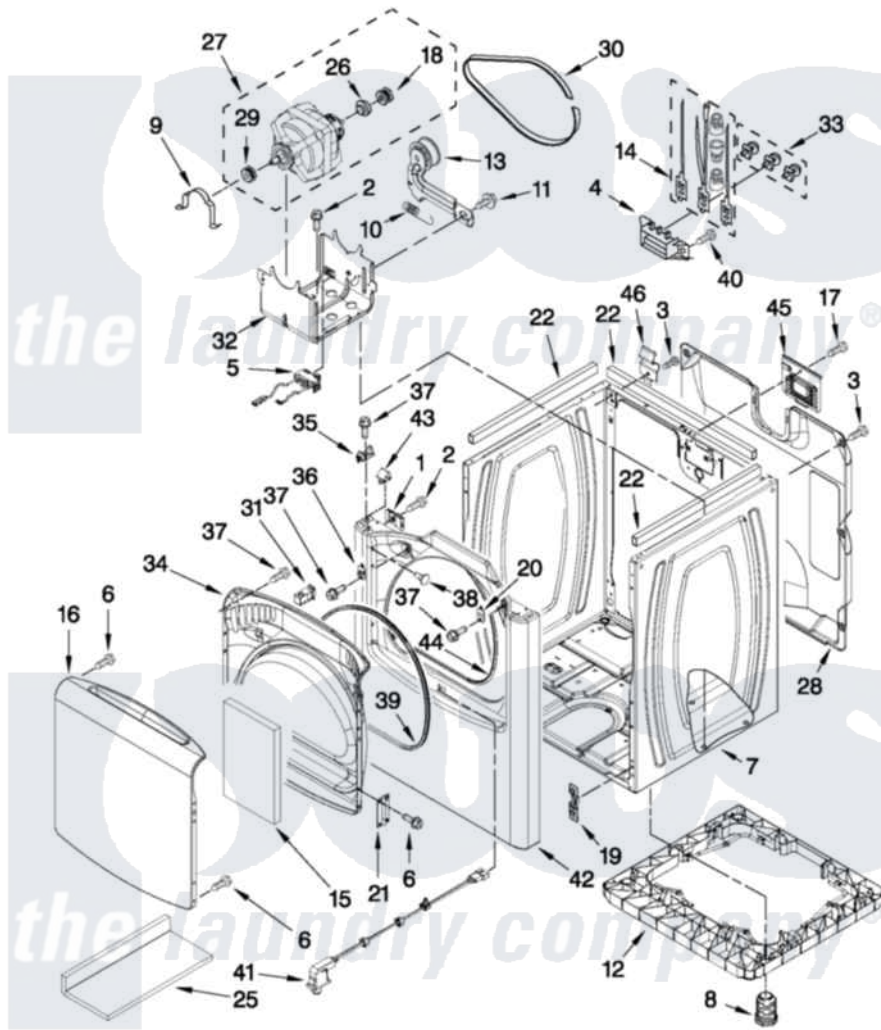

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10515753

3

Whirlpool [Residential Whirlpool WED8200YW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	98234			Clip, U-Bend
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	3397659			Block, Terminal
5	W10314253			Switch, Assembly Broken Belt
6	342055	488627		Screw
7	W10183827	W10223154		Cabinet
8	W10363894			Foot, Dryer
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	W10363887			Riser-Full
13	8547160			Pulley Assembly
14	279318			Terminal Tinned And Brass Panel

15	W10448737		Filler, Door
16	8571361		Door, Outer
17	8533974	4331106	Screw, No.10-32 X 7/16
18	8547171		Pulley,
19	3394083		Clip, Front Panel
20	W10111888		Plug, Strike
21	8565018		Assembly, Hinge And Pin
22	W10316529		Foam-Seal Cabinet
25	W10215725		Cover, Door Switch
26	3393657		Restrainer, Belt
27	W10396036	Not Available	MOTOR, ASSEMBLY 60 HZ.
28	8558830	Not Available	Panel, Rear
29	8544743		Pulley, Blower
30	8547157		Belt, Drive
31	W10111905		Assembly, Door Catch
32	8547158		Bracket, Motor
33	279393		Terminal Block Screw Kit
34	8571356		Door Inner
35	8568303		Locator, Snap Down
36	W10111906	W10295405	Strike
37	3400805		Screw, 8-18 X 3/64
38	W10144494		Plug-Hole
39	W10221653	W10239307	Seal-Door
40	3393008	308685	Side Trim)
41	W10350907		Door Switch Assembly
42	W10463261		Front Panel
43	8576625		Lock, Front Top
44	W10044490		Seal, Front Panel
45	W10110241		Cover, Terminal Block
46	238088	8066217	Hinge, Top

