


Whirlpool WED8300SW1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

27" Electric Dryer

For Model: WED8300SW1, WED8300SB1
(White) (Black)

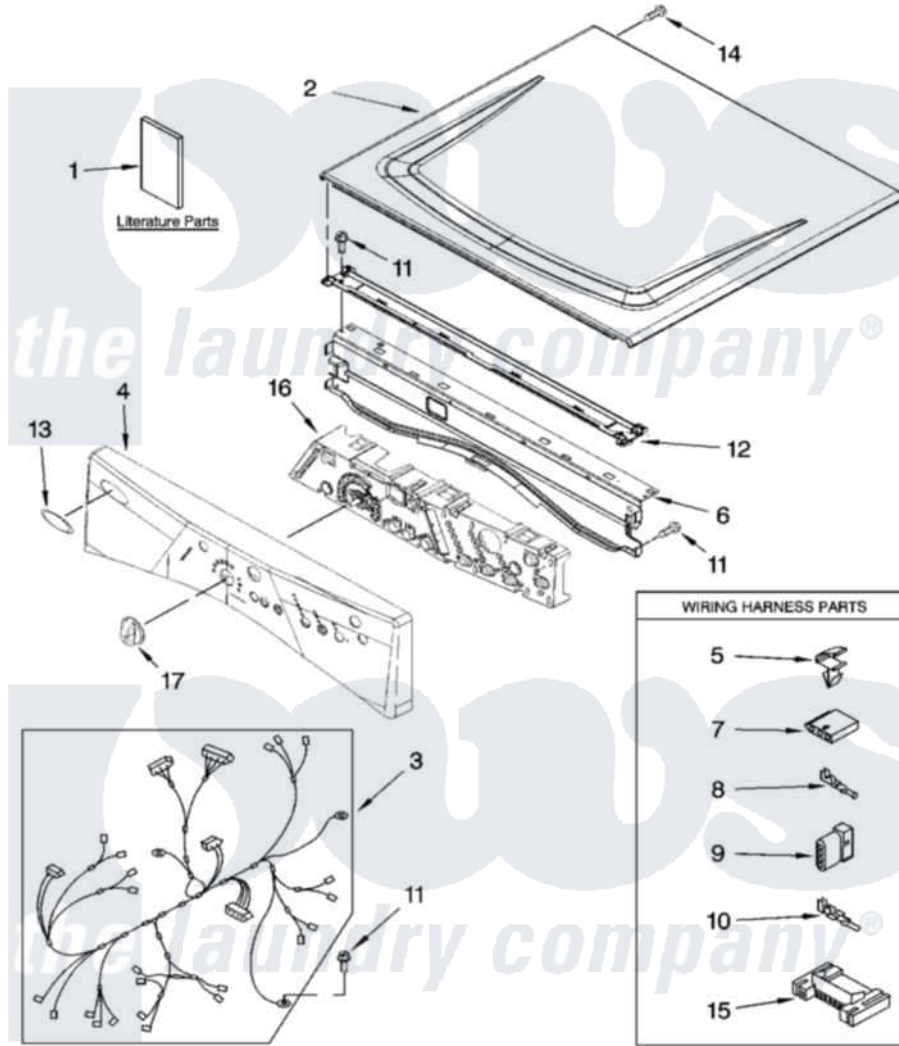

7-07 Printed in U.S.A. (LT)

1

Part No. W10158991 Rev. A

[Whirlpool Residential Whirlpool WED8300SW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578899		Not Available	Use & Care Guide
"	8572759		Not Available	Tech Sheet
"	8578904		Not Available	Guide, Quick Start
2	8563730	W10336080		Top
"	W10129703			Top
3	W10110972			Harness, Main
4	W10099598			Panel, Console
"	W10099631			Panel, Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	8574968			Screw, 10-16 X 1/2

13	W10117943	8303811	Badge, Assembly
14	3400238		Screw, 2-28 X 1/2
15	3395683		Receptacle, Multi-Terminal
16	8571955		Assembly, User Interface
17	8574963		Knob, Control
"	W10129067		Knob, Control

