


Whirlpool WED8300SW1 04 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

DOOR PARTS
For Model: WED8300SW1, WED8300SB1
(White) (Black)

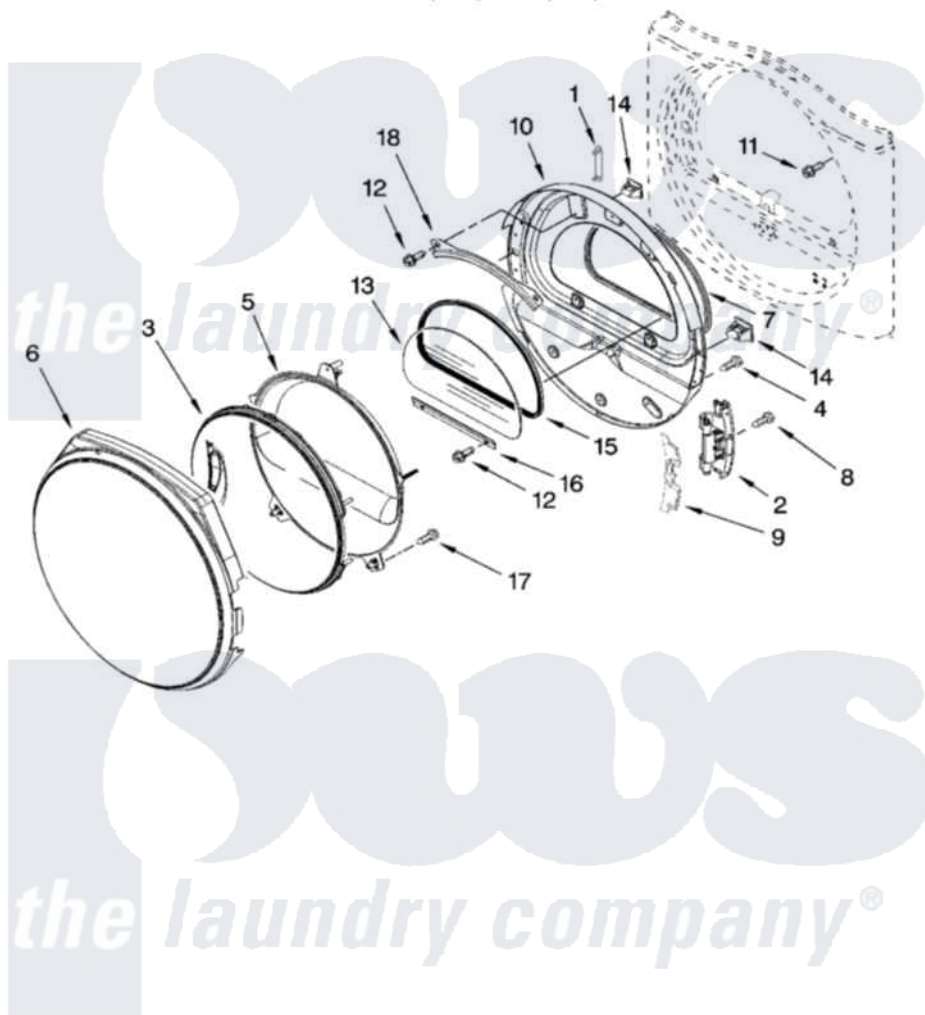

W10158991

7

Whirlpool [Residential Whirlpool WED8300SW1 Dryer Parts](#) Parts Diagram 04 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8565119			Label, Hinge Hole Cover
2	8578887			Door Hinge Assembly
3	W10044180			Door Intermediate Stationary
4	8534044			Screw, 8-18 X 1/2
5	W10108900			Door Intermediate Stationary
"	W10129704			Door Intermediate Stationary
6	8571836			Door Ring
"	W10129706			Door Ring
7	BLANK		Not Available	Door Seal (Not Serviceable)
8	W10017850	280203		Screw-Kit
9	8571839			Cover, Hinge
"	W10129722			Cover, Hinge
10	8578933	W10164062		Door Assembly
11	355515			Screw, 8-18 X 11/16
12	3393258	3373329D		Screw

13	8565117	W10286878	Window
14	690081	279570	Latch
15	8579663		Seal, Window
16	8519354		Retainer-Window
17	8534022		Screw, 8-18 X 1/16
18	8519356		Retainer-Window
	72017		Paint, Touch-Up
"	72302	Not Available	PAINT, TOUCH-UP (1/2oz.) (Black)
"	350930		Paint, Pressurized Spray B
"	786020	Not Available	PAINT, PRESSURIZED SPRAY (12 oz.) (Black)
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	786302	Not Available	PAINT, BULK (1 qt.) (Black (Uncut))
"	BLANK	Not Available	ACCESSORY PARTS
"	8529894	346764	Kit, Hold Down
"	8522199		Accessory Parts
"	80047		PAINT, BULK (1 QT.) (KIT, DRYER REPAIR)
"	8563738	W10121663	Dryer Rack

