


Whirlpool WED8410SW2 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: WED8410SW2
(White/Grey)

27" ELECTRIC DRYER

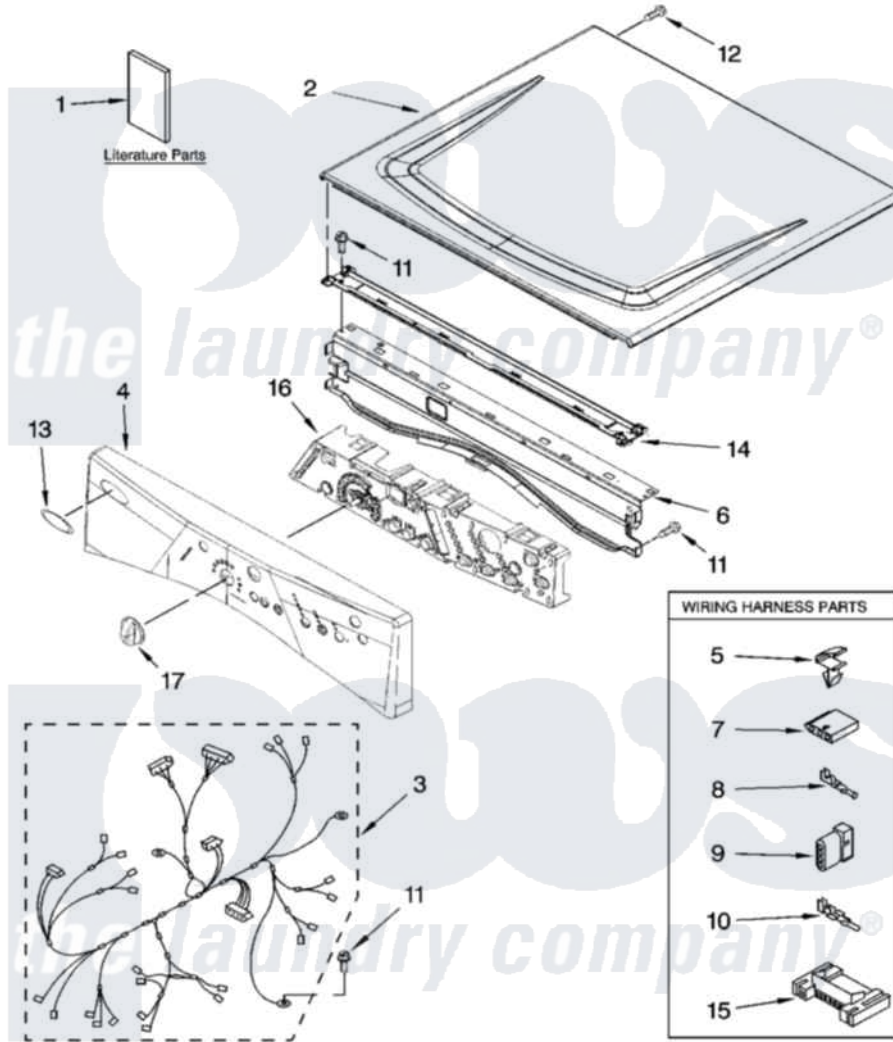

11-07 Printed in U.S.A. (LT)

1

Part No. W10176677 Rev. A

Whirlpool Residential Whirlpool WED8410SW2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10057250		Not Available	Use & Care Guide
"	W10068660		Not Available	Tech Sheet
"	W10057240		Not Available	Guide, Quick Start
2	8563730	W10336080		Top
3	W10110972			Harness, Main
4	W10099600			Panel, Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	3400238			Screw, 2-28 X 1/2
13	W10117943	8303811		Badge, Assembly
14	8574968			Screw, 10-16 X 1/2

