


# Whirlpool WED9200SQ1 02 - CABINET PARTS

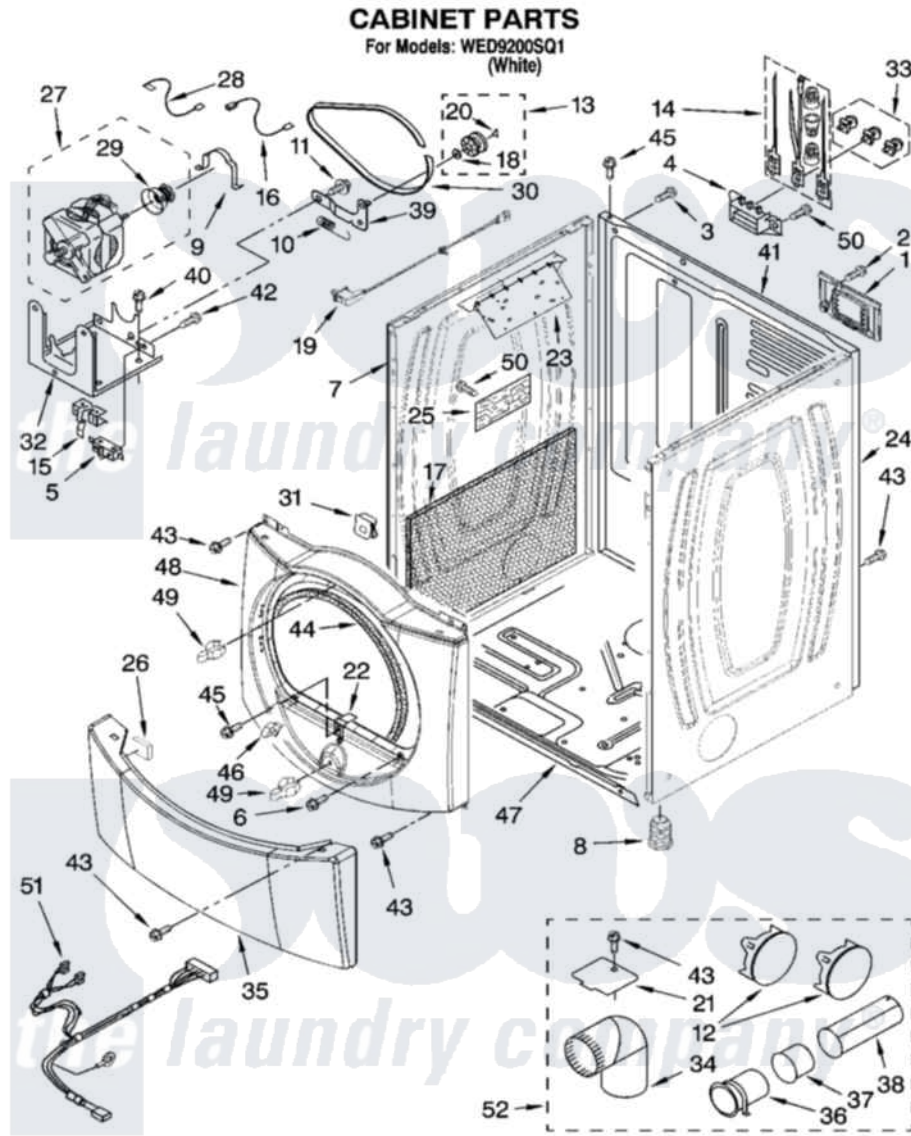

W10194580

3

Whirlpool [Residential Whirlpool WED9200SQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8576583	<a href="#">W10119283</a>		Cover, Terminal Block
2	3390814	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
4	<a href="#">3397659</a>			Block, Terminal
5	3394881	<a href="#">279782</a>		Switch-Lid
6	3357011	<a href="#">308685</a>		Side Trim )
7	<a href="#">W10192435</a>			Panel, Side
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>		Dryer Exhaust Kit
13	3388672	<a href="#">279640</a>		Pulley-ldr
14	<a href="#">279218</a>			Terminal Tinned And Brass

14	<a href="#">279910</a>		Panel
15	<a href="#">8066120</a>		Lever, Door Switch
16	<a href="#">W10167612</a>		Wire, Broken Belt Switch
17	W10128772	<a href="#">8564134</a>	Board, Sound Dampening
18	<a href="#">W10121334</a>		Washer, Thrust
19	W10128087	<a href="#">W10318609</a>	Switch, Assembly Door
20	<a href="#">690997</a>		Washer, Thrust
21	8066115	<a href="#">3394331</a>	Plate Cover
22	<a href="#">8529053</a>		Ramp, Door Door Switch
23	<a href="#">8563727</a>		Bracket, Control
24	<a href="#">W10192446</a>		Panel, Side
25	W10182366	<a href="#">W10174745</a>	Board, Control
26	<a href="#">3389682</a>		Space-Toe Panel User-Interface
27	8538263	<a href="#">279787</a>	Motor-Drive
28	<a href="#">3398948</a>		Wire, Jumper
29	<a href="#">8578220</a>		Pulley, Motor
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">62825</a>		Clip-S Type Control Board
32	<a href="#">3387118</a>		Bracket, Motor
33	<a href="#">279393</a>		Terminal Block Screw Kit
34	<a href="#">49026</a>		4" - 90° Elbow
35	W10116271	<a href="#">W10246269</a>	Panel, Toe
36	<a href="#">8563747</a>		Exhaust Pipe Medium Pipe
37	<a href="#">8563750</a>		Exhaust Pipe
38	<a href="#">8563749</a>		Exhaust Pipe
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
41	W10180481	<a href="#">280036</a>	Panel-Rear
42	<a href="#">98129</a>		Screw, 6-20 X 1 1/16
43	3390647	<a href="#">488729</a>	Screw
44	<a href="#">3387242</a>		Seal, Front Panel
45	3393008	<a href="#">308685</a>	Side Trim )
46	<a href="#">8519459</a>		Clip, Toe Panel
47	<a href="#">8519207</a>		Base, Cabinet
48	<a href="#">W10180423</a>		Front Panel
49	696144	<a href="#">279570</a>	Latch
50	<a href="#">90767</a>		Screw, 8A X 3/8 Hex Washer Head Tapping
51	<a href="#">W10181463</a>		Harness, Digital Interface
"	BLANK	Not Available	Optional Parts Not Included
52	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit

*the laundry company*<sup>®</sup>