


Whirlpool WED9270XR0 01 - TOP AND CONSOLE PARTS

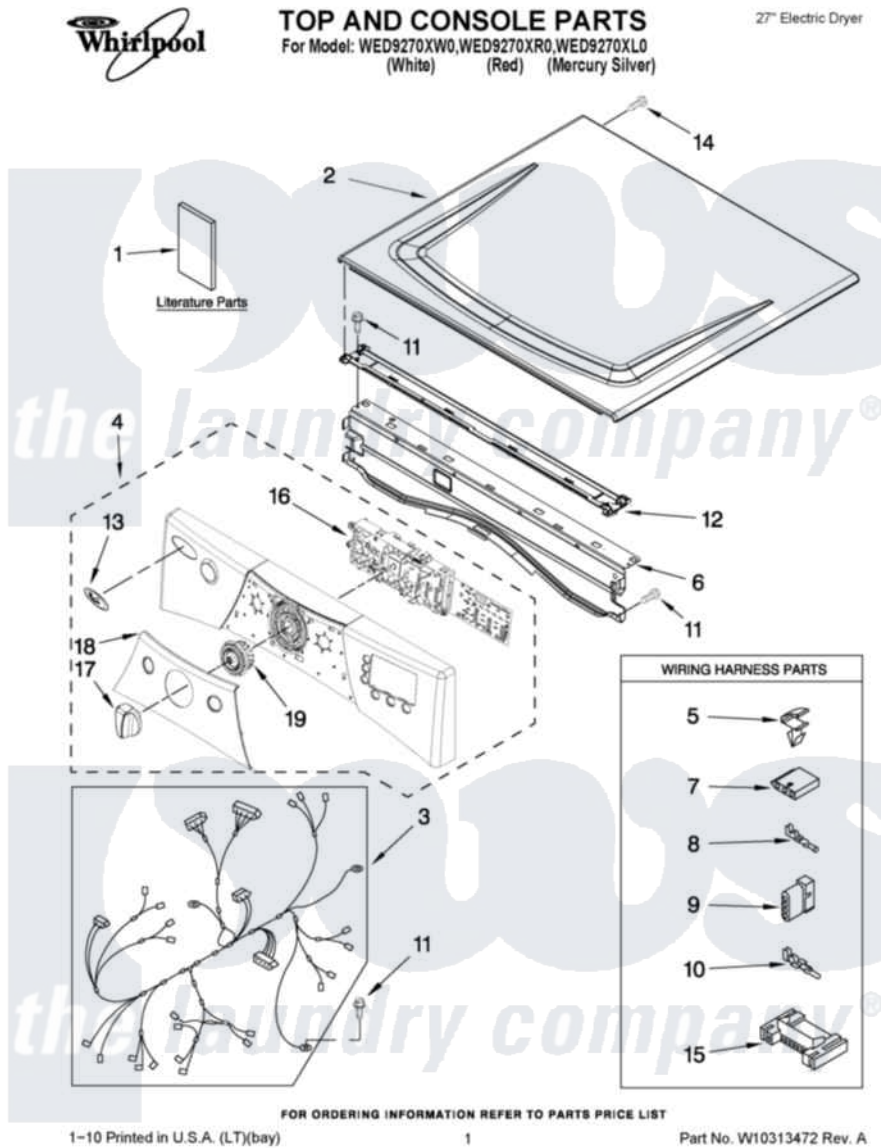

Whirlpool Residential Whirlpool WED9270XR0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|---------------------------|---------------|-------------------------------|
| 1 | W10293937 | | Not Available | USE & CARE GUIDE |
| " | W10294023 | | Not Available | TECH SHEET |
| " | W10240579 | | Not Available | INSTALLATION,INSTRUCTION |
| 2 | 8563730 | W10336080 | | Top |
| " | W10251212 | W10336090 | | Top |
| " | W10251213 | | | Top |
| 3 | W10278759 | | | Harness, Main |
| 4 | W10215462 | | | Panel, Console |
| " | W10215463 | | | Panel, Console |
| " | W10215464 | | | Panel, Console |
| 5 | 3394427 | | | Clip-Harness |
| 6 | 8565237 | | | Bracket, Console |
| 7 | 353424 | | | Plug, Terminal |
| 8 | 94614 | | | Terminal |
| 9 | 3936144 | | | Do-It-Yourself Repair Manuals |
| 10 | 94613 | 596797 | | Terminal |

| | | | |
|----|---------------------------|---------------------------|----------------------------|
| 11 | 3390647 | 488729 | Screw |
| 12 | W10266747 | | Channel-Water, Dryer |
| 13 | W10117943 | 8303811 | Badge, Assembly |
| 14 | 3400238 | | Screw, 2-28 X 1/2 |
| 15 | 3395683 | | Receptacle, Multi-Terminal |
| 16 | W10215460 | W10418068 | Control-Elec |
| 17 | W10215781 | | Knob Assembly |
| " | W10247262 | | Knob Assembly |
| 18 | W10215470 | | Cover, Center |
| " | W10215469 | | Cover, Center |
| " | W10215468 | | Cover, Center |
| 19 | W10237301 | | Cycle, Light Guide |

the laundry company[®]

the laundry company[®]

the laundry company[®]