


Whirlpool WED9270XR1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: WED9270XW1, WED9270XR1, WED9270XL1
(White) (Red) (Mercury Silver)

27" ELECTRIC DRYER

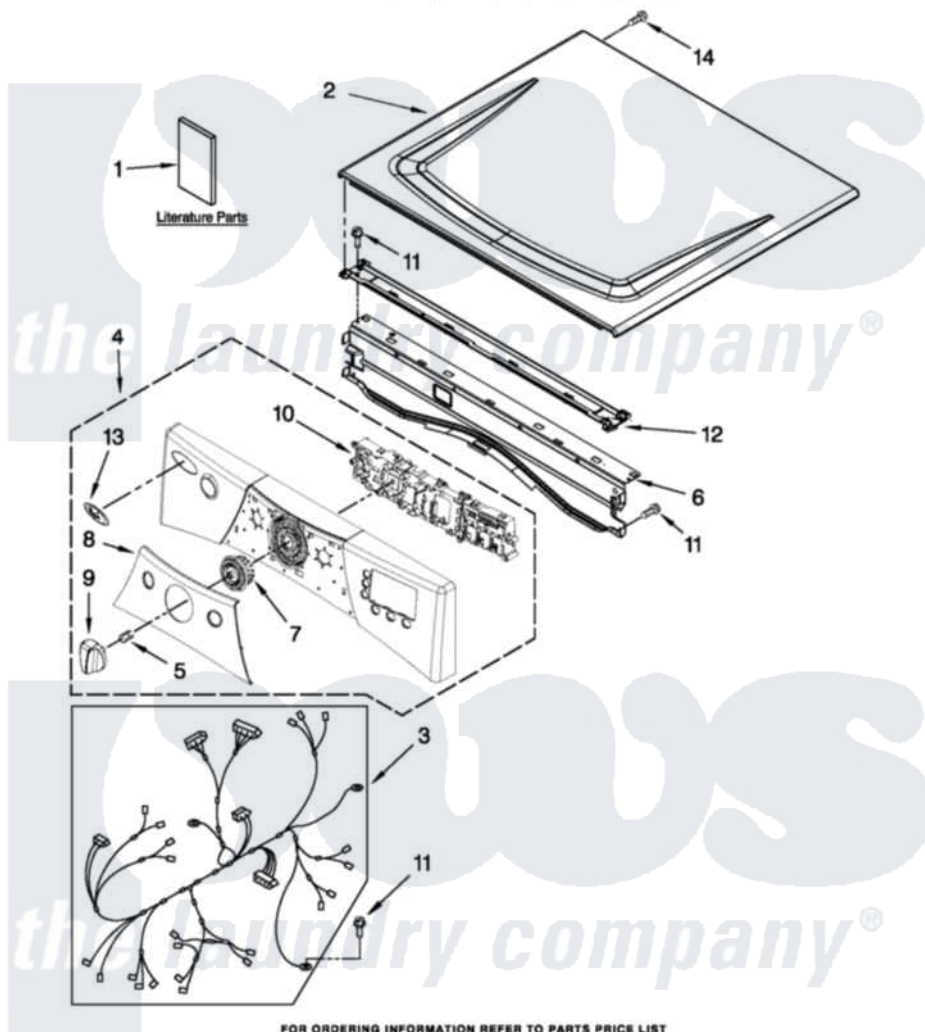

12-11 Printed in U.S.A. (LT)(psw)

1

Part No. W10341814 Rev. A

[Whirlpool Residential Whirlpool WED9270XR1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10294023		Not Available	TECH SHEET
"	W10240579		Not Available	INSTALLATION,INSTRUCTION
2	8563730	W10336080		Top
"	W10251212	W10336090		Top
"	W10251213			Top
3	W10278759			Harness, Main
4	W10215480	W10215462		Panel, Console
"	W10215482	W10215463		Panel, Console
"	W10215481	W10215464		Panel, Console
5	W10153920			Spring, Knob
6	8565237			Bracket, Console
7	W10237301			Cycle, Light Guide
8	W10215470			Cover, Center
"	W10215469			Cover, Center
"	W10215468			Cover, Center

9	W10215781		Knob Assembly
"	W10247262		Knob Assembly
10	W10215476	W10418068	Control-Elec
11	3390647	488729	Screw
12	W10266747		Channel-Water, Dryer
13	W10117943	8303811	Badge, Assembly
14	3400238		Screw, 2-28 X 1/2

