


Whirlpool WED9270XR2 01 - TOP AND CONSOLE PARTS

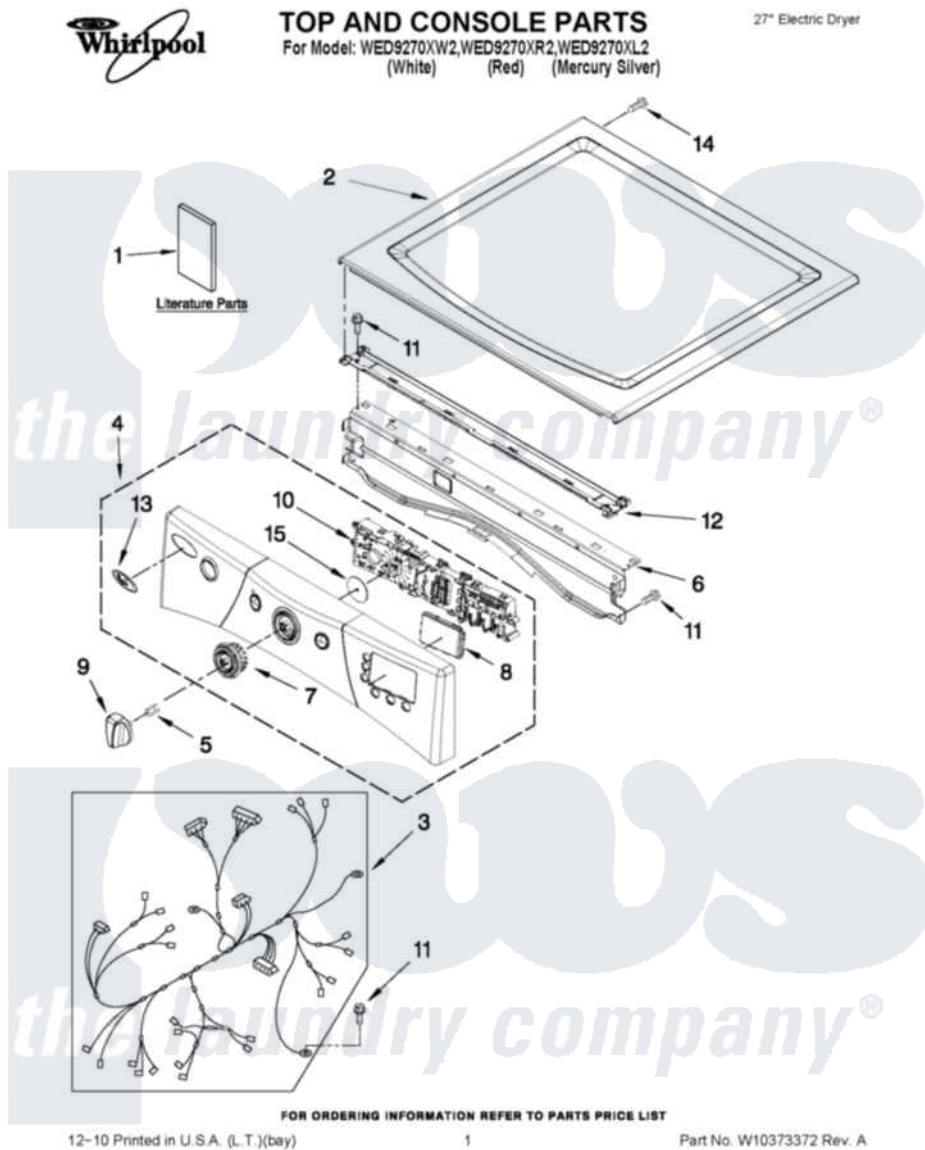

Whirlpool Residential Whirlpool WED9270XR2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10340328		Not Available	TECH SHEET
"	W10240579		Not Available	INSTALLATION,INSTRUCTION
2	W10336080			Top
"	W10336090			Top
"	W10336091			Top
3	W10278759			Harness, Main
4	W10329850	W10215462		Panel, Console
"	W10329852	W10215463		Panel, Console
"	W10329851	W10215464		Panel, Console
5	W10153920			Spring, Knob
6	8565237			Bracket, Console
7	W10237301			Cycle, Light Guide
8	W10212742			Window, Led Display
9	W10215781			Knob Assembly
"	W10247262			Knob Assembly

10	W10215475		Assembly, User Interface
11	3390647	488729	Screw
12	W10266747		Channel-Water, Dryer
13	W10117943	8303811	Badge, Assembly
14	3400238		Screw, 2-28 X 1/2
15	8572039		Seal, User Interface

