


Whirlpool WED9400SB0 01 - TOP AND CONSOLE PARTS

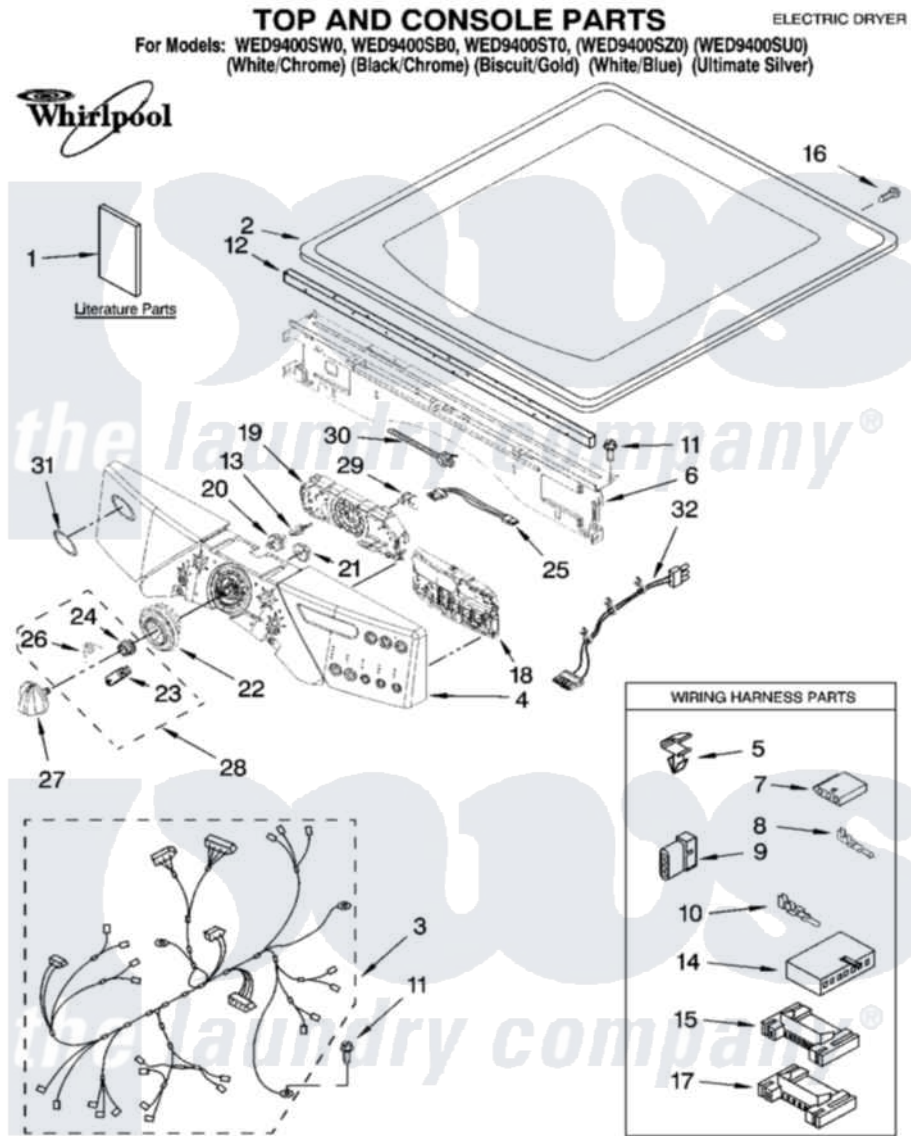

Whirlpool [Residential Whirlpool WED9400SB0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10110850		Not Available	Use & Care Guide
"	W10110638		Not Available	Tech Sheet
"	W10111226		Not Available	Guide, Quick Start
2	8565021			Top
"	8579997	W10192490		Top
"	8519252	3979307		Top
"	W10114785			Top
3	8579739			Harness, Main
4	W10116695			Panel, Console
"	W10116698			Panel, Console
"	W10116696			Panel, Console
"	W10116699			Panel, Console
"	W10116697			Panel, Console
5	3394427			Clip-Harness
6	W10006840	W10215656		Bracket, Console
7	353424			Plug, Terminal

8	94614		Terminal
9	3936144		Do-It-Yourself Repair Manuals
10	94613	596797	Terminal
11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	8281225		Screw, 8-18 X 1/2
17	2203186		Connector, 5-Circuit
18	W10031430	W10294629	Kit
19	W10121375		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10095960		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10116702		Knob, Control
"	W10116705		Knob, Control
"	W10116703		Knob, Control
"	W10116706		Knob, Control
"	W10116704		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10112268		Clip-Harness
30	3391018		Tie Cable
31	W10117943	8303811	Badge, Assembly
32	W10110976		Cube, Cable

