


Whirlpool WED9400SB1 01 - TOP AND CONSOLE PARTS

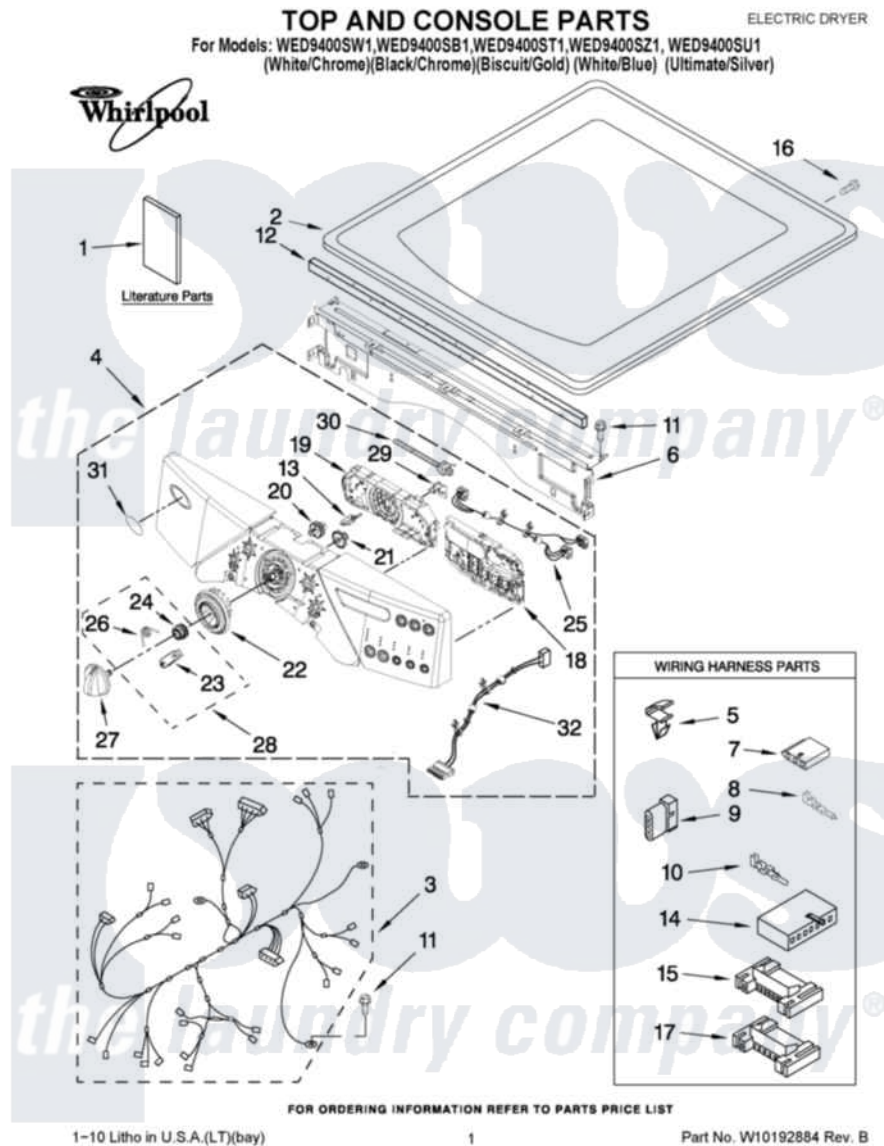

Whirlpool [Residential Whirlpool WED9400SB1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10224575		Not Available	USE & CARE GUIDE
"	W10198666		Not Available	TECH SHEET
"	W10224585		Not Available	INSTALLATION, INSTRUCTION
2	3980634	W10117263		Top
"	W10192490			Top
"	W10194044			Top
"	W10114785			Top
3	W10111012			Harness, Main
4	W10177295			Panel, Console
"	W10177298			Panel, Console
"	W10177296			Panel, Console
"	W10177299			Panel, Console
"	W10177297			Panel, Console
5	3394427			Clip-Harness
6	W10215656			Bracket, Console
7	353424			Plug, Terminal

8	94614		Terminal
9	3936144		Do-It-Yourself Repair Manuals
10	94613	596797	Terminal
11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	98139	303776	Screw
17	2203186		Connector, 5-Circuit
18	W10172214	W10294631	Kit
19	W10121375		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10095960		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10116702		Knob, Control
"	W10116705		Knob, Control
"	W10116703		Knob, Control
"	W10116706		Knob, Control
"	W10116704		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10112268		Clip-Harness
30	3391018		Tie Cable
31	W10117943	8303811	Badge, Assembly
32	W10111020		Power Cable, User-Interface

