


# Whirlpool WED9450WL1 01 - TOP AND CONSOLE PARTS

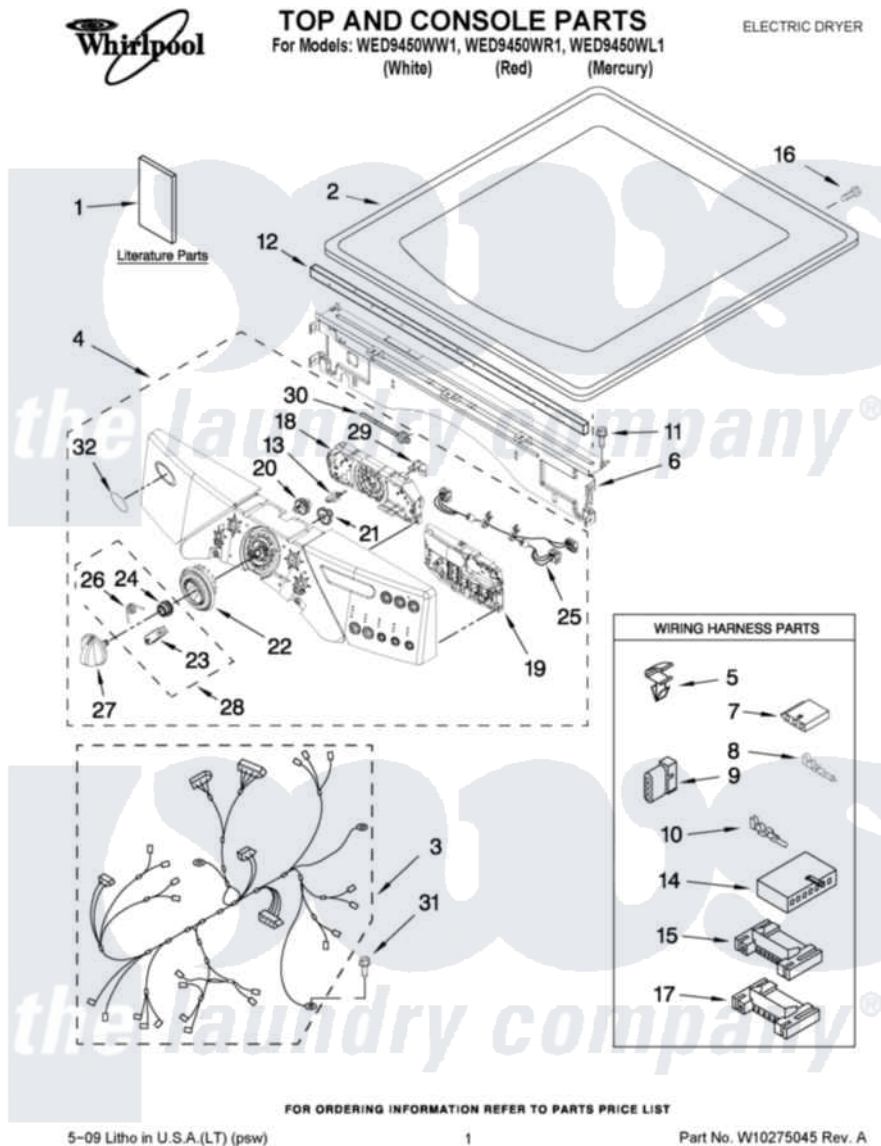

Whirlpool Residential Whirlpool WED9450WL1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">W10244607</a>			Use And Care Guide
"	W10258368		Not Available	TECH SHEET
"	W10255468		Not Available	INSTALLATION, DIAGNOSTIC GUIDE
2	3980634	<a href="#">W10117263</a>		Top
"	<a href="#">W10249738</a>			Toe Panel
"	<a href="#">W10249739</a>			Top
3	<a href="#">W10111063</a>			Harness, Main
4	<a href="#">W10255226</a>			Panel, Console
"	<a href="#">W10255228</a>			Panel, Console
"	<a href="#">W10255227</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">W10215656</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal

11	3390647	<a href="#">488729</a>	Screw
12	<a href="#">W10112267</a>		Foam-Seal Control Bracket
13	W10030070	<a href="#">W10012480</a>	Kit
14	<a href="#">3936150</a>		Connector, 7-Circuit
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	98139	<a href="#">303776</a>	Screw
17	<a href="#">2203186</a>		Connector, 5-Circuit
18	<a href="#">W10121375</a>		User Interface
19	W10255235	<a href="#">W10294635</a>	Kit
20	<a href="#">W10012430</a>		Encoder, Wheel Kit.
21	<a href="#">W10012440</a>		Retainer-Snap
22	<a href="#">W10250089</a>		Knob, Light Ring
23	W10012810	<a href="#">280230</a>	Encoder, Wheel Kit.
24	W10012450	<a href="#">280230</a>	Encoder, Wheel Kit.
25	<a href="#">W10242906</a>		Harness, Communication
26	W10012820	<a href="#">280230</a>	Encoder, Wheel Kit.
27	<a href="#">W10190685</a>		Knob, Control
28	<a href="#">280230</a>		Encoder, Wheel Kit.
29	<a href="#">W10112268</a>		Clip-Harness
30	<a href="#">3391018</a>		Tie Cable
31	<a href="#">693995</a>		Screw, Hex Head
32	W10117943	<a href="#">8303811</a>	Badge, Assembly

