


Whirlpool WED9450WW1 01 - TOP AND CONSOLE PARTS

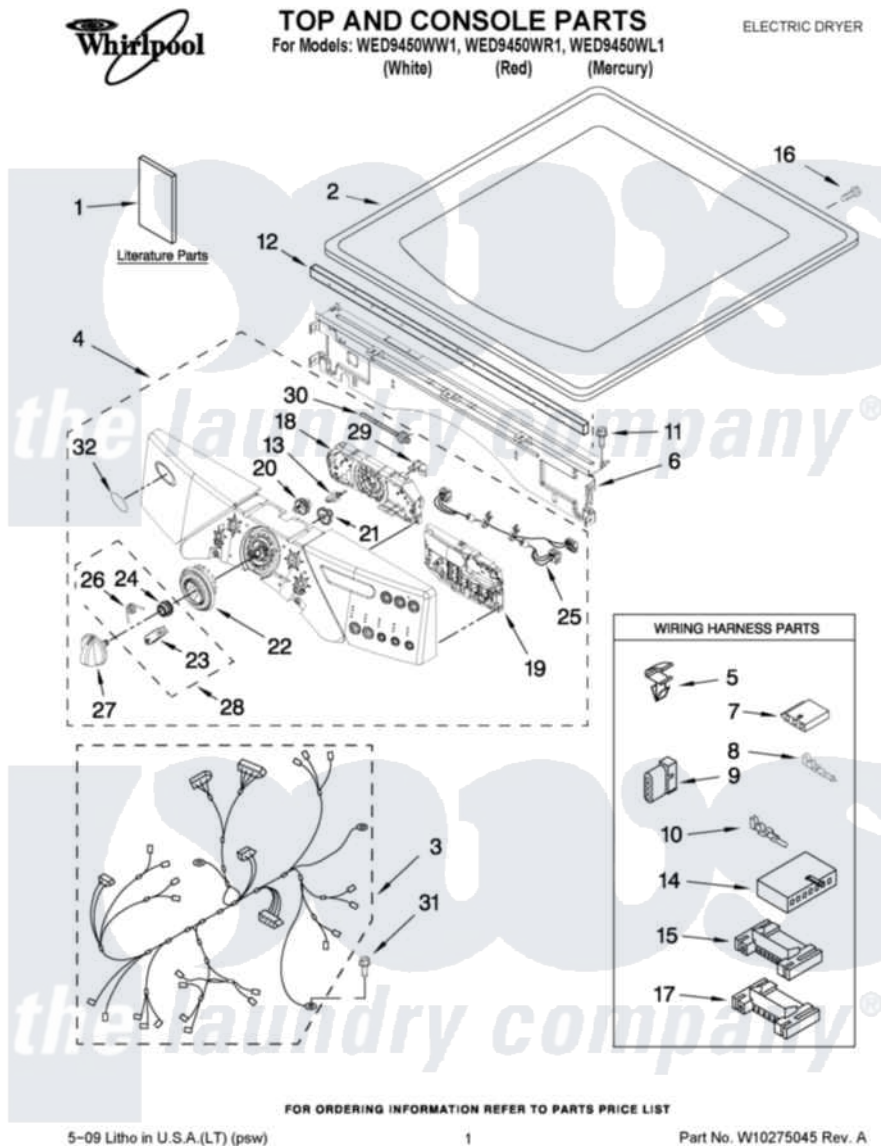

Whirlpool Residential Whirlpool WED9450WW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10244607			Use And Care Guide
"	W10258368		Not Available	TECH SHEET
"	W10255468		Not Available	INSTALLATION, DIAGNOSTIC GUIDE
2	3980634	W10117263		Top
"	W10249738			Toe Panel
"	W10249739			Top
3	W10111063			Harness, Main
4	W10255226			Panel, Console
"	W10255228			Panel, Console
"	W10255227			Panel, Console
5	3394427			Clip-Harness
6	W10215656			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal

11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	98139	303776	Screw
17	2203186		Connector, 5-Circuit
18	W10121375		User Interface
19	W10255235	W10294635	Kit
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10250089		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012450	280230	Encoder, Wheel Kit.
25	W10242906		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10190685		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10112268		Clip-Harness
30	3391018		Tie Cable
31	693995		Screw, Hex Head
32	W10117943	8303811	Badge, Assembly

