



[Whirlpool Residential Whirlpool WED9470WL1 Dryer Parts Parts Diagram 05 - OPTIONAL PARTS \(NOT INCLUDED\)](#)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
NI	<a href="#">72017</a>			Paint, Touch-Up
"	<a href="#">W10218247</a>			Paint, Pressurized Spray
"	<a href="#">W10268217</a>			Paint, Touch-Up
"	<a href="#">W10218245</a>			Paint, Touch-Up
"	<a href="#">350930</a>			Paint, Pressurized Spray B
"	<a href="#">350938</a>			Paint, Pressurized Spray B
"	<a href="#">799344</a>			Paint, Touch-Up )
"	8529894	<a href="#">346764</a>		Kit, Hold Down
"	<a href="#">8541503</a>			Kit, Stack Assembly
"	8579666A	<a href="#">W10466829</a>		Blade
"	80047			PAINT, BULK (1 QT.) (KIT, DRYER REPAIR)
"	8521957	<a href="#">W10121663</a>		Dryer Rack
"	W10206708	<a href="#">W10044609A</a>		Hose-Kit
"	<a href="#">89503</a>			Hose-Inlet
"	350027	<a href="#">49583</a>		Hose-Fill
				Washer Inlet-Hose

"	W10242307	<a href="#">16123</a>	Miscellaneous Parts Must be Ordered Separately.
"	W10044604	<a href="#">49586</a>	Mixer
"	<a href="#">PT220L</a>		Accessory Parts
"	<a href="#">PT400L</a>		Accessory Parts
"	<a href="#">PT600L</a>		Accessory Parts

