


Whirlpool WED9470WW2 01 - TOP AND CONSOLE PARTS

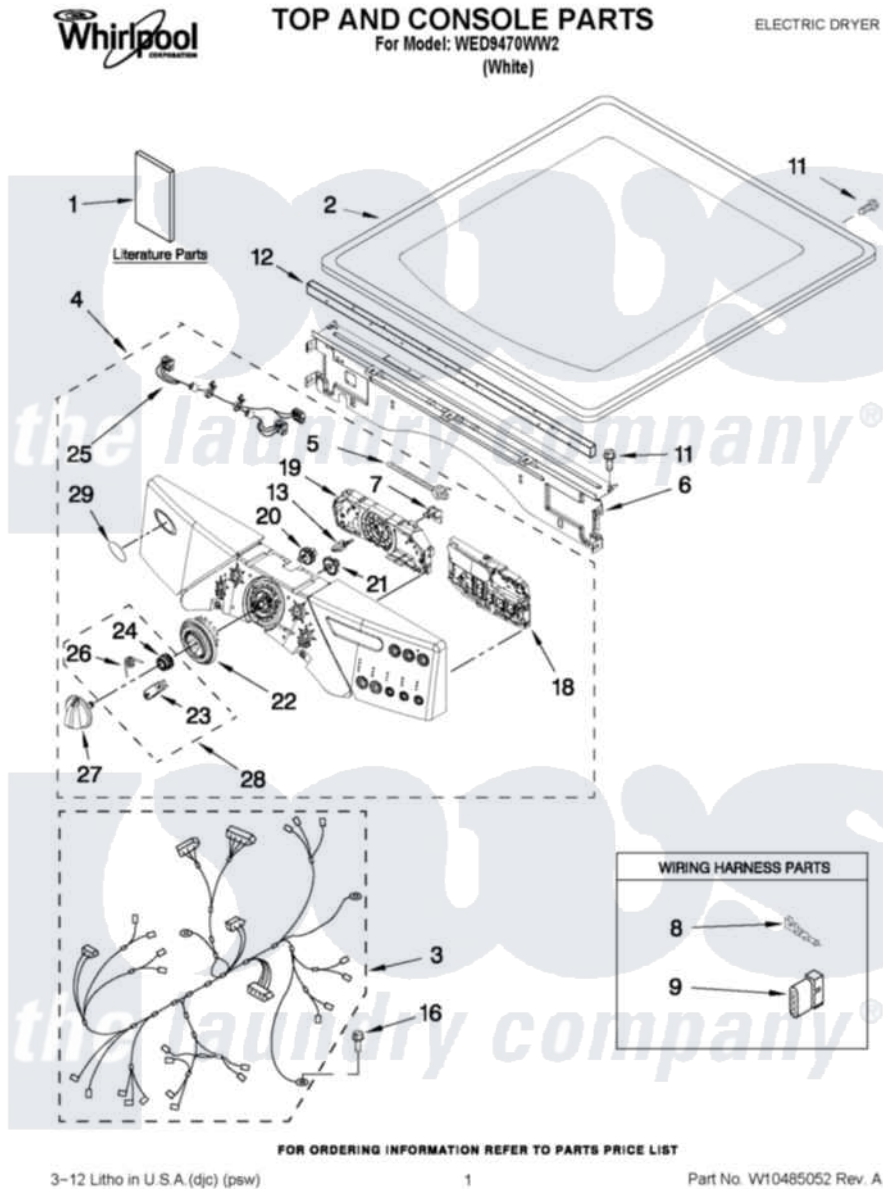

Whirlpool [Residential Whirlpool WED9470WW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10477028		Not Available	USE & CARE GUIDE
"	W10298850		Not Available	TECH SHEET
"	W10471644		Not Available	INSTALLATION, INSTRUCTION
2	3980634	W10117263		Top
3	W10251446			Harness, Main
4	W10255229			Panel, Console
5	3391018			Tie Cable
6	W10215656			Bracket, Console
7	W10112268			Clip-Harness
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
11	3390647	488729		Screw
12	W10112267			Foam-Seal Control Bracket
13	W10030070	W10012480		Kit
16	693995			Screw, Hex Head
18	W10279773			User Interface

19	W10279709		User Interface,
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10250089		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10242906		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10190685		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10117943	8303811	Badge, Assembly

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®