


Whirlpool WED9600TZ0 01 - TOP AND CONSOLE PARTS

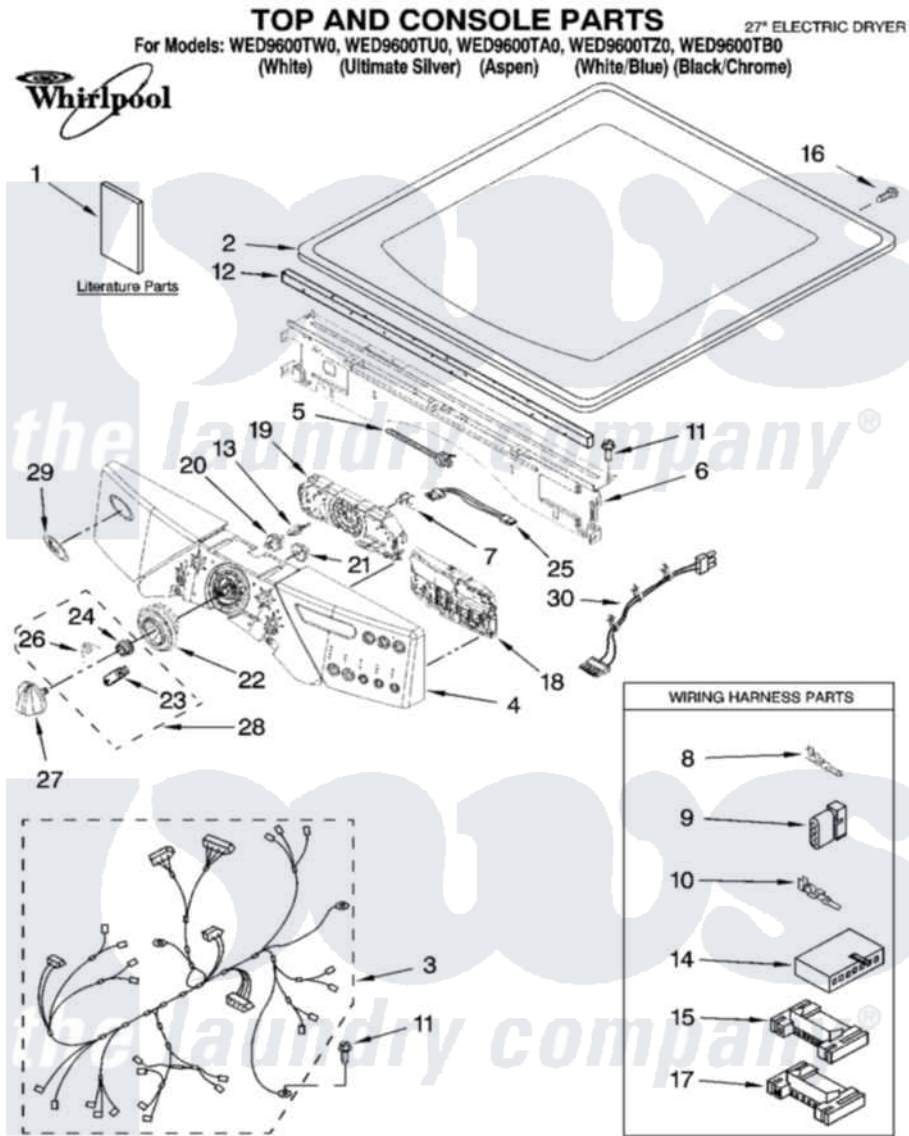

9-07 Litho in U.S.A.(LT)

1

Part No. W10145263 Rev. A

Whirlpool [Residential Whirlpool WED9600TZ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10136968		Not Available	Use & Care Guide
"	W10143265		Not Available	Tech Sheet
"	W10139791		Not Available	Guide, Quick Start
"	W10134980		Not Available	Installation, Diagnostic Guide
"	W10139322		Not Available	TIP SHEET DRYER STEAM
2	8519251	W10117263		Top
"	W10114785			Top
"	W10140290			Top
"	8579997	W10192490		Top
3	W10110988			Harness, Main
4	W10153650			Panel, Console
"	W10153654		Not Available	Panel, Console (Includes Illus: 20,21,22,27,28 & 29) (Ultimate Silver)
"	W10153655			Panel, Console
"	W10153653			Panel, Console
"	W10153652			Panel, Console

5	3391018		Tie Cable
6	W10006840	W10215656	Bracket, Console
7	W10112268		Clip-Harness
8	94614		Terminal
9	3936144		Do-It-Yourself Repair Manuals
10	94613	596797	Terminal
11	3390647	488729	Screw
12	W10112267		Foam-Seal Control Bracket
13	W10030070	W10012480	Kit
14	3936150		Connector, 7-Circuit
15	3395683		Receptacle, Multi-Terminal
16	8281225		Screw, 8-18 X 1/2
17	2203186		Connector, 5-Circuit
18	W10110659	W10294708	Kit
19	W10110658		User Interface
20	W10012430		Encoder, Wheel Kit.
21	W10012440		Retainer-Snap
22	W10012410		Knob, Light Ring
23	W10012810	280230	Encoder, Wheel Kit.
24	W10012460	280230	Encoder, Wheel Kit.
25	W10095960		Harness, Communication
26	W10012820	280230	Encoder, Wheel Kit.
27	W10116702		Knob, Control
"	W10116704		Knob, Control
"	W10153663		Knob, Control
"	W10116706		Knob, Control
"	W10116705		Knob, Control
28	280230		Encoder, Wheel Kit.
29	W10117943	8303811	Badge, Assembly
30	W10110976		Cube, Cable

