


# Whirlpool WED9610XW1 01 - TOP AND CONSOLE PARTS

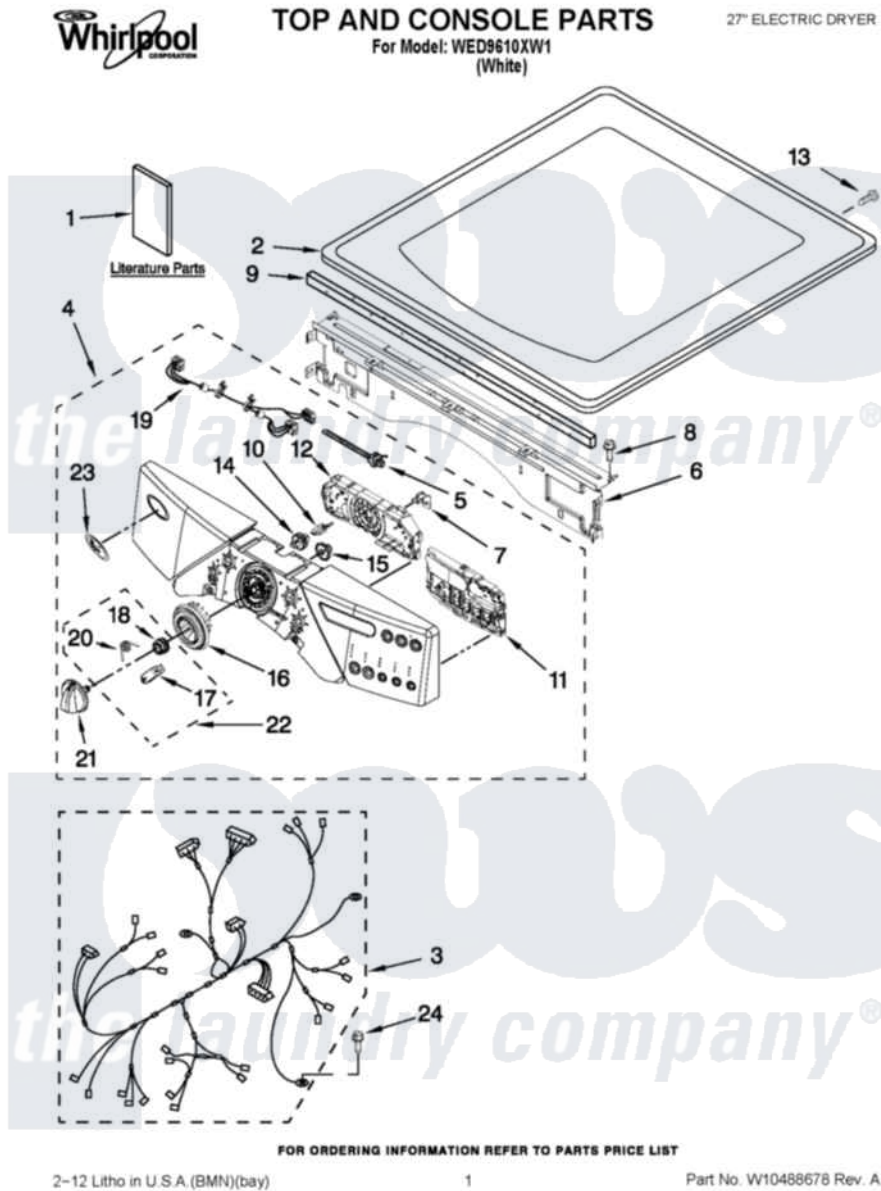

Whirlpool [Residential Whirlpool WED9610XW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10477028		Not Available	USE & CARE GUIDE
"	W10298850		Not Available	TECH SHEET
"	W10471644		Not Available	INSTALLATION, INSTRUCTION
2	3980634	<a href="#">W10117263</a>		Top
3	<a href="#">W10111068</a>			Harness, Main
4	<a href="#">W10255229</a>			Panel, Console
5	<a href="#">3391018</a>			Tie Cable
6	<a href="#">W10215656</a>			Bracket, Console
7	<a href="#">W10112268</a>			Clip-Harness
8	3390647	<a href="#">488729</a>		Screw
9	<a href="#">W10112267</a>			Foam-Seal Control Bracket
10	W10030070	<a href="#">W10012480</a>		Kit
11	<a href="#">W10279773</a>			User Interface
12	<a href="#">W10279709</a>			User Interface,
13	3390647	<a href="#">488729</a>		Screw
14	<a href="#">W10012430</a>			Encoder, Wheel Kit.

15	<a href="#">W10012440</a>		Retainer-Snap
16	<a href="#">W10250089</a>		Knob, Light Ring
17	W10012810	<a href="#">280230</a>	Encoder, Wheel Kit.
18	W10133763	Not Available	DETENT WHEEL (SERVICE ONLY WITH ILLUS. 28 )
19	<a href="#">W10242906</a>		Harness, Communication
20	W10012820	<a href="#">280230</a>	Encoder, Wheel Kit.
21	<a href="#">W10190685</a>		Knob, Control
22	<a href="#">W10012480</a>		Kit
23	W10117943	<a href="#">8303811</a>	Badge, Assembly
24	<a href="#">693995</a>		Screw, Hex Head

**Howes**  
the laundry company®

**Howes**  
the laundry company®

**Howes**  
the laundry company®