


Whirlpool WET3300SQ2 01 - WASHER/DRYER CONTROL PANEL PARTS

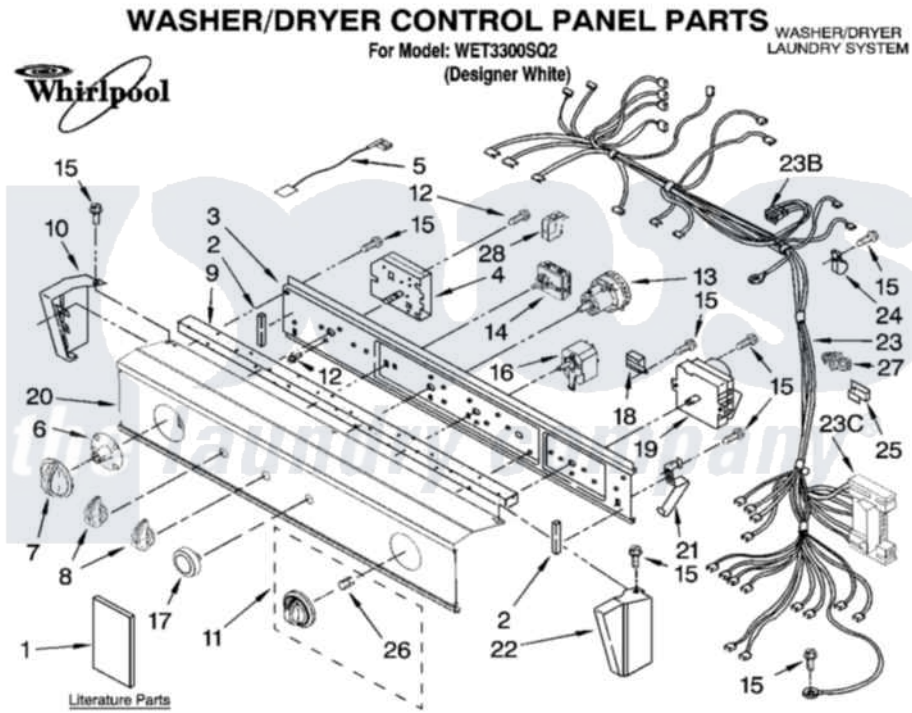

1-09 Litho in U.S.A. (LT) (psw)

1

Part No. W10250571 Rev. A

Whirlpool [Residential Whirlpool WET3300SQ2 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10222378		Not Available	Installation Instructions
"	W10196553		Not Available	Guide, Use & Care
"	W10118304		Not Available	Sheet, Cycle Feature
"	W10113806		Not Available	Wiring Diagram
"	W10172274		Not Available	Energy Guide
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	W10113761			Timer, Washer
5	W10121648			Jumper Wire
6	8566018			Dial,
7	8566022			Knob, Timer
8	8565944			Knob, Control
9	8521965			Gasket, Console
10	3389464			End Cap
11	8566061			Timer Knob Assembly
12	3400808			Screw. Mounting

13	W10112533	W10339337	Switch-WL
14	W10114118		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
17	8566073		Knob, Push-To-Start
18	694419		Mini-Buzzer
19	W10113804		Timer, Washer
20	W10114898		Panel, Control
21	3389453		Bracket, Hinge
22	3389456		End Cap
23	W10139461		Harness - Dryer
"	2154470		Receptacle,
"	3395683		Receptacle, Multi-Terminal
24	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
26	8536939		Clip, Knob
27	2219077		Clip, Pressure Switch Hose
28	W10210799		Clip, Harness

