


Whirlpool WET3300SQ2 05 - DRYER SUPPORT AND WASHER HARNESS PARTS

DRYER SUPPORT AND WASHER HARNESS PARTS

For Model: WET3300SQ2
(Designer White)

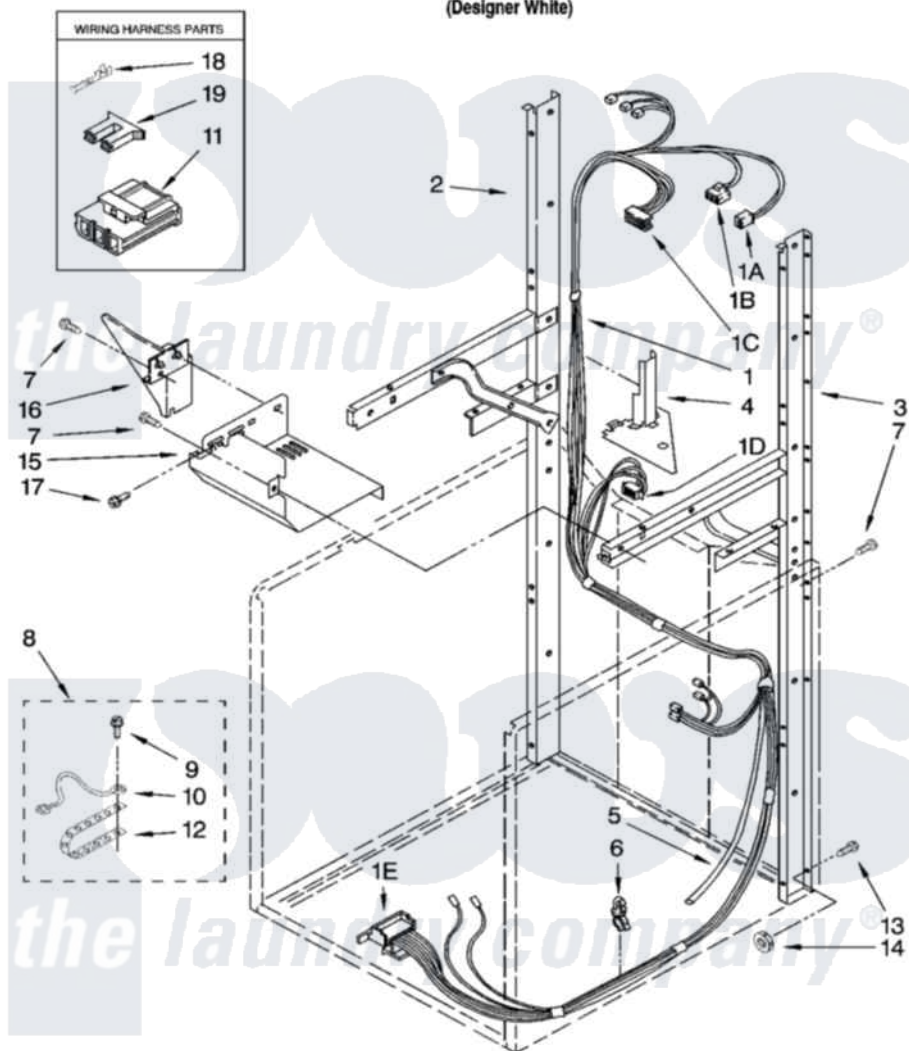

W10250571

7

Whirlpool [Residential Whirlpool WET3300SQ2 Washer/Dryer Parts](#) Parts Diagram 05 - DRYER SUPPORT AND WASHER HARNESS PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10139637			Harness - Washer
"	3350130			Plug, Terminal
"	3347243			Block, Disconnect
"	352089			Timer, Block Disconnect
"	3350211		Not Available	Receptacle, 3 Way
"	62505			Block, Disconnect
2	3388851			Channel Assembly
3	3388850			Channel Assembly
4	3390609			Shield, Harness
5	8545438			Hose, Pressure Switch
6	W10210799			Clip, Harness
7	343641	681414		Screw, 10AB X 1/2
8	685463			Kit, Grounding Plug, Dryer Side Panel
0	8533071	00767		Screw, 8A X 3/8 HeX Washer

9	6533971	90707	Head Tapping
10	685449		Wire, Ground
11	3360056		Connector
12	22965		Strap, Grounding
13	3400300	Y015627	Screw- Hex
14	8533952		Nut, Hex
15	3394350		Shield, Front
16	3390336		Shield, Thermostat
17	3393008	308685	Side Trim)
18	94613	596797	Terminal
"	94614		Terminal
19	3354925		Block, Connector

the laundry company[®]

the laundry company[®]

the laundry company[®]