


Whirlpool WET3300SQ2 06 - WASHER TOP AND LID PARTS

WASHER TOP AND LID PARTS

For Model: WET3300SQ2
(Designer White)

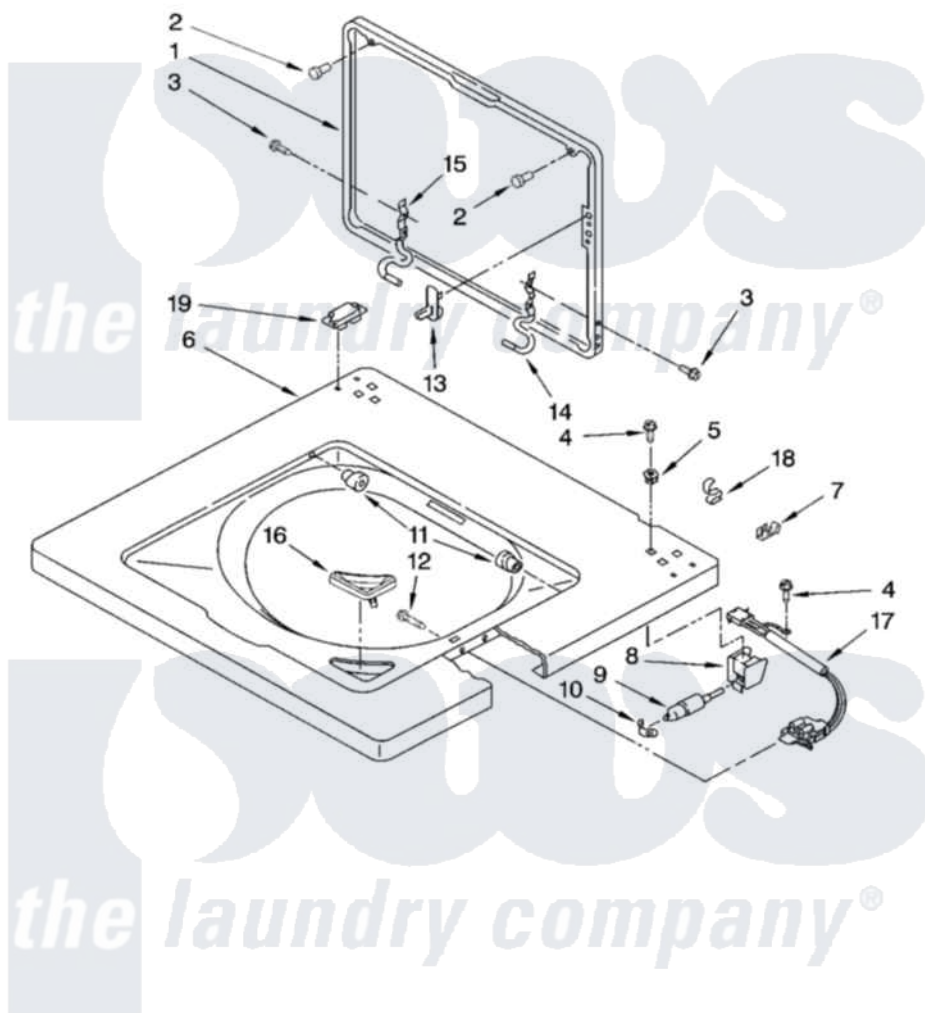

W10250571

9

Whirlpool [Residential Whirlpool WET3300SQ2 Washer/Dryer Parts](#) Parts Diagram 06 - WASHER TOP AND LID PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3351652	W10193874		Lid
2	9724509			Bumper, Lid
3	W10119872	W10119828		Screw, Lid Hinge Mounting
4	343641	681414		Screw, 10AB X 1/2
5	692400			Nut, Push-In
6	3349817			Top, Console
7	357572	W10113937		Clip, Grounding
8	3354020			Bracket, Mounting
9	3350152			Retainer, Lid Assembly
10	3350828			Clip-Cylinder Retainer
11	21258			Bearing, Lid Hinge
12	3356311			Screw And Washer, Lid Switch Shield
13	358684			Strike, Lid Switch
14	3350101			Hinge, RH
15	3350102			Hinge, L.H.
16	3362952			Dispenser, Bleach

17 [3355458](#)
18 [90016](#)
19 [W10134768](#)

Switch, Lid
Clip, Pressure Switch Hose
Locator, Top

