


Whirlpool WET3300SQ2 09 - MACHINE BASE PARTS

MACHINE BASE PARTS

For Model: WET3300SQ2
(Designer White)

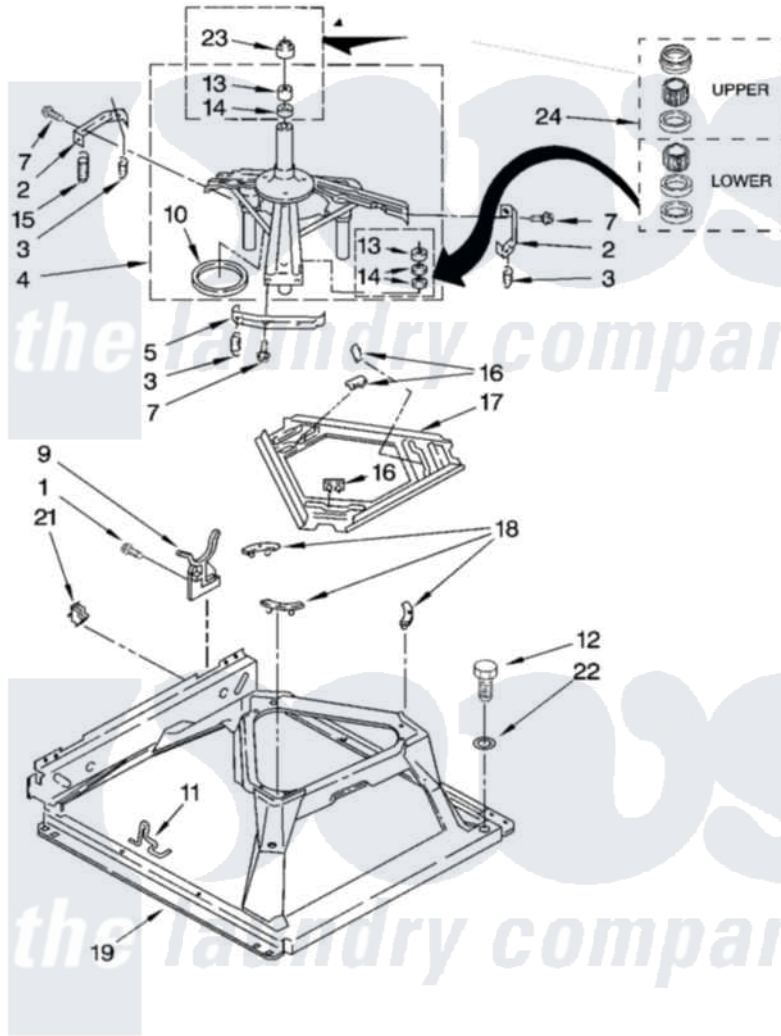

14

W10250571

Whirlpool [Residential Whirlpool WET3300SQ2 Washer/Dryer Parts](#) Parts Diagram 09 - MACHINE BASE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	343641	681414		Screw, 10AB X 1/2
2	64067			Bracket, Spring Outer
3	63907			Spring, Suspension
4	8575214	280184		Support
5	64065			Bracket, Spring Outer
7	3400076			Screw, Bracket Mounting
9	3350506			Retainer, Hose
10	63134			Ring, Sound Deadening
11	W10145155			Retainer, Suspension Spring
12	3400501			Screw, 5/16-18 X 1 3/32
13	8546455			Bearing, Centerpost
14	357409	359449		Seal, Agitator Shaft
15	388492	W10250667		Spring, Counterweight
16	62568	285219		Pad
17	3946509			Plate, Suspension
18	3363660	285744		Pad

19

[3349343](#)

Base Assembly

21

[3349749](#)

Restrainer, Base

22

[3349340](#)

Washer

23

[8577376](#)

Seal, Centerpost

24

[285203](#)

Centerpost Bearing Kit

