


Whirlpool WET3300XQ0 01 - WASHER/DRYER CONTROL PANEL PARTS

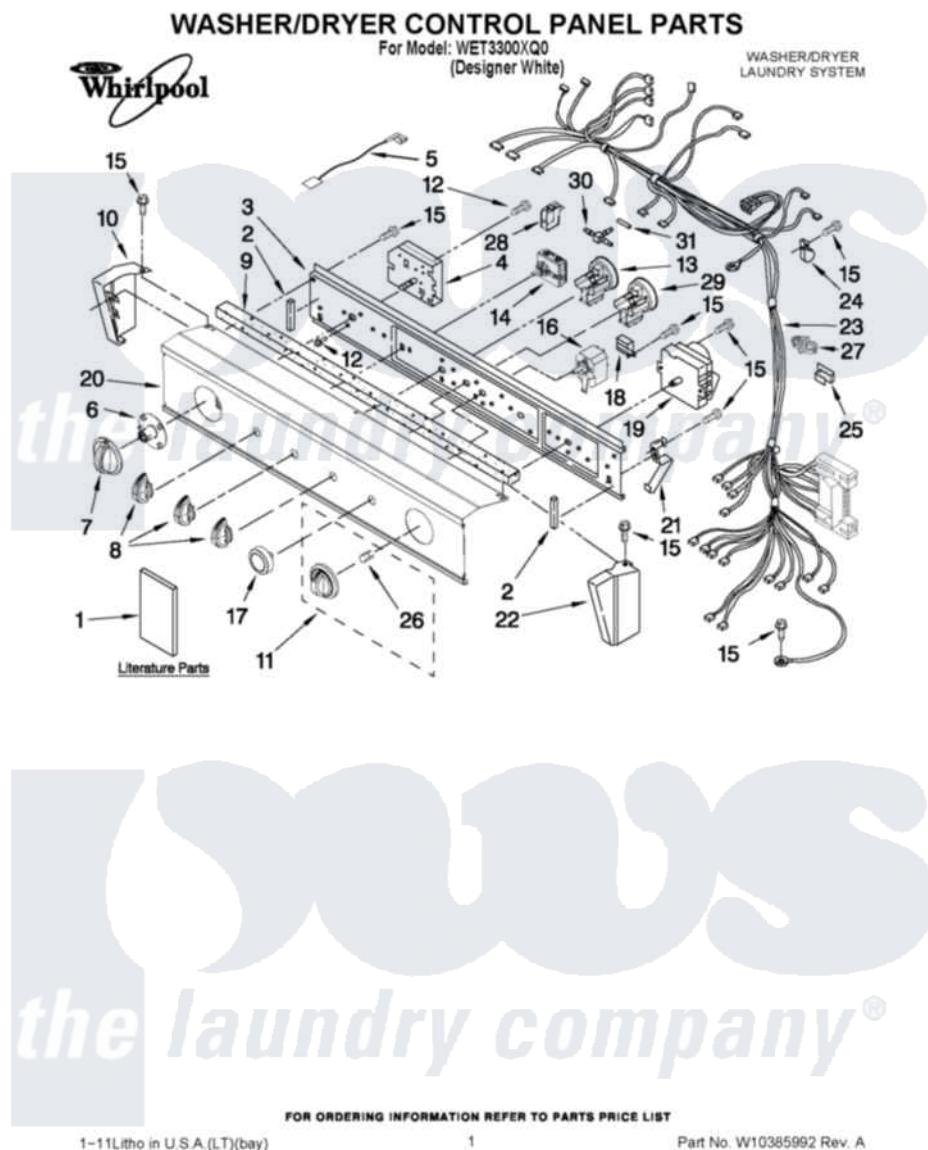

Whirlpool [Residential Whirlpool WET3300XQ0 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10356098		Not Available	INSTALLATION INSTRUCTIONS
"	W10343071		Not Available	GUIDE, USE & CARE
"	W10362946		Not Available	WIRING DIAGRAM
"	W10343082		Not Available	ENERGY GUIDE
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	W10113761			Timer, Washer
5	W10121648			Jumper Wire
6	8566018			Dial,
7	8566022			Knob, Timer
8	8565944			Knob, Control
9	8521965			Gasket, Console
10	3389464			End Cap
11	8566061			Timer Knob Assembly
12	3400808			Screw. Mounting

13	W10379546	W10510877	WL Switch
14	W10114118		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
17	8566073		Knob, Push-To-Start
18	694419		Mini-Buzzer
19	W10113804		Timer, Washer
20	W10339549		Panel, Control
21	3389453		Bracket, Hinge
22	3389456		End Cap
23	W10139461		Harness - Dryer
24	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
26	8536939		Clip, Knob
27	2219077		Clip, Pressure Switch Hose
28	W10210799		Clip, Harness
29	W10379549	W10510877	WL Switch
30	8524808		Fitting, Pressure Hose "T"
31	W10368080		Hose, Pressure Switch

