


Whirlpool WFC7500VW1 01 - TOP AND CABINET PARTS

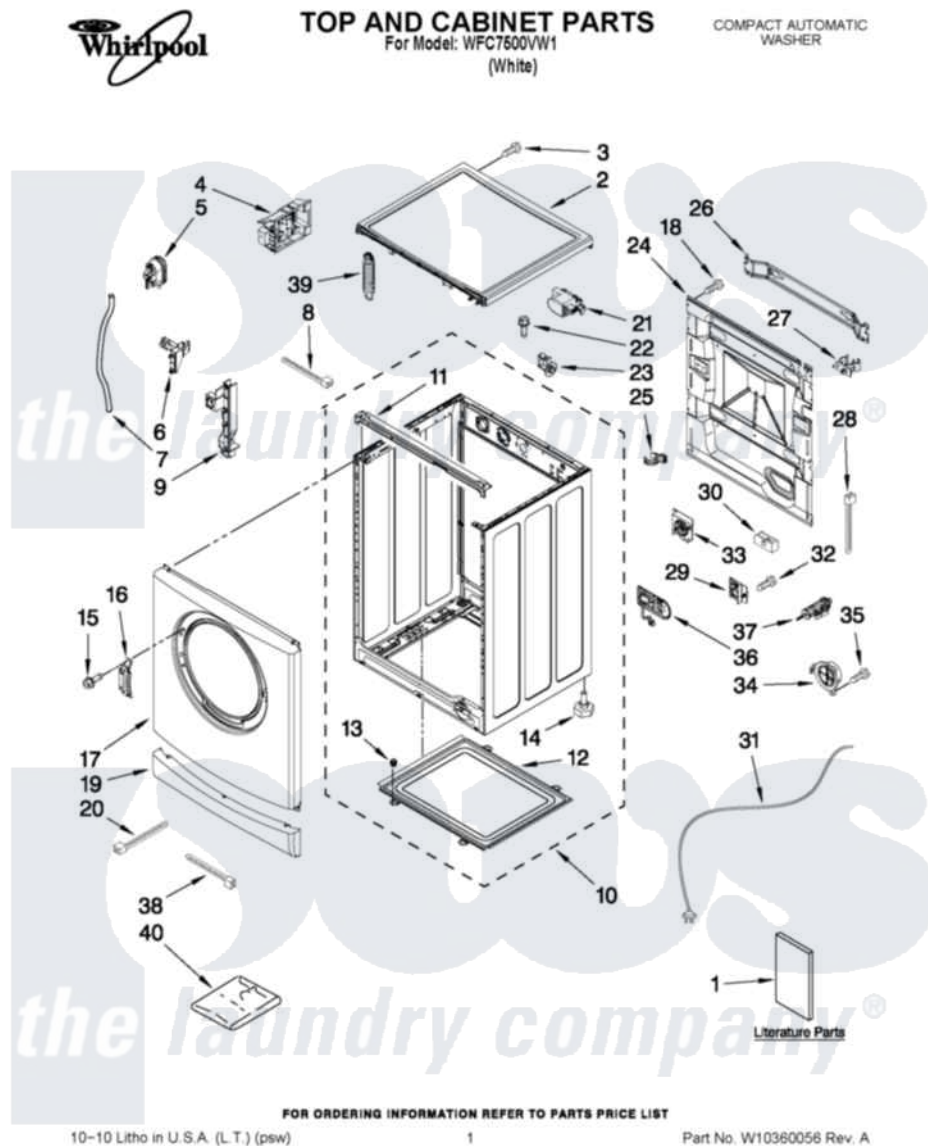

Whirlpool Residential Whirlpool WFC7500VW1 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10175588		Not Available	Use & Care Guide
"	W10179063		Not Available	Quick Start Guide
"	W10180055		Not Available	GUIDE (ENERGY GUIDE)
"	W10331054		Not Available	GUIDE (TECH SHEET)
2	W10192961			Top
3	W10193038			Screw, Top
4	W10192965			MCU, Assembly
5	W10192975			Switch, Pressure
6	W10193054			Support, Pressure Switch
7	W10193048			Hose, Pressure Switch
8	W10193109			Tie, Wire
9	W10193055			Retainer, Channel
10	W10192956			Cabinet, Service
11	W10192985			Brace, Control
12	W10193002			Cover, Base
13	W10193003			Clip, Base Cover

14	W10192970	Foot-Leveling
15	W10193036	Screw, Self-Tap
16	W10193050	Hinge, Door
17	W10192967	Panel, Front
18	W10193107	Screw
19	W10193004	Panel, Toe
20	W10193113	Tie, Wire
21	W10192950	Filter-Rfi
22	W10193112	Screw
23	W10193097	Retainer, Clamp
24	W10192971	Panel, Rear
25	W10192982	Clip, Drain Hose
26	W10193005	Bracket, Transport
27	W10192980	Clip, Drain Hose
28	W10193091	Tie, Wire
29	W10192957	Clip, Assembly
30	W10192992	Strain-Relief
31	W10192958	Cord, Power
32	W10193105	Screw
33	W10193023	Clip, Power Cord
34	W10192998	Cover, Vent
35	W10193108	Screw
36	W10193021	Cover, Transport
37	W10192968	Bolt, Assembly
38	W10193114	Tie, Wire
39	W10192955	Spring, Suspension
40	W10192951	Kit, Inlet Hose And U-Bend

the laundry company[®]

the laundry company[®]