


# Whirlpool WFW8410SW01 02 - DOOR AND LATCH PARTS

## DOOR AND LATCH PARTS

For Model: WFW8410SW01  
(White/Grey)

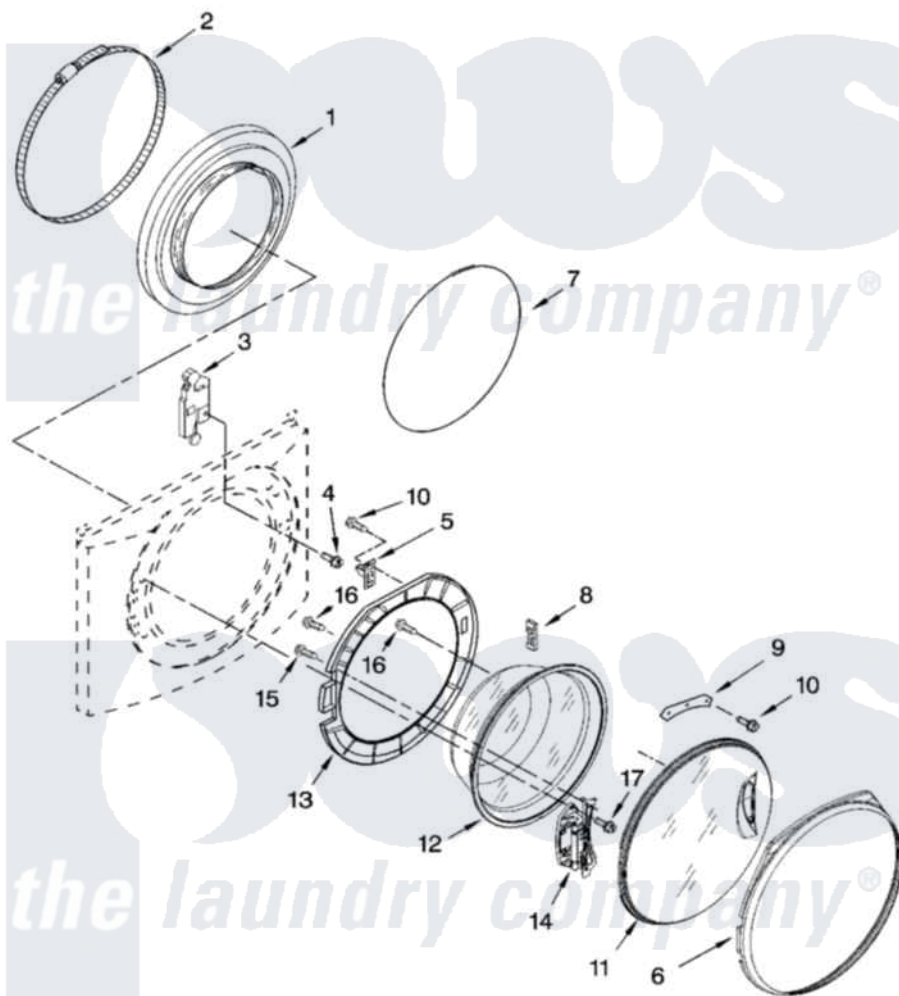

W10121971

3

Whirlpool [Residential Whirlpool WFW8410SW01 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8540952	<a href="#">W10111435</a>		Bellow
2	<a href="#">8540108</a>			Clamp, Bellow To Tub
3	8540772	<a href="#">W10253483</a>		Lock, Door
4	<a href="#">8540725</a>			Screw
5	8540221	<a href="#">W10111148</a>		Strike
6	<a href="#">8540533</a>			Trim Ring, Outer Door
7	8540107	<a href="#">W10217563</a>		Clamp, Bellow To Front Panel
8	<a href="#">8540115</a>			Clamp, Support
9	<a href="#">8540114</a>			Clamp, Glass
10	8540513	<a href="#">8182214</a>		Screw
11	<a href="#">8540588</a>			Frame, Door Front Assembly
12	8540428	<a href="#">W10388315</a>		Glass, Door
13	8540891	<a href="#">W10138523</a>		Frame, Door Back Support
14	8540416	<a href="#">W10118967</a>		Hinge, Door
15	8540284	<a href="#">8181660</a>		Screw
16	8540282	<a href="#">8181661</a>		Screw, Actuator

