


# Whirlpool WFW9250WL01 03 - CONTROL PANEL PARTS

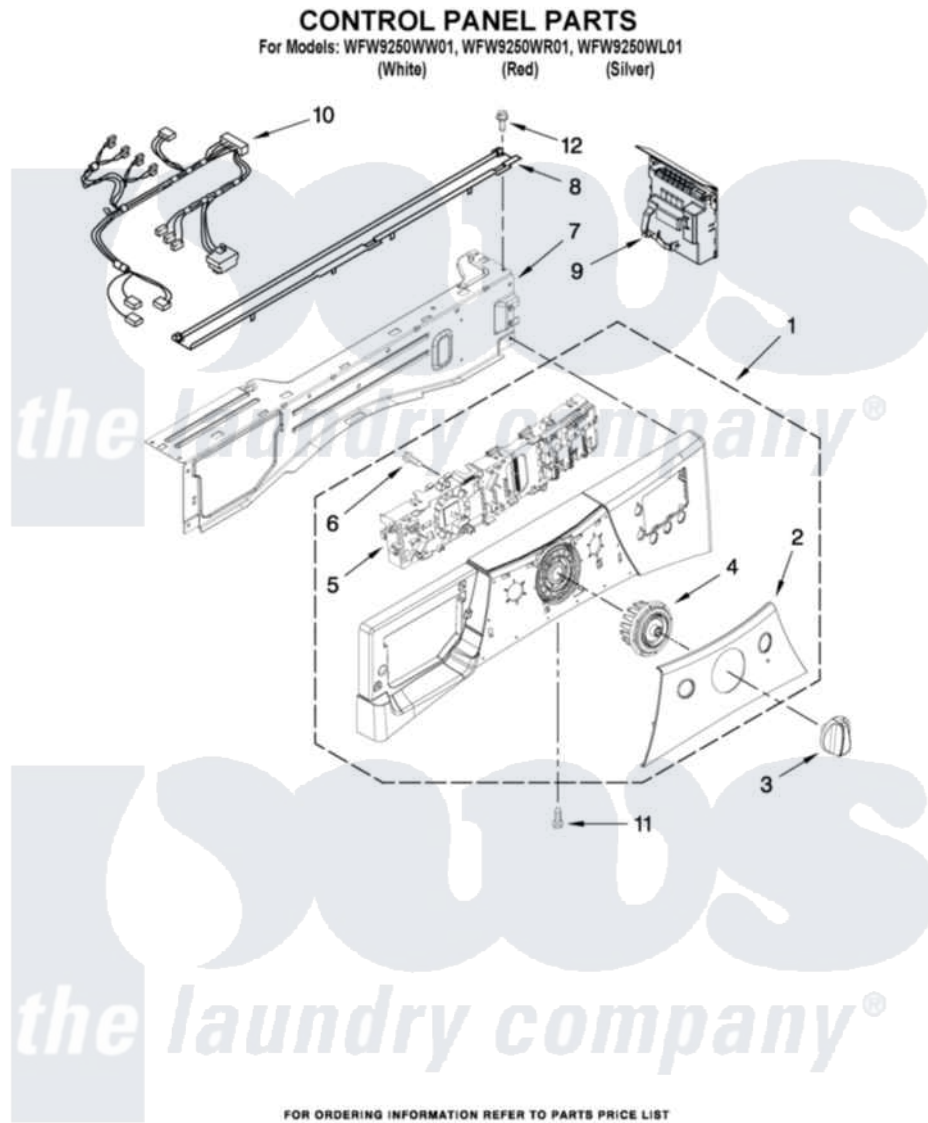

4

W10315509

Whirlpool [Residential Whirlpool WFW9250WL01 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">W10325313</a>			Console
"	<a href="#">W10253387</a>			Console
"	<a href="#">W10325314</a>			Console
2	<a href="#">W10237305</a>			Cover, Center
"	<a href="#">W10272152</a>			Cover, Center
"	<a href="#">W10272146</a>			Cover, Center
3	<a href="#">W10215781</a>			Knob Assembly
"	<a href="#">W10247262</a>			Knob Assembly
4	<a href="#">W10237301</a>			Cycle, Light Guide
5	W10212769	<a href="#">W10402922</a>		Control-Elec
6	<a href="#">W10006580</a>			Screw, M3-1.12 X12 Pn 6l Spl
7	<a href="#">W10240776</a>			Brace, Top Front
8	<a href="#">8540839</a>			Channel, Water
9	<a href="#">W10309219</a>			Microcomputer, Machine Control
10	<a href="#">W10298263</a>			Harness, Wiring
11	8540282	<a href="#">8181661</a>		Screw, Actuator

