


Whirlpool WFW9400SU00 02 - DOOR AND LATCH PARTS

DOOR AND LATCH PARTS

For Models: WFW9400SW00, WFW9400SB00, WFW9400ST00, WFW9400SZ00, WFW9400SU00
(White/Chrome) (Black/Chrome) (Biscuit/Gold) (White/Blue) (Ultimate Silver)

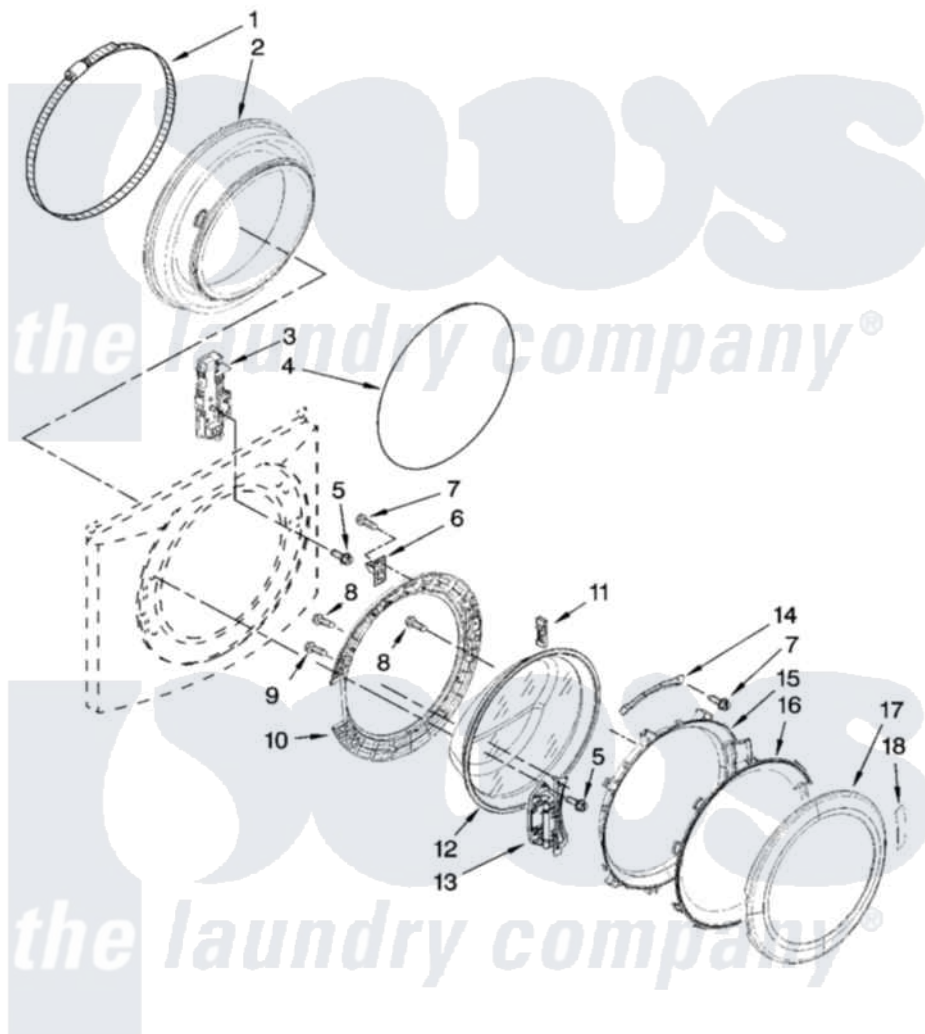

W10121846

3

Whirlpool [Residential Whirlpool WFW9400SU00 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8182210			Clamp, Bellow
2	8182119			Bellow
3	8183270			Lock, Door
4	8182211			Clamp, Bellow To Front Panel
5	8181760	8540725		Screw
6	8183198	W10217552		Hook, Door
7	8181758	8182214		Screw
8	8181661			Screw, Actuator
9	8181660			Screw
10	8183195			Frame, Door Back Support
11	8181659	W10128586		Clamp, Glass Support
12	8181655			Glass, Door
13	8183202			Hinge, Door
14	8183199	W10295703		Clamp, Glass
15	8183256			Frame, Door Front Support
16	8183255			Screen, Door

17	8183220	W10069120	Trim Ring, Outer Door
"	8183221	W10069160	Ring-Trim
"	8183219		Trim Ring, Outer Door
18	W10121607		Pad, Door Handle

