


# Whirlpool WFW9400SWA10 03 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: WFW9400SWA10, WFW9400SBA10, WFW9400STA10, WFW9400SZA10  
(White/Chrome) (Black/Chrome) (Biscuit/Gold) (White/Blue)

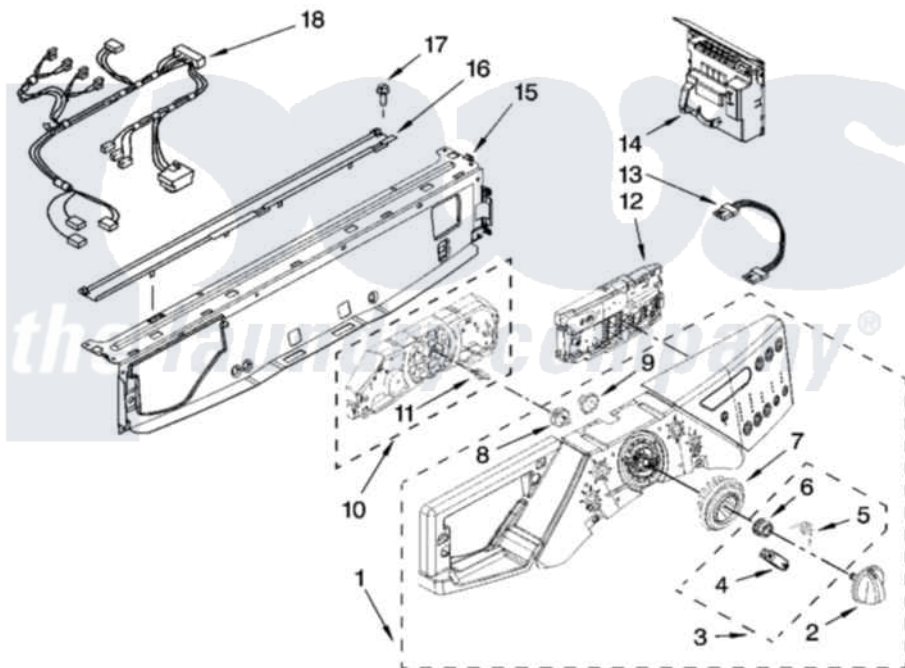

4

W10130064

Whirlpool [Residential Whirlpool WFW9400SWA10 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8183229</a>			Panel, Control
"	<a href="#">8183230</a>			Panel, Control
"	<a href="#">8183231</a>			Panel, Control
"	<a href="#">8183232</a>			Panel, Control
2	<a href="#">W10131369</a>			Knob, Control
"	<a href="#">W10131370</a>			Knob, Control
"	<a href="#">W10131372</a>			Knob, Control
"	<a href="#">W10131373</a>			Knob, Control
3	<a href="#">W10133927</a>			Wheel, Detent Kit
4	W10131661	<a href="#">W10133927</a>		Wheel, Detent Kit
5	W10131377	<a href="#">W10133927</a>		Wheel, Detent Kit
6	W10131378	<a href="#">W10133927</a>		Wheel, Detent Kit
7	W10131376	<a href="#">W10012410</a>		Knob, Light Ring
8	<a href="#">W10131381</a>			Wheel, Encoder
9	W10131382	<a href="#">W10012440</a>		Retainer-Snap
10	8183262	<a href="#">W10164402</a>		User Interface, Center

11	<a href="#">8183177</a>		Adapter, Encoder Wheel
12	8183263	<a href="#">W10319813</a>	Control-Elec
13	<a href="#">8183254</a>		Harness, Wiring
14	<a href="#">W10015500</a>		Microcomputer, Machine Control
15	<a href="#">W10059240</a>		Brace, Front Top
16	W10003700	<a href="#">8183204</a>	Channel, Water
17	W10015090	<a href="#">489442</a>	Screw 3 2217757 Roller, Front
18	<a href="#">W10003450</a>		Harness, Wiring

