


# Whirlpool WFW9400SZA10 02 - DOOR AND LATCH PARTS

## DOOR AND LATCH PARTS

For Models: WFW9400SWA10, WFW9400SBA10, WFW9400STA10, WFW9400SZA10  
(White/Chrome) (Black/Chrome) (Biscuit/Gold) (White/Blue)

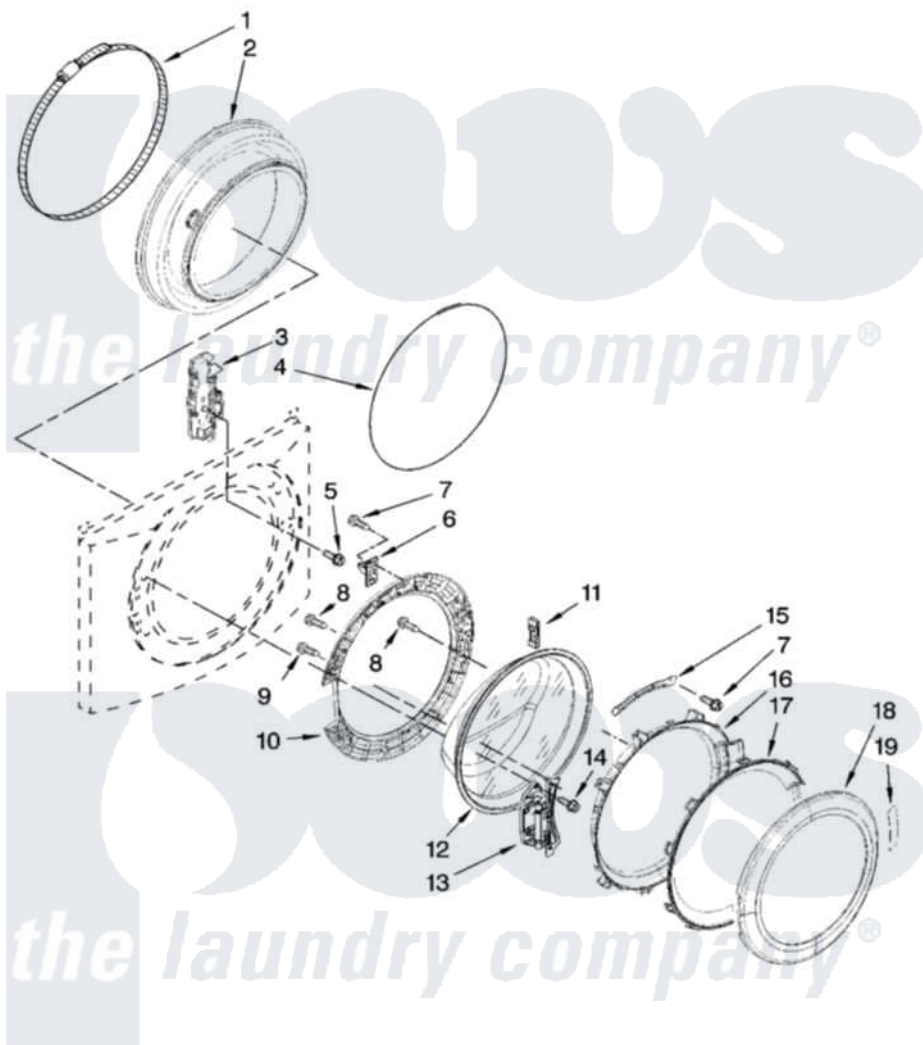

W10130064

3

Whirlpool [Residential Whirlpool WFW9400SZA10 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10100790	<a href="#">8182210</a>		Clamp, Bellow
2	W10003800	<a href="#">8182119</a>		Bellow
3	8540772	<a href="#">W10253483</a>		Lock, Door
4	W10003490	<a href="#">8182211</a>		Clamp, Bellow To Front Panel
5	<a href="#">8540725</a>			Screw
6	W10003390	<a href="#">W10217552</a>		Hook, Door
7	8540513	<a href="#">8182214</a>		Screw
8	8540282	<a href="#">8181661</a>		Screw, Actuator
9	8540284	<a href="#">8181660</a>		Screw
10	W10003390	<a href="#">W10217552</a>		Hook, Door
11	W10003430	<a href="#">W10128586</a>		Clamp, Glass Support
12	W10003520	<a href="#">8181655</a>		Glass, Door
13	W10005090	<a href="#">8183202</a>		Hinge, Door
14	W10015090	<a href="#">489442</a>		Screw 3 2217757 Roller, Front
15	W10003440	<a href="#">W10295703</a>		Clamp, Glass
16	W10005220	<a href="#">8183256</a>		Frame, Door Front Support

17	W10008990	<a href="#">8183255</a>	Screen, Door
18	W10069030	<a href="#">W10069120</a>	Trim Ring, Outer Door
"	W10069090	<a href="#">W10069160</a>	Ring-Trim
"	W10069060	<a href="#">W10069150</a>	Ring-Trim
19	<a href="#">W10121607</a>		Pad, Door Handle

