


Whirlpool WFW9400SZA10 03 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: WFW9400SWA10, WFW9400SBA10, WFW9400STA10, WFW9400SZA10
(White/Chrome) (Black/Chrome) (Biscuit/Gold) (White/Blue)

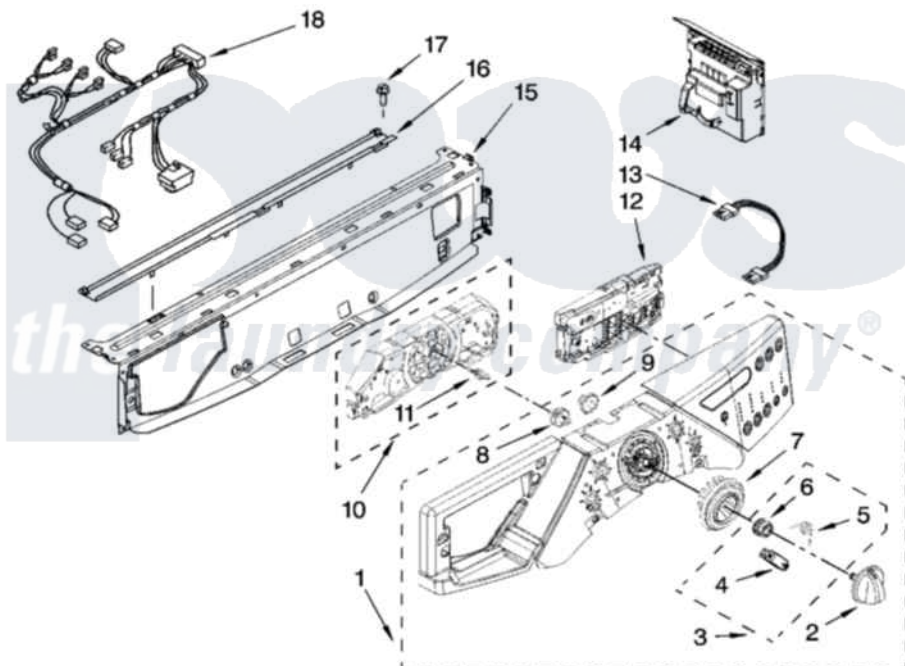

4

W10130064

Whirlpool [Residential Whirlpool WFW9400SZA10 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8183229			Panel, Control
"	8183230			Panel, Control
"	8183231			Panel, Control
"	8183232			Panel, Control
2	W10131369			Knob, Control
"	W10131370			Knob, Control
"	W10131372			Knob, Control
"	W10131373			Knob, Control
3	W10133927			Wheel, Detent Kit
4	W10131661	W10133927		Wheel, Detent Kit
5	W10131377	W10133927		Wheel, Detent Kit
6	W10131378	W10133927		Wheel, Detent Kit
7	W10131376	W10012410		Knob, Light Ring
8	W10131381			Wheel, Encoder
9	W10131382	W10012440		Retainer-Snap
10	8183262	W10164402		User Interface, Center

11	8183177		Adapter, Encoder Wheel
12	8183263	W10319813	Control-Elec
13	8183254		Harness, Wiring
14	W10015500		Microcomputer, Machine Control
15	W10059240		Brace, Front Top
16	W10003700	8183204	Channel, Water
17	W10015090	489442	Screw 3 2217757 Roller, Front
18	W10003450		Harness, Wiring

