


# Whirlpool WFW9470WR01 02 - DOOR AND LATCH PARTS

## DOOR AND LATCH PARTS

For Models: WFW9470WW01, WFW9470WR01, WFW9470WL01  
(White) (Red) (Mercury Silver)

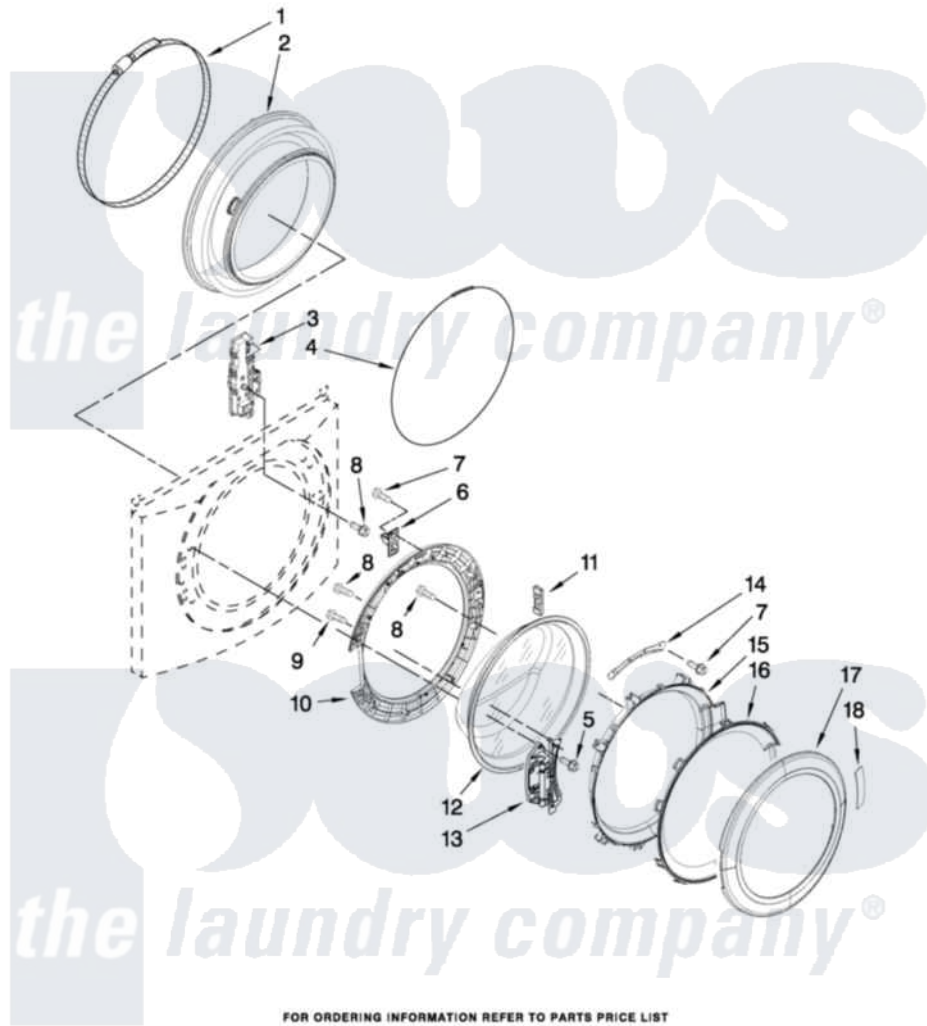

W10326930

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3

Whirlpool [Residential Whirlpool WFW9470WR01 Washer Parts](#) Parts Diagram 02 - DOOR AND LATCH PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8182210</a>			Clamp, Bellow
2	<a href="#">8182119</a>			Bellow
3	<a href="#">8183270</a>			Lock, Door
4	<a href="#">8182211</a>			Clamp, Bellow To Front Panel
5	<a href="#">W10313165</a>			Screw
6	<a href="#">W10217552</a>			Hook, Door
7	8181758	<a href="#">8182214</a>		Screw
8	<a href="#">8181661</a>			Screw, Actuator
9	<a href="#">8181660</a>			Screw
10	<a href="#">8183195</a>			Frame, Door Back Support
11	8181659	<a href="#">W10128586</a>		Clamp, Glass Support
12	<a href="#">8181655</a>			Glass, Door
13	<a href="#">8183202</a>			Hinge, Door
14	<a href="#">W10295703</a>			Clamp, Glass
15	<a href="#">8183256</a>			Frame, Door Front Support
16	W10248071	<a href="#">W10153278</a>		Screen, Door

