


Whirlpool WFW94HEXW2 01 - TOP AND CABINET PARTS

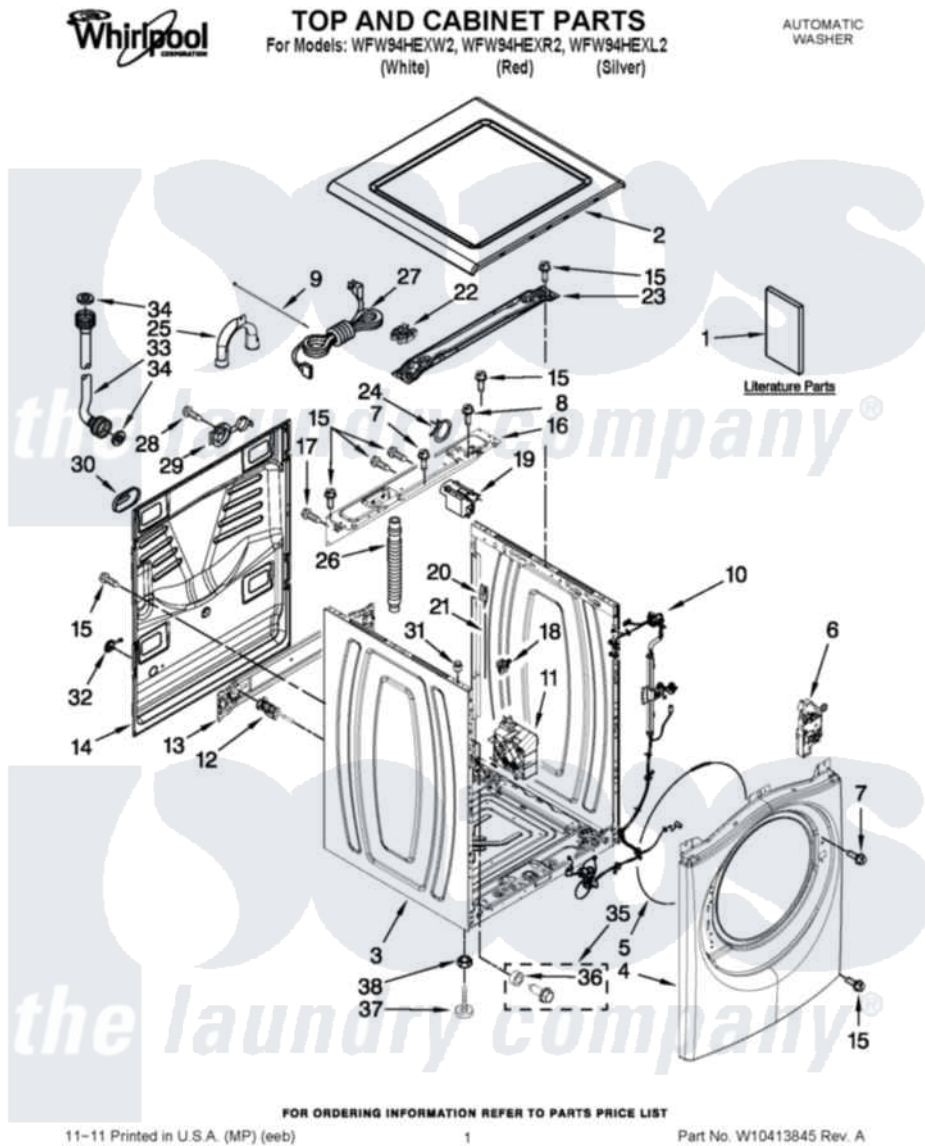

Whirlpool Residential Whirlpool WFW94HEXW2 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10254447		Not Available	INSTALLATION INSTRUCTIONS (ENGLISH/FRENCH)
"	W10254448		Not Available	INSTALLATION INSTRUCTIONS (SPANISH)
"	W10254493		Not Available	USE & CARE GUIDE (ENGLISH/FRENCH)
"	W10254494		Not Available	USE & CARE GUIDE (SPANISH)
"	W10254474		Not Available	TECH SHEET
"	W10254514		Not Available	ENERGY GUIDE
2	W10208373			Top
"	W10337799			Top
"	W10316283			Top
3	W10237487	W10441110		Cabinet
"	W10337793			Cabinet
"	W10316281			Cabinet
4	W10208193			Panel, Front

"	W10337800	W10441112	Panel
"	W10316293		Panel, Front
5	W10237503		Retainer, Bellow To Front Panel
6	8183197	8183270	Lock, Door
7	8540282	8181661	Screw, Actuator
8	8540329		Screw, 8-18 X 7/16
9	W10339879		Tie, Cable
10	W10339734		Harness, Wiring
11	W10374126		Motor Control Unit
12	W10271590	W10498442	Bolt
13	W10237498		Brace, Transport
14	W10237492		Panel, Rear
15	W10142290		Screw, 8-18 X 5/16
16	W10354386		Brace, Rear
17	W10305097		Screw, M4.1-1.8 X 57
18	W10181028		Clip, Pressure Switch Hose
19	W10326464		Filter, Interference
20	W10304342		Switch, Pressure
21	W10251962		Hose, Pressure Switch
22	W10245452		Retainer, Spring
23	W10237490		Brace, Top
24	356138		Clamp, Hose
25	W10280024		U-Bend, Drain Hose
26	W10267638		Hose, Drain
27	W10326100	W10434975	Cord, Power
28	3351614		Screw, Gearcase Cover Mounting
29	W10275820		Cover, Power Cord- Transport
30	8182700	8540268	Cover, Transport
31	W10208380		Screw, Bush Assembly
32	W10304004		Cover, Power Cord
33	W10194208	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
34	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
35	W10298211		Stud Assembly, Front Panel
36	W10323182		Spacer, Front Panel
37	W10001130		Foot, Leveling
38	3359452		Nut, Lock

the laundry company[®]