


Whirlpool WGD4700YQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

29" GAS DRYER

For Model: WGD4700YQ1
(White)

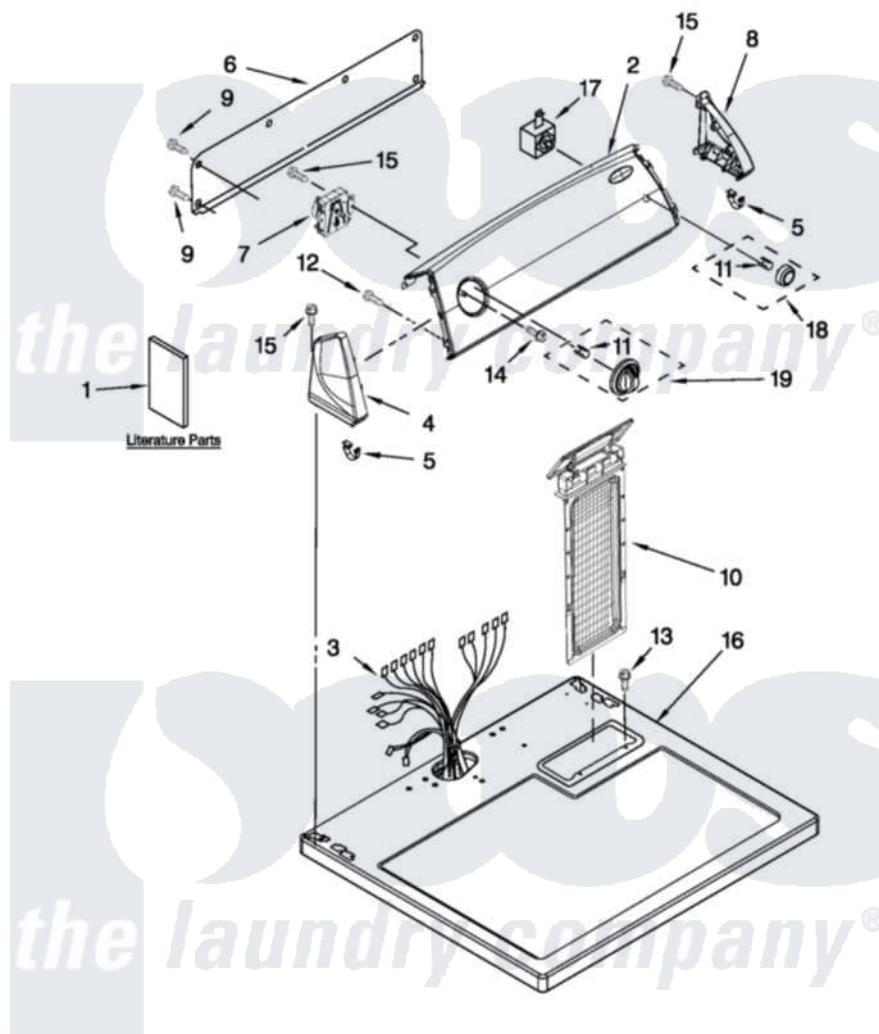

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

12-11 Litho in U.S.A. (BMN)(bay)

1

Part No. W1046697 Rev. A

[Whirlpool Residential Whirlpool WGD4700YQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10115228		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10185977		Not Available	Wiring Diagram
2	W10115487			Panel, Console And Control Bracket Assembly
3	W10186074			Harness, Wiring
4	8566035	8565957		Cap, End
5	8312709			Clip-Console
6	W10103406			Panel, Rear Console
7	W10185975			Timer Assembly 60 Hz
8	8566032	8565954		Cap, End
9	693995			Screw, Hex Head
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	359625	487240		Screw, For Mtg. Service Capacitor

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	8559800	8563663	Top
17	3977456		Switch, Push-To-Start
18	W10034770		Knob, Push-To-Start
19	W10034750		Timer Knob Assembly

