


Whirlpool WGD4700YQ1 02 - CABINET PARTS

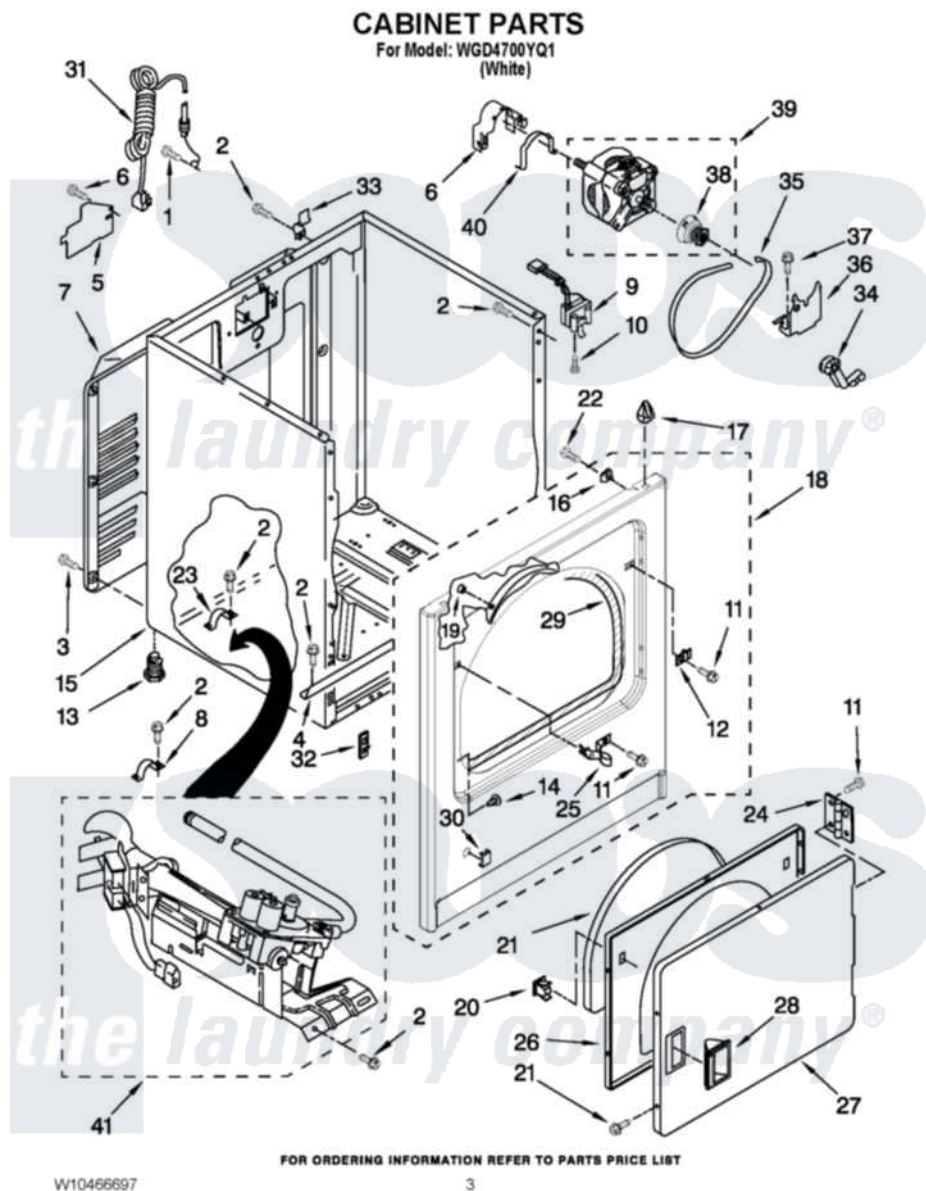

Whirlpool [Residential Whirlpool WGD4700YQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	3404162			Clamp, Motor
7	3396805	280043		Panel-Rear
8	3980175			Clamp, Elbow
9	3406109	3406107		Door Switch Assembly
10	697773	3395530		Screw
11	342055	488627		Screw
12	3403630			Plug, Strike Hole
13	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
14	3404413			Plug, Hinge Hole
15	8530603	8533643		Cabinet

16	98234		Clip, U-Bend
17	690363	18776	Lock, Front Top
18	W10224855	W10248059	Panel
19	685203	279220	Clip
20	3389441		Door Catch Assembly
21	3405246		Seal, Door Push-To-Start
22	343641	681414	Screw, 10AB X 1/2
23	341029		Clamp, Pipe Door Spring
24	W10362431		Hinge And Pin Assembly
25	3403431		Strike, Panel
26	3402341		Door, Inner
27	3402335		Door, Front
28	8566059		Handle, Door
29	3406129		Seal And Bearing Assembly
30	8564457		Plug, Front Panel
31	W10440460		Cord, Power
32	3394083		Clip, Front Panel
33	8066217		Hinge, Top
34	691366		Idler And Pulley Assembly
35	W10131364	341241	Belt
36	348780		Base, Motor
37	3400500		Bolt, 3405245 5/16-18 X 3/4
38	8066184		Pulley, Motor
39	W10194250	279827	Motor-Drive
40	W10121316		Plug, Multivent
41	W10336852	W10465748	Burner-Gas

the laundry company[®]

the laundry company[®]