


Whirlpool WGD4750XQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: WGD4750XQ1
(White)

29" GAS DRYER

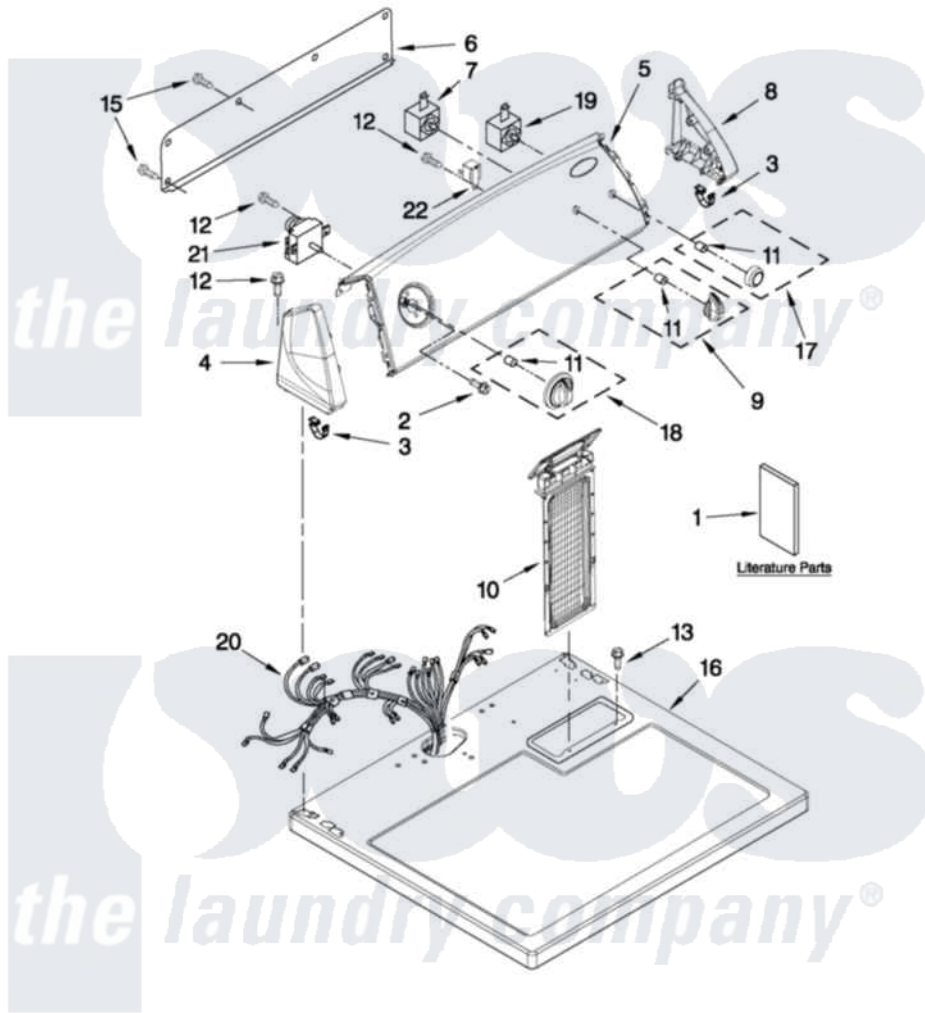

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

5-11 Litho in U.S.A. (JLP)(bay)

1

Part No. W10415715 Rev. A

[Whirlpool Residential Whirlpool WGD4750XQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10185990		Not Available	WIRING DIAGRAM
2	8533974	4331106		Screw, No.10-32 X 7/16
3	8312709			Clip-Console
4	8566035	8565957		Cap, End
5	W10295261			Panel Console And Bracket Assembly
6	W10103406			Panel, Rear Console
7	3405152			Switch, Wrinkle Shield
8	8566032	8565954		Cap, End
9	W10034380			Knob, Control
10	8557861			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	W10034770		Knob, Push-To-Start
18	W10034750		Timer Knob Assembly
19	3977456		Switch, Push-To-Start
20	W1036675Z		Harness, Wiring
21	W10185987		Timer
22	694419		Mini-Buzzer

