


Whirlpool WGD4750XQ1 02 - CABINET PARTS

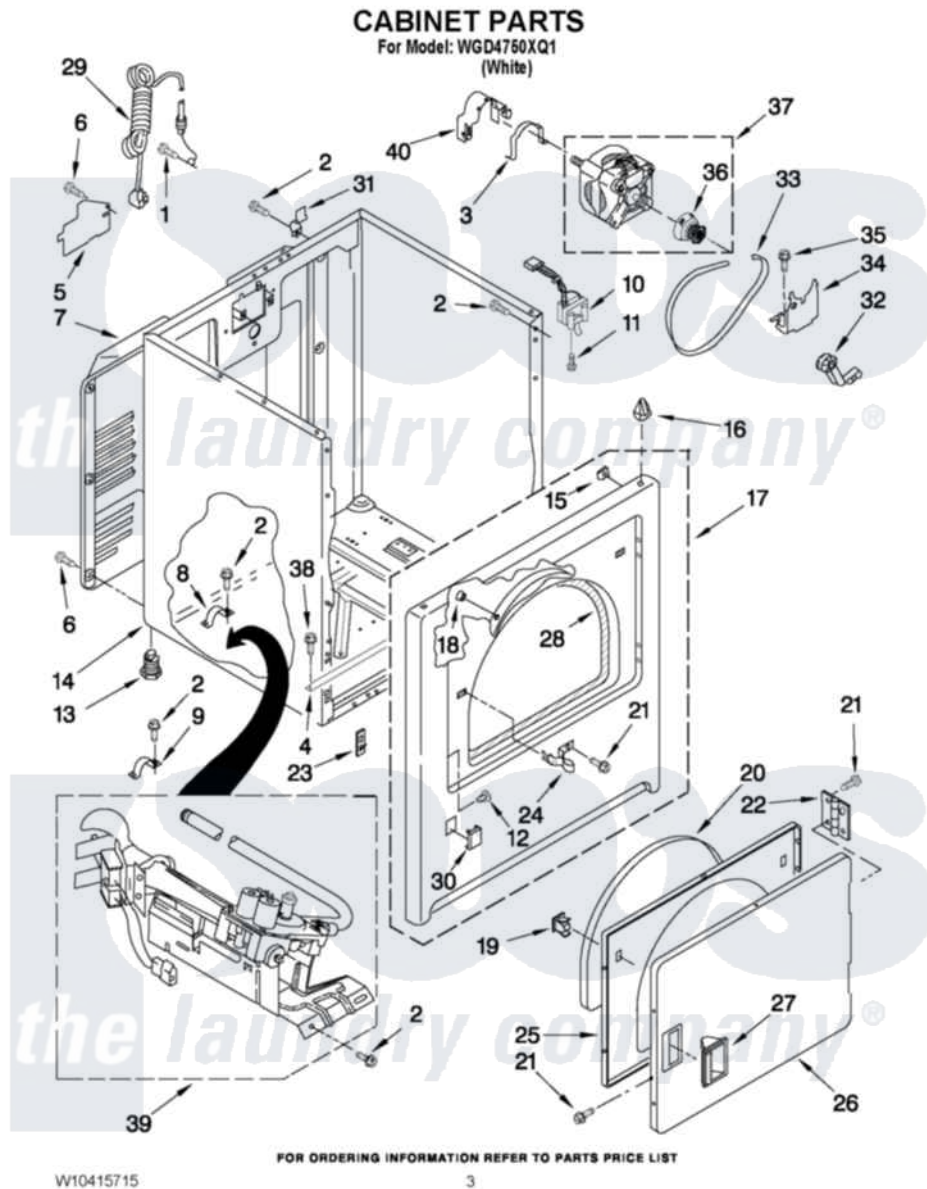

Whirlpool [Residential Whirlpool WGD4750XQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	W10121316			Plug, Multivent
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	693995			Screw, Hex Head
7	3396807	280040		Panel-Rear
8	341029			Clamp, Pipe Door Spring
9	3980175			Clamp, Elbow
10	3406105			Door Switch Assembly
11	697773	3395530		Screw
12	3404413			Plug, Hinge Hole
13	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
14	8530603	8533643		Cabinet
15	98234			Clip, U-Bend

16	690363	18776	Lock, Front Top
17	3403574	279846	Panel
18	685203	279220	Clip
19	690081	279570	Latch
20	3405245		5/16-18 X 3/4
21	342055	488627	Screw
22	W10362431		Hinge And Pin Assembly
23	3394083		Clip, Front Panel
24	696144	279570	Latch
25	3403371		Door, Inner
26	3403361		Door Front
27	8566059		Handle, Door
28	8066124	279264	Air Channel Box
29	344020	3401402	Cord, Power
30	8564457		Plug, Front Panel
31	8066217		Hinge, Top
32	691366		Idler And Pulley Assembly
33	W10131364	341241	Belt
34	348780		Base, Motor
35	3400500		Bolt, 3405245 5/16-18 X 3/4
36	8066184		Pulley, Motor
37	W10194250	279827	Motor-Drve
38	3390631		Screw, 10-16 X 3/8
39	W10336852	W10465748	Burner-Gas
40	3404162		Clamp, Motor

the laundry company[®]

the laundry company[®]