


Whirlpool WGD4800XQ0 01 - TOP AND CONSOLE PARTS

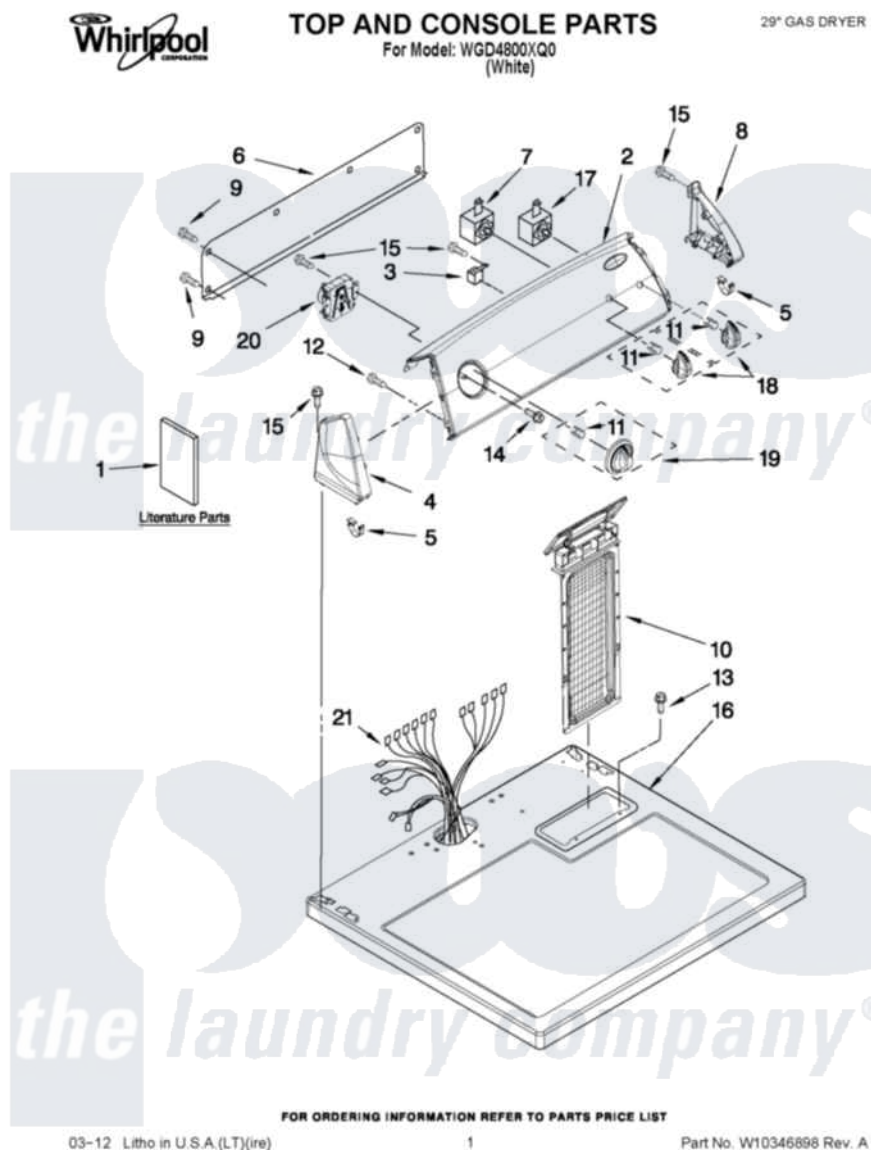

Whirlpool Residential Whirlpool WGD4800XQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10185985		Not Available	Wiring Diagram
2	W10295262			Control Panel And Bracket Assembly
3	694419			Mini-Buzzer
4	8566035	8565957		Cap, End
5	8312709			Clip-Console
6	8274261			Do-It-Yourself Repair Manuals
7	3399639			Switch, Rotary Temperature
8	8566032	8565954		Cap, End
9	693995			Screw, Hex Head
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	8559800	8563663	Top
17	W10117655		Switch, Push-To-Start
18	W10034380		Knob, Control
19	W10034750		Timer Knob Assembly
20	W10185982		Timer Assembly
21	W10186122		Harness, Wiring

