


Whirlpool WGD4800XQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

29" GAS DRYER

For Model: WGD4800XQ1
(White)

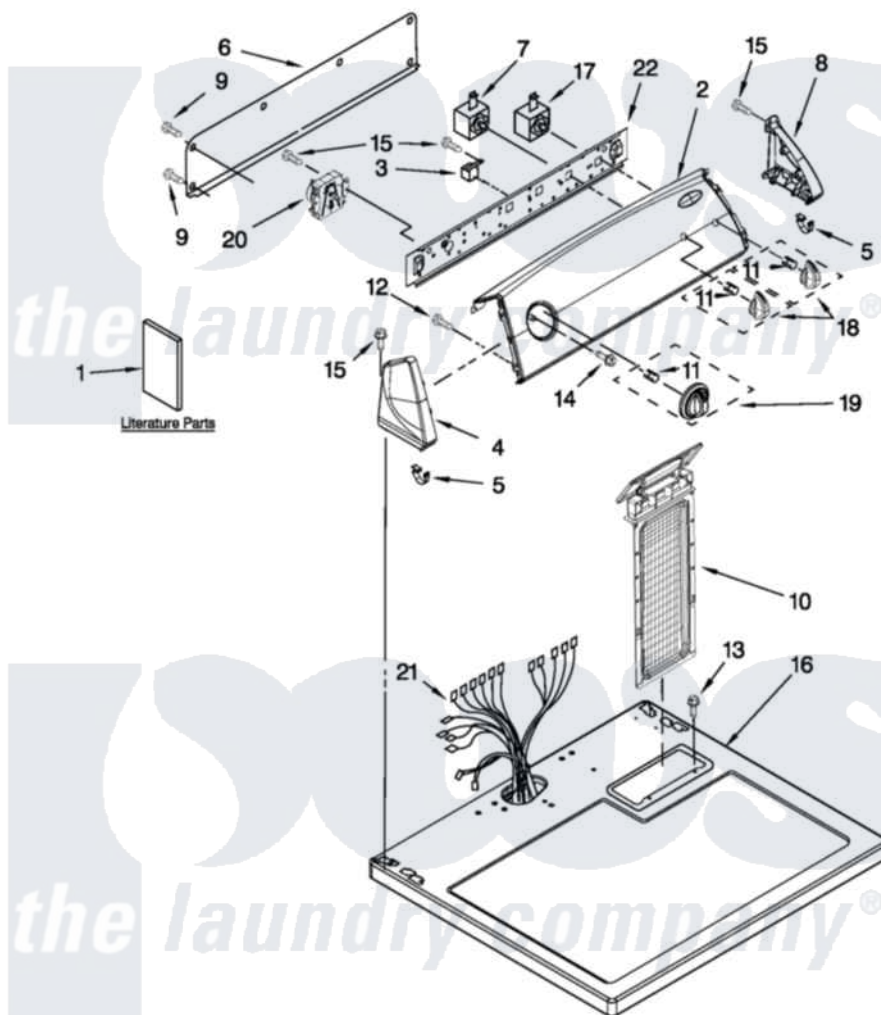

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

12-11 Litho in U.S.A. (BMN)(bay)

1

Part No. W10460962 Rev. A

[Whirlpool Residential Whirlpool WGD4800XQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10115228		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10185986		Not Available	WIRING DIAGRAM
2	W10295262			Control Panel And Bracket Assembly
3	694419			Mini-Buzzer
4	8566035	8565957		Cap, End
5	8312709			Clip-Console
6	W10103406			Panel, Rear Console
7	3399639			Switch, Rotary Temperature
8	8566032	8565954		Cap, End
9	693995			Screw, Hex Head
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	693995			Screw, Hex Head
13	688082	487210		Screw, For Mtg. Service

13	000903	407440	Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	8559800	8563663	Top
17	W10117655		Switch, Push-To-Start
18	W10034380		Knob, Control
19	W10034750		Timer Knob Assembly
20	W10185981		Timer Assembly
21	W10186122		Harness, Wiring
22	8566052		Bracket, Console

