


# Whirlpool WGD4890XQ0 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Model: WGD4890XQ0  
(Designer White)

29" GAS DRYER

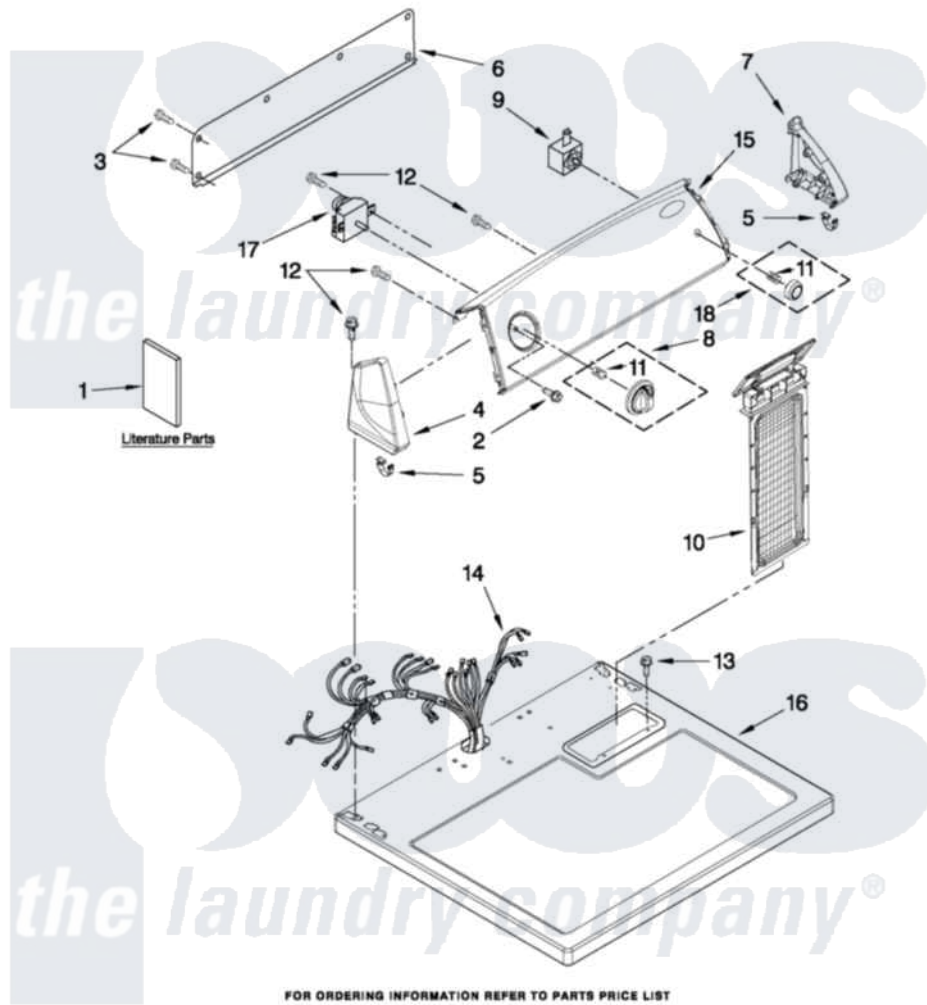

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1-11 Litho in U.S.A. (LT) (eeb)

1

Part No. W10387242 Rev. A

[Whirlpool Residential Whirlpool WGD4890XQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096986		Not Available	GUIDE, USE & CARE
"	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10185977		Not Available	Wiring Diagram
2	8533974	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
3	<a href="#">693995</a>			Screw, Hex Head
4	8066035		Not Available	CAP, END (L.H.)
5	<a href="#">8312709</a>			Clip-Console
6	<a href="#">W10103406</a>			Panel, Rear Console
7	8566032	<a href="#">8565954</a>		Cap, End
8	<a href="#">W10034750</a>			Timer Knob Assembly
9	<a href="#">3977456</a>			Switch, Push-To-Start
10	<a href="#">8557861</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob
12	3348629	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688082	<a href="#">487240</a>		Screw, For Mtg. Service

13	<a href="#">000903</a>	<a href="#">407440</a>	Capacitor
14	<a href="#">W10186074</a>		Harness, Wiring
15	<a href="#">W10115487</a>		Panel, Console And Control Bracket Assembly
16	8559800	<a href="#">8563663</a>	Top
17	<a href="#">W10185975</a>		Timer Assembly 60 Hz
18	<a href="#">W10034770</a>		Knob, Push-To-Start

