


Whirlpool WGD4890XQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: WGD4890XQ1
(Designer White)

29" GAS DRYER

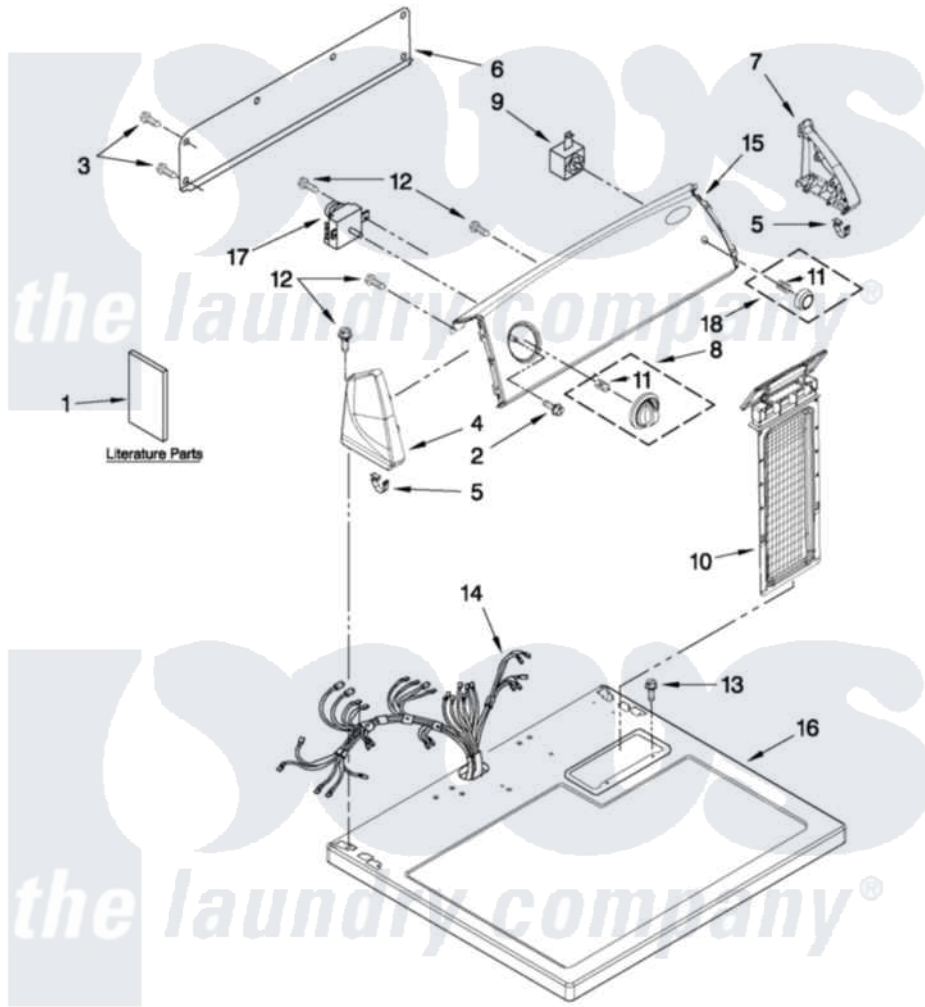

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

12-11 Litho in U.S.A. (BMN) (psw)

1

Part No. W10468092 Rev. A

[Whirlpool Residential Whirlpool WGD4890XQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096986		Not Available	GUIDE, USE & CARE
"	W10115228		Not Available	INSTRUCTIONS, INSTALLATION
"	W10185977		Not Available	Wiring Diagram
2	8533974	4331106		Screw, No.10-32 X 7/16
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	8312709			Clip-Console
6	W10103406			Panel, Rear Console
7	8566032	8565954		Cap, End
8	W10034750			Timer Knob Assembly
9	3977456			Switch, Push-To-Start
10	8557861			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688082	487210		Screw, For Mtg. Service

13	000903	407440	Capacitor
14	W10186074		Harness, Wiring
15	W10115487		Panel, Console And Control Bracket Assembly
16	8559800	8563663	Top
17	W10185975		Timer Assembly 60 Hz
18	W10034770		Knob, Push-To-Start

