


Whirlpool WGD5200VQ0 01 - TOP AND CONSOLE PARTS

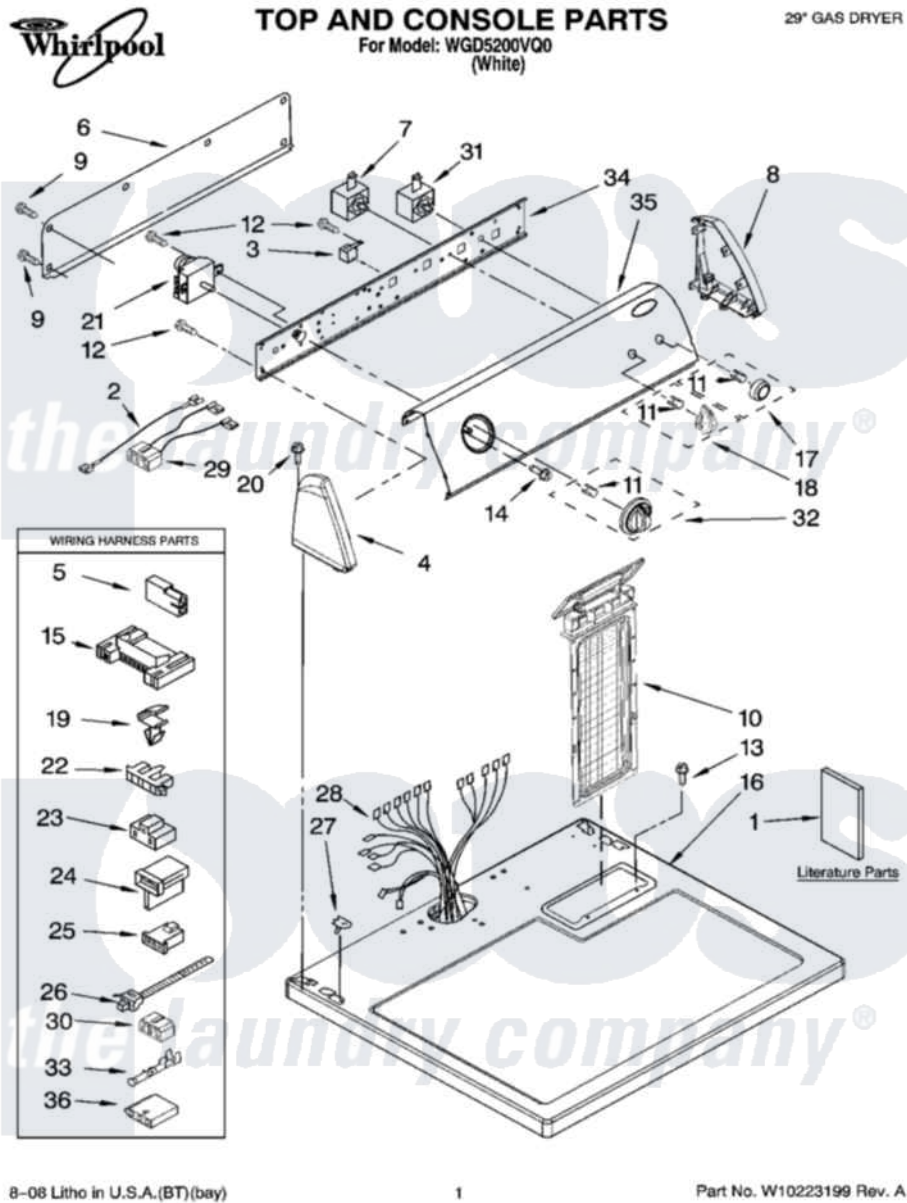

8-08 Litho in U.S.A.(BT)(bay)

1

Part No. W10223199 Rev. A

Whirlpool Residential Whirlpool WGD5200VQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|------------------------|---------------|--|
| 1 | W10150630 | | Not Available | LITERATURE PARTS INSTRUCTIONS, INSTALLATION |
| " | W10150610 | | Not Available | Use & Care Guide |
| " | 8576817 | | Not Available | Wiring Diagram |
| " | W10042960 | | Not Available | Sheet, Cycle Feature |
| " | BLANK | | Not Available | Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS |
| 2 | 3401684 | | | Jumper, Wire |
| 3 | 694419 | | | Mini-Buzzer |
| 4 | 8271365 | 279962 | | Endcap |
| 5 | 717252 | | | Receptacle, Terminal |
| 6 | 8274261 | | | Do-It-Yourself Repair Manuals |
| 7 | 3399640 | | | Switch, Rotary |
| 8 | 8271359 | 279962 | | Endcap |
| 9 | 693995 | | | Screw, Hex Head |
| 10 | 8557857 | | | Screen, Lint |

| | | | |
|----|---------------------------|-------------------------|---|
| 11 | 8536939 | | Clip, Knob |
| 12 | 8533971 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 13 | 688983 | 487240 | Screw, For Mtg. Service Capacitor |
| 14 | 8533951 | 3400859 | Screw, Grounding |
| 15 | 3395683 | | Receptacle, Multi-Terminal |
| 16 | 8557930 | 8563985 | Top |
| 17 | 8566073 | | Knob, Push-To-Start |
| 18 | 8565944 | | Knob, Control |
| 19 | 3394427 | | Clip-Harness |
| 20 | 388326 | | Screw, 8-18 X 1.25 |
| 21 | 8299765 | | Timer Assembly |
| 22 | 3397269 | | Connector, Timer |
| 23 | 3401144 | | Connector |
| 24 | 3403499 | | Connector, 2-Postion |
| 25 | 3403498 | | Connector, 3-Position |
| 26 | 3391249 | | Cable Tie, Push Mount |
| 27 | 357213 | | Nut, Push-In |
| 28 | 8299879 | | Harness, Wiring |
| 29 | 3976562 | | Jumper, Wire |
| 30 | 3347243 | | Block, Disconnect |
| 31 | 3398095 | | Switch, Push-To-Start |
| 32 | 8566061 | | Timer Knob Assembly |
| 33 | 94614 | | Terminal |
| 34 | 8544895 | | Bracket, Control |
| 35 | W10167872 | | Panel, Control |
| 36 | 3936144 | | Do-It-Yourself Repair Manuals |

the laundry company[®]

the laundry company[®]