


Whirlpool WGD5300SQ0 01 - TOP AND CONSOLE PARTS

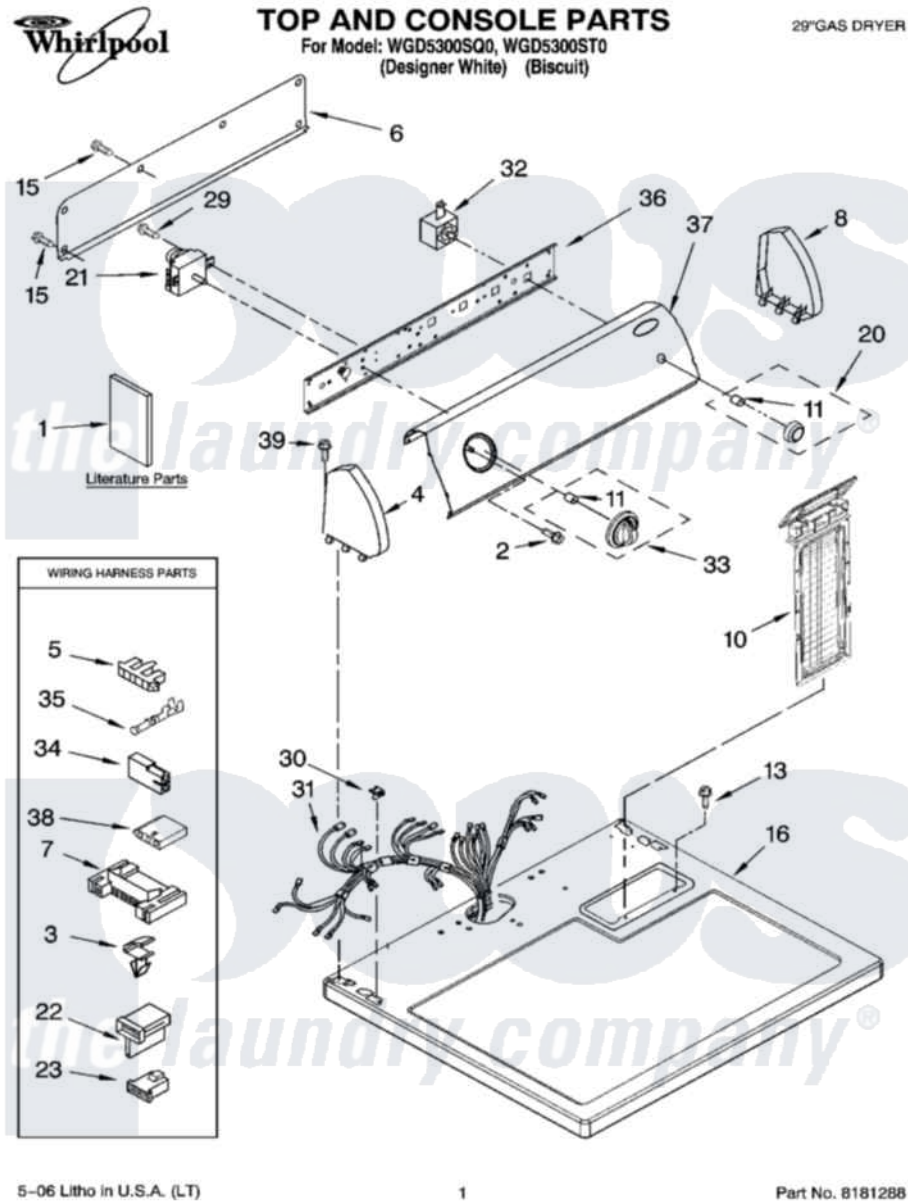

5-06 Litho in U.S.A. (LT)

1

Part No. 8181288

Whirlpool [Residential Whirlpool WGD5300SQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	W10042960		Not Available	Sheet, Cycle Feature
"	8578183		Not Available	Use And Care Guide
"	8528187			Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap

"	8271362	279965	Endcap
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
"	8557931	8563986	Top
20	8566065		Knob, Push-To-Start
"	8566068		Knob, Push-To-Start
21	3976584		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299876		Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
34	717252		Receptacle, Terminal
35	94614		Terminal
36	8544895		Bracket, Control
37	8578844		Panel, Control
"	8579482		Panel, Control
38	3936144		Do-It-Yourself Repair Manuals
39	388326		Screw, 8-18 X 1.25

the laundry company[®]

the laundry company[®]