


Whirlpool WGD5300VW0 01 - TOP AND CONSOLE PARTS

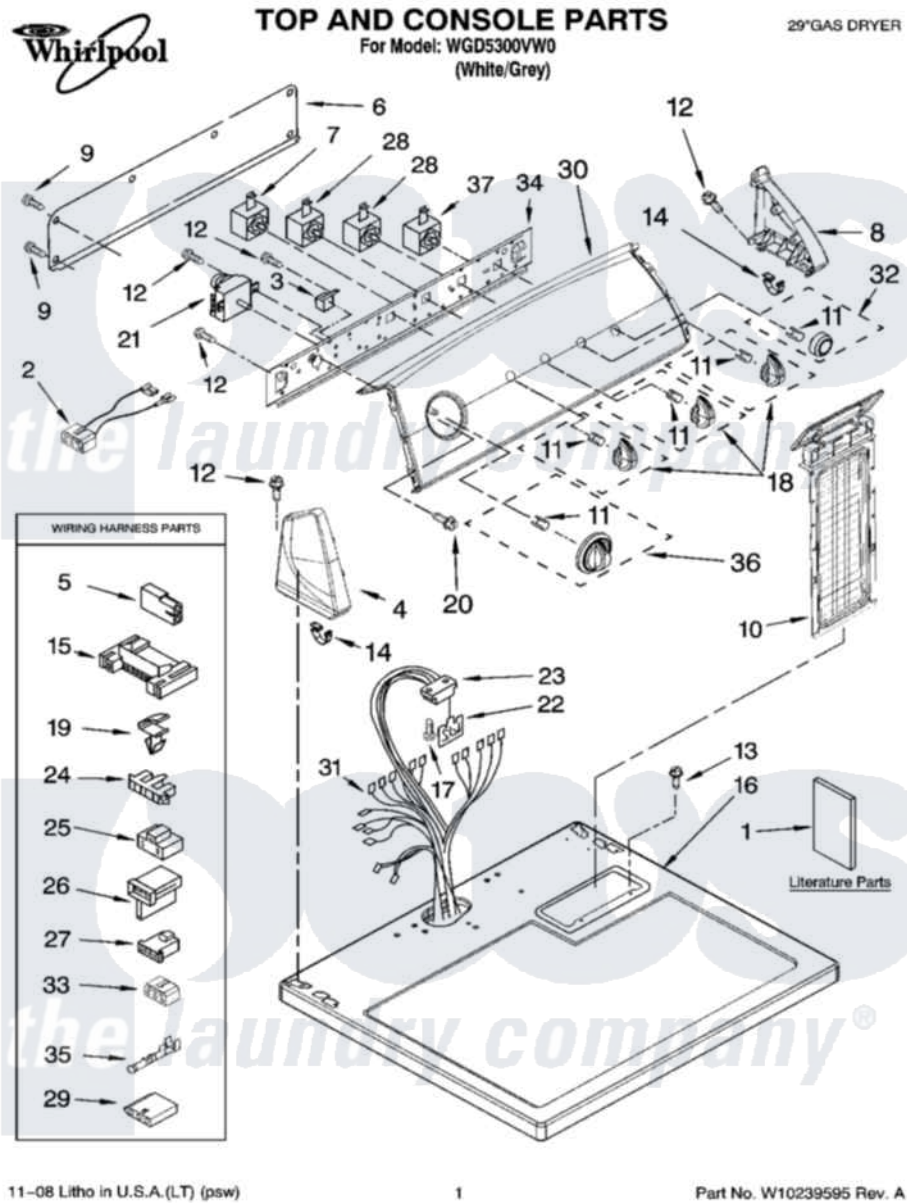

11-08 Litho in U.S.A.(LT) (psw)

1

Part No. W10239595 Rev. A

Whirlpool Residential Whirlpool WGD5300VW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10042950		Not Available	Sheet, Cycle Feature
"	W10150610		Not Available	Use & Care Guide
"	8578889		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	W10113080			Wire, Jumper
3	694419			Mini-Buzzer
4	8566035	8565957		Cap, End
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3405155			Switch, Temperature
8	8566032	8565954		Cap, End

9	693995		Screw, Hex Head
10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8312709		Clip-Console
15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
17	359625	487240	Screw, For Mtg. Service Capacitor
18	W10034380		Knob, Control
19	3394427		Clip-Harness
20	8533951	3400859	Screw, Grounding
21	8566184		Timer Assembly
22	8558178		Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Position
27	3403498		Connector, 3-Position
28	3405156		Switch, Rotary
29	3936144		Do-It-Yourself Repair Manuals
30	W10206010		Panel, Control
31	8576542	W10071310	Harns-Wire
32	W10034790		Knob, Push-To-Start
33	3347243		Block, Disconnect
34	8566052		Bracket, Console
35	94614		Terminal
36	W10034750		Timer Knob Assembly
37	3398095		Switch, Push-To-Start

