


# Whirlpool WGD5300VW1 01 - TOP AND CONSOLE PARTS

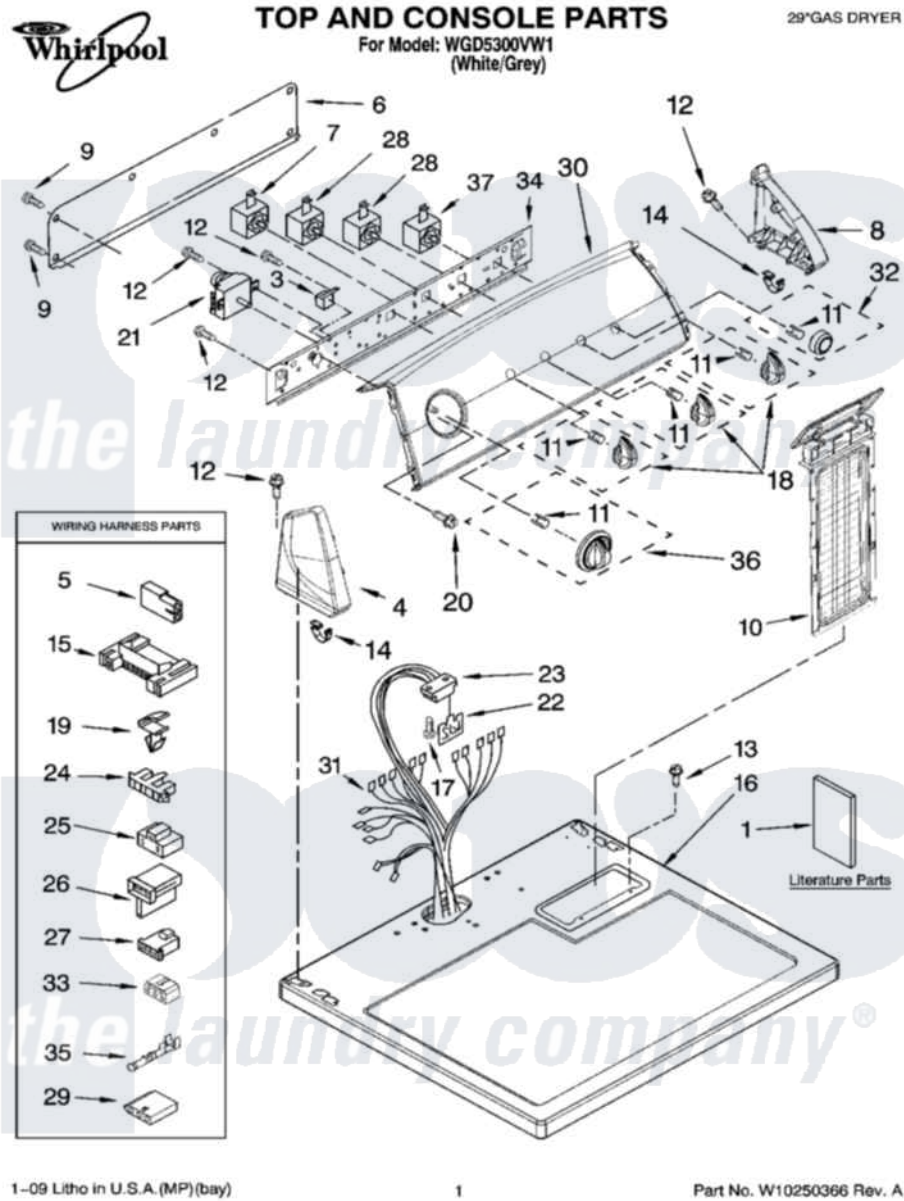

1-09 Litho in U.S.A. (MP)(bay)

1

Part No. W10250366 Rev. A

Whirlpool Residential Whirlpool WGD5300VW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10042950		Not Available	Sheet, Cycle Feature
"	W10150610		Not Available	Use & Care Guide
"	W10185993		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
3	<a href="#">694419</a>			Mini-Buzzer
4	8566035	<a href="#">8565957</a>		Cap, End
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3405155</a>			Switch, Temperature
8	8566032	<a href="#">8565954</a>		Cap, End
9	<a href="#">693995</a>			Screw, Hex Head
10	<a href="#">8557857</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob

12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">8312709</a>		Clip-Console
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8559800	<a href="#">8563663</a>	Top
17	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
18	<a href="#">W10034380</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	8533951	<a href="#">3400859</a>	Screw, Grounding
21	W10185992	Not Available	Timer Assembly (60 Hz.)
22	<a href="#">8558178</a>		Control, Electronic
23	<a href="#">3391885</a>		Connector, Edge
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
28	<a href="#">3405156</a>		Switch, Rotary
29	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
30	<a href="#">W10206010</a>		Panel, Control
31	<a href="#">W10186104</a>		Harness, Wiring
32	<a href="#">W10034790</a>		Knob, Push-To-Start
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">8566052</a>		Bracket, Console
35	<a href="#">94614</a>		Terminal
36	<a href="#">W10034750</a>		Timer Knob Assembly
37	<a href="#">3398095</a>		Switch, Push-To-Start

*the laundry company*<sup>®</sup>

**WWS**  
*the laundry company*<sup>®</sup>