


Whirlpool WGD5300VW1 04 - 8318272 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED)

8318272 BURNER ASSEMBLY

For Model: WGD5300VW1
(White/Grey)

USE WITH TYPE 1 - NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

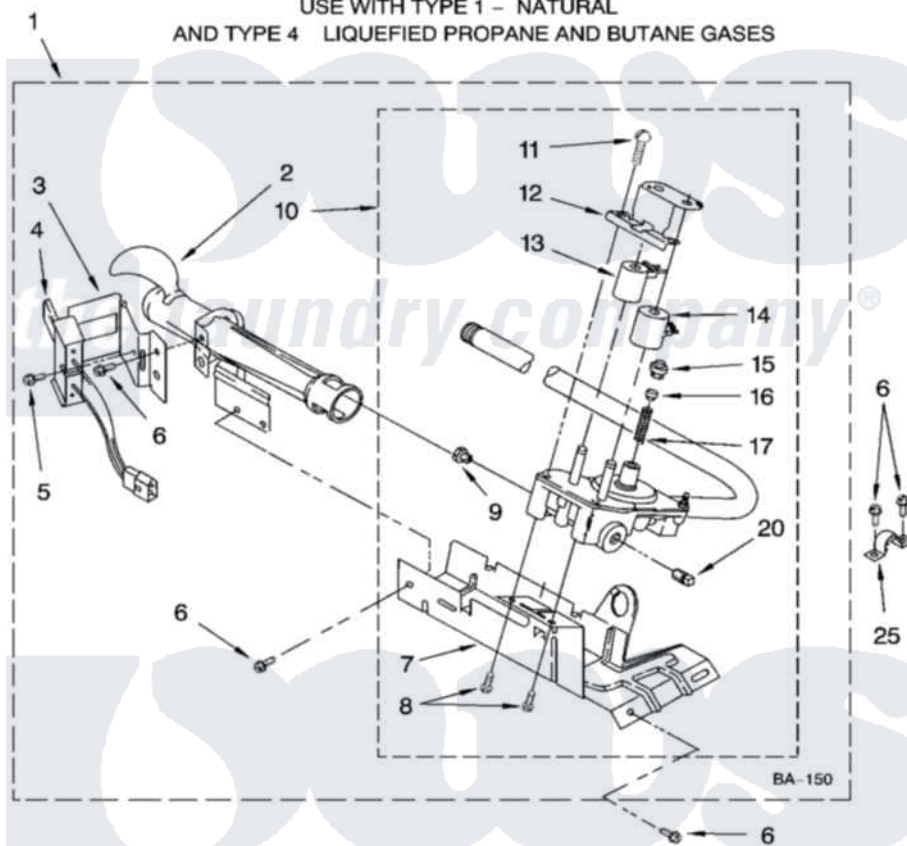

W10250366

7

Whirlpool [Residential Whirlpool WGD5300VW1 Dryer Parts](#) Parts Diagram 04 - 8318272 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318272	W10465748		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	693986			Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	8318277	W10337269		Valve-Gas
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt

13	694540		Coil, 60 Hz
14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
20	239822	W10295523	Plug, Pipe
25	341029		Clamp, Pipe Door Spring
	BLANK	Not Available	Following Parts Not Illustrated
"	694572	49572A	Conversion Kit To Type L.p.g.f
"	BLANK	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

