


Whirlpool WGD5500XL1 01 - TOP AND CONSOLE PARTS

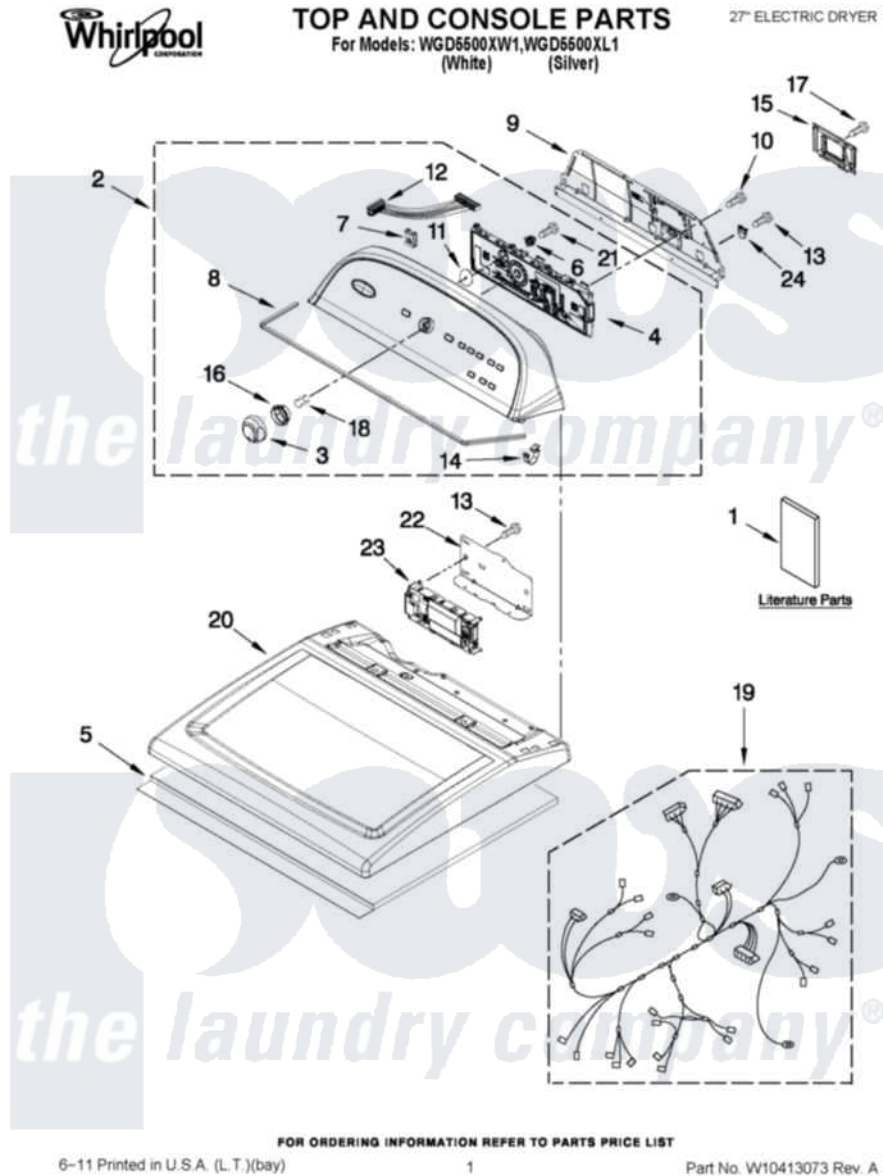

Whirlpool Residential Whirlpool WGD5500XL1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10097012		Not Available	GUIDE, USE & CARE
"	W10097033		Not Available	TECH SHEET
2	W10269607			Console Assembly
"	W10269608			Console Assembly
3	W10251392			Knob Assembly
4	W10269623			User Interface Assembly
5	W10123956			Dampening Panel
6	W10274524			Tensioner, Facia
7	W10298336			8-18 Nch, U-Type NUT
8	W10280079			Seal, Console
9	W10096969			Panel, Rear Console
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	W10323092			Seal, User Interface
12	W10285495			Cable, User Interface

13	3390647	488729	Screw
14	8312709		Clip-Console
15	W10338363		Cover, Terminal Block
16	W10325119		Spacer, Knob
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10253982		Harness, Wiring
20	W10260246		Top
"	W10268729		Top
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10317636		Control, Electronic
24	W10279552		Plug-Upper Rear Panel

the laundry company[®]

lows
the laundry company[®]

lows
the laundry company[®]