


Whirlpool WGD5500XW0 01 - TOP AND CONSOLE PARTS

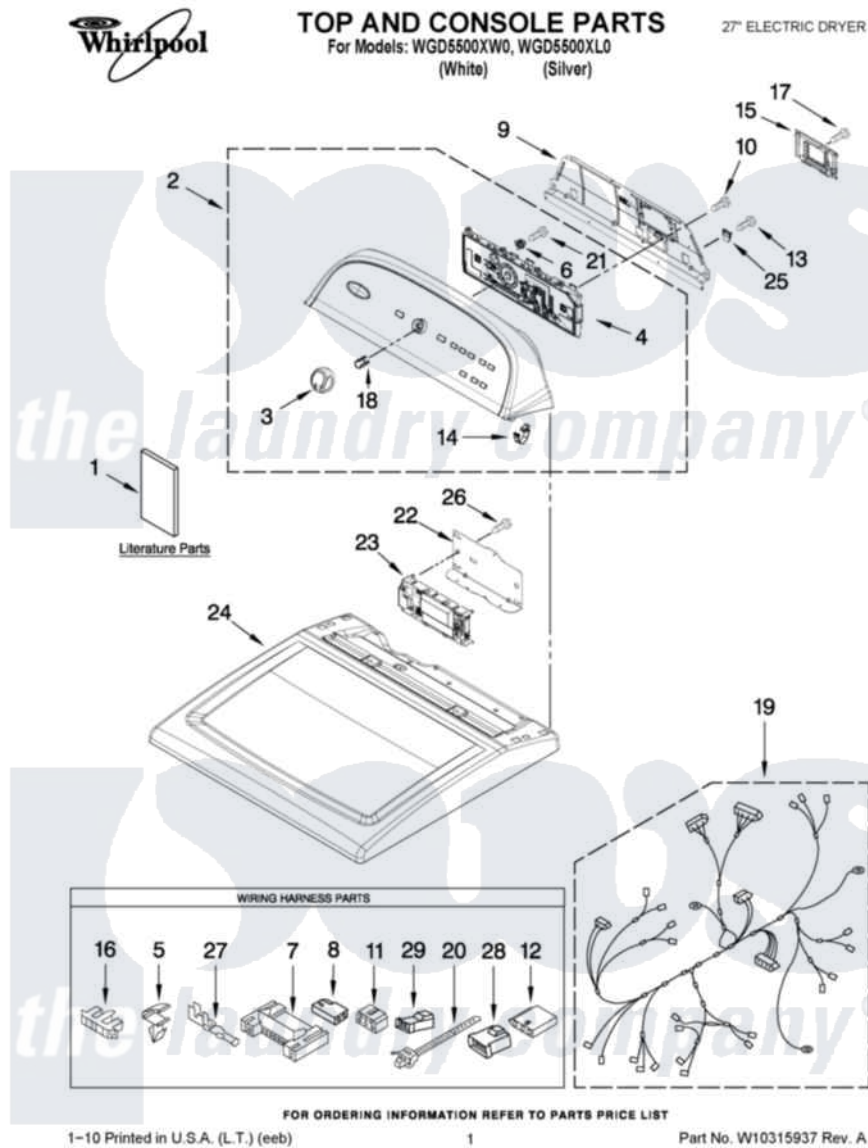

Whirlpool Residential Whirlpool WGD5500XW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10097012		Not Available	GUIDE, USE & CARE
"	W10096965		Not Available	TECH SHEET
2	W10269607			Console Assembly
"	W10269608			Console Assembly
3	W10251392			Knob Assembly
4	W10269623			User Interface Assembly
5	3394427			Clip-Harness
6	W10274524			Tensioner, Facia
7	3395683			Receptacle, Multi-Terminal
8	717252			Receptacle, Terminal
9	W10096969			Panel, Rear Console
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	3347243			Block, Disconnect
12	3936144			Do-It-Yourself Repair Manuals

13	3390647	488729	Screw
14	8312709		Clip-Console
15	W10297565		Cover, Terminal Block
16	3397269		Connector, Timer
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10253982		Harness, Wiring
20	3391018		Tie Cable
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10331077	W10317636	Control, Electronic
24	W10260246		Top
"	W10268729		Top
25	W10279552		Plug-Upper Rear Panel
26	337686	Not Available	SCREW, 8-18 X .500
27	94614		Terminal
28	3403498		Connector, 3-Position
29	3403499		Connector, 2-Postion

