


Whirlpool WGD5500XW0 02 - CABINET PARTS

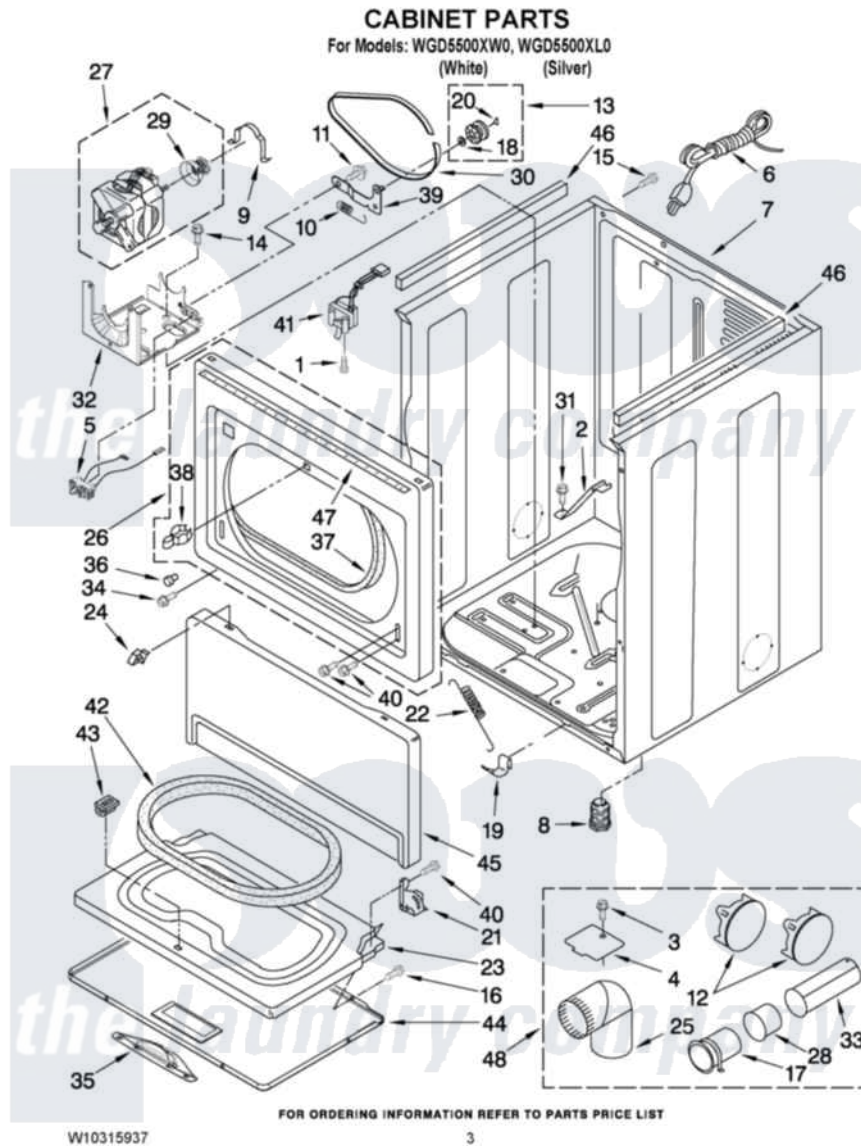

Whirlpool [Residential Whirlpool WGD5500XW0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697773	3395530		Screw
2	8529757			Bracket, Burner
3	488729			Screw
4	3394331			Plate Cover
5	W10246525	W10314253		Switch, Assembly Broken Belt
6	344020	3401402		Cord, Power
7	8310656			Cabinet
"	W10292891			Cabinet
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	49252			Plug, Multivent
"	W10151499	W10404617		Plug, Multivent
13	3388672	279640		Pulley-ldr

14	343641	681414	Screw, 10AB X 1/2
15	8533974	4331106	Screw, No.10-32 X 7/16
16	694091		Trim, Side Right Hand
17	8563747		Exhaust Pipe Medium Pipe
18	W10121334		Washer, Thrust
19	W10291934		Clip
20	690997		Washer, Thrust
21	3387560		Hinge, Door
"	3387559		Hinge, Door
22	3387565		Spring, Door
23	8066045		Door Inner
"	W10304139	8066045	Door Inner
24	3388229		Retainer, Toe Panel
25	49026		4" - 90° Elbow
26	697227	279659	Panel
"	W10292893		Upper Front Panel
27	W10250900	279787	Motor-Drve
28	8563750		Exhaust Pipe
29	8578220		Pulley, Motor
30	3387610	661570	Belt
31	693995		Screw, Hex Head
32	W10242878		Bracket, Motor Mounting
33	8563749		Exhaust Pipe
34	8281212	W10080800	Screw, 8-18 X 3/8
35	W10284093		Handle, Door
"	W10284094		Handle, Door
36	693152		Bumper, Console
37	3387242		Seal, Front Panel
38	696144	279570	Latch
39	3388674	W10118756	Idler Bracket
40	3357011	308685	Side Trim)
41	3406107		Door Switch Assembly
42	3390736	3390732	Seal-Door
43	690081	279570	Latch
44	W10279553		Door, Front
"	W10279555		Door, Front
45	697215	3406797	Toe Panel
"	W10096974		Toe Panel
46	W10312811		Seal, Spill Guard
47	8318396		Foam-Seal
48	279818	W10470674	Dryer Exhaust Kit
"	W10186596	W10470674	Dryer Exhaust Kit

the laundry company[®]