


Whirlpool WGD5560SQ0 01 - TOP AND CONSOLE PARTS

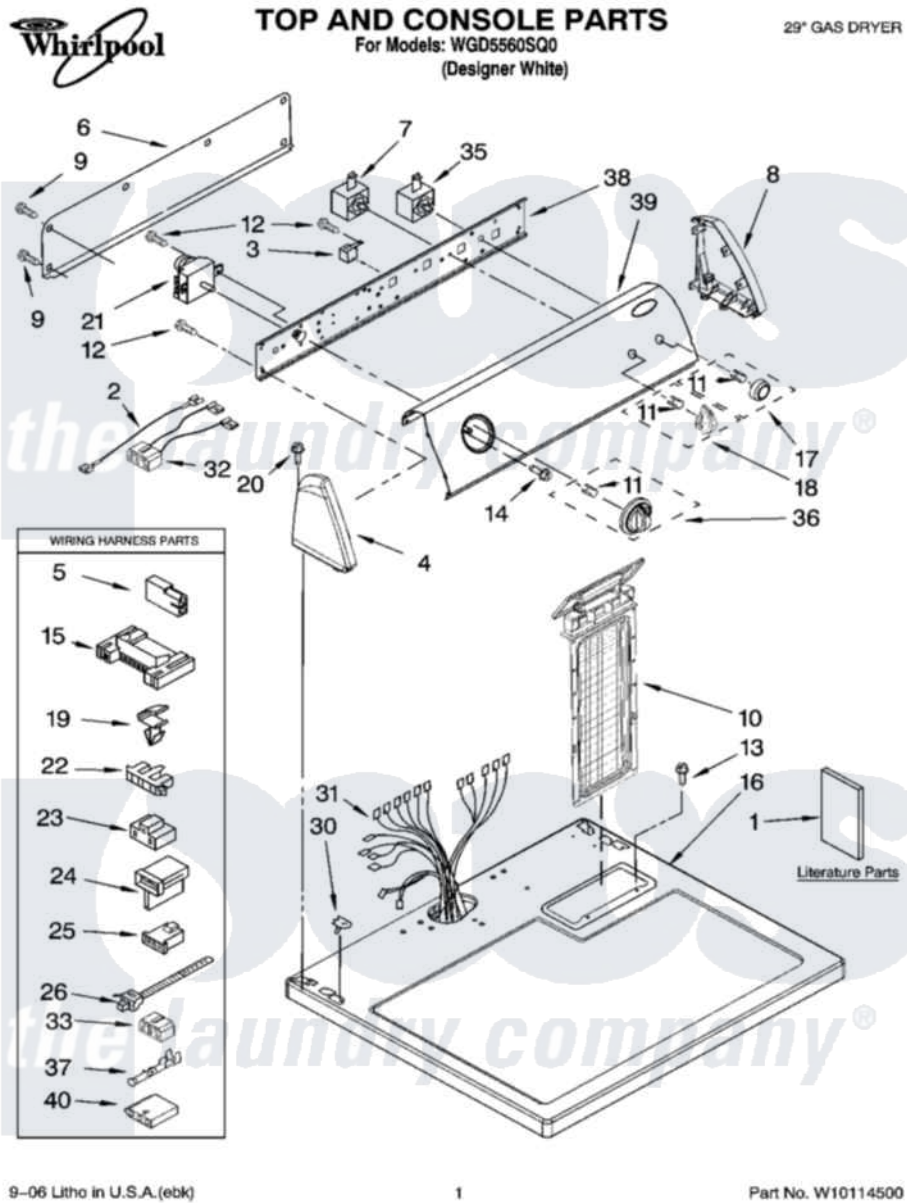

9-06 Litho in U.S.A.(ebk)

1

Part No. W10114500

Whirlpool Residential Whirlpool WGD5560SQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	8578183		Not Available	Use And Care Guide
"	8528190		Not Available	Wiring Diagram
"	W10042960		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3399640			Switch, Rotary
8	8271359	279962		Endcap
9	693995			Screw, Hex Head

10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
17	8566073		Knob, Push-To-Start
18	8565944		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8578909		Timer Assembly
22	3397269		Connector, Timer
23	3401144		Connector
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
26	3391249		Cable Tie, Push Mount
30	357213		Nut, Push-In
31	8299879		Harness, Wiring
32	3976562		Jumper, Wire
33	3347243		Block, Disconnect
35	3398095		Switch, Push-To-Start
36	8566061		Timer Knob Assembly
37	94614		Terminal
38	8544895		Bracket, Control
39	W10029050		Panel, Control
40	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]