


# Whirlpool WGD5600VQ0 01 - TOP AND CONSOLE PARTS

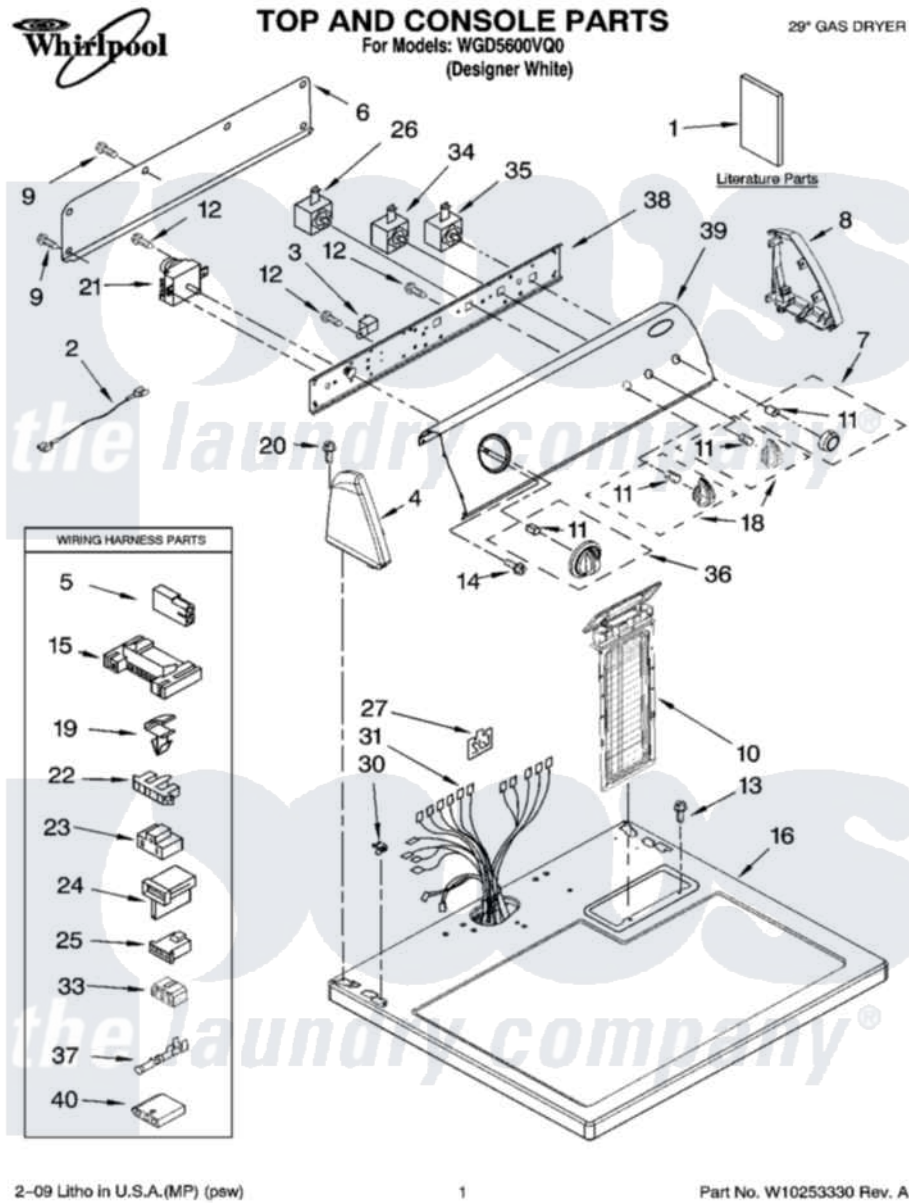

2-09 Litho in U.S.A.(MP) (psw)

1

Part No. W10253330 Rev. A

Whirlpool Residential Whirlpool WGD5600VQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150630		Not Available	LITERATURE PARTS INSTRUCTIONS, INSTALLATION
"	W10150610		Not Available	Use & Care Guide
"	8578889		Not Available	Wiring Diagram
"	W10042950		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
2	<a href="#">W10113080</a>			Wire, Jumper
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">8566073</a>			Knob, Push-To-Start
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">693995</a>			Screw, Hex Head
10	<a href="#">8557857</a>			Screen, Lint

11	<a href="#">8536939</a>		Clip, Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>	Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
18	<a href="#">8565944</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">388326</a>		Screw, 8-18 X 1.25
21	<a href="#">8566184</a>		Timer Assembly
22	<a href="#">3397269</a>		Connector, Timer
23	<a href="#">3401144</a>		Connector
24	<a href="#">3403499</a>		Connector, 2-Postion
25	<a href="#">3403498</a>		Connector, 3-Position
26	<a href="#">3405156</a>		Switch, Rotary
27	<a href="#">8558178</a>		Control, Electronic
30	<a href="#">357213</a>		Nut, Push-In
31	8576542	<a href="#">W10071310</a>	Harns-Wire
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3405155</a>		Switch, Temperature
35	<a href="#">3398095</a>		Switch, Push-To-Start
36	<a href="#">8566061</a>		Timer Knob Assembly
37	<a href="#">94614</a>		Terminal
38	<a href="#">8544895</a>		Bracket, Control
39	<a href="#">W10206013</a>		Panel, Control
40	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>